

Safety Light Curtain F3SG-□R Series

User's Manual



Original instructions

Introduction

Thank you for purchasing the F3SG-□R Series Safety Light Curtain (hereinafter referred to as the "F3SG-R"). This is the instruction Manual describing the use of F3SG-R. Always heed the following points when using the F3SG-R:

- Be sure to have F3SG-R be handled by a "Responsible Person" who is well aware of and familiar with the machine to be installed.
- The term "Responsible Person" used in this Instruction Manual means the person qualified, authorized and responsible to secure "safety" in each process of the design, installation, operation, maintenance services and disposition of the machine.
- It is assumed that F3SG-R will be used properly according to the installation environment, performance and function of the machine. Responsible Person should conduct risk assessment on the machine and determine the suitability of this product before installation.
- Read this Manual thoroughly to understand and make good use of the descriptions before installing and operating the product.
- Keep this Manual at the place where the operator can refer to whenever necessary.

Legislation and Standards

- The F3SG-R does not receive type approval provided by Article 44-2 of the Industrial Safety and Health Act of Japan. When using the F3SG-R in Japan as a "safety system for pressing or shearing machines" prescribed in Article 42 of that law, the machine control system must receive type approval.
- 2. The F3SG-R is electro-sensitive protective equipment (ESPE) in accordance with European Union (EU) Machinery Directive Index Annex V, Item 2.
- 3. EC/EU Declaration of Conformity

OMRON declares that the F3SG-R is in conformity with the requirements of the following EC/EU Directives:

Machinery Directive 2006/42/EC

EMC Directive 2004/108/EC, 2014/30/EU

- 4. Conforming Standards
 - (1) European standards

EN61496-1 (Type 4 and Type 2 ESPE), EN 61496-2 (Type 4 and Type 2 AOPD), EN61508-1 through -4 (SIL 3 for Type 4 and SIL 1 for Type 2),

EN ISO 13849-1:2008 (PL e, Category 4 for Type 4 and PL c, Category 2 for Type 2)

(2) International standards

IEC61496-1 (Type 4 and Type 2 ESPE), IEC61496-2 (Type 4 and Type 2 AOPD), IEC61508-1 through - 4 (SIL 3 for Type 4 and SIL 1 for Type 2),

ISO 13849-1:2006 (PL e, Category 4 for Type 4 and PL c, Category 2 for Type 2)

(3) JIS standards

JIS B 9704-1 (Type 4 and Type 2 ESPE), JIS B 9704-2 (Type 4 and Type 2 AOPD)

(4) North American standards

UL61496-1(Type 4 and Type 2 ESPE), UL61496-2(Type 4 and Type 2 AOPD), UL508, UL1998, CAN/CSA C22.2 No.14, CAN/CSA C22.2 No.0.8

(5) Chinese standards

GB4584(Specification of active opto-electronic protective devices for presses)

- 5. Third-Party Certifications
 - (1) TÜV SÜD
 - EC Type-Examination certificate:

EU Machinery Directive, Type 4 and Type 2 ESPE (EN61496-1), Type 4 and Type 2 AOPD (EN 61496-2)

· Certificate:

Type 4 and Type 2 ESPE (EN61496-1), Type 4 and Type 2 AOPD (EN61496-2), EN 61508-1 through - 4 (SIL 3 for Type 4 and SIL 1 for Type 2), EN ISO 13849-1:2008 (PL e, Category 4 for Type 4, and PL c, Category 2 for Type 2)

- (2) UL
 - UL Listing:

Type 4 and Type 2 ESPE (UL61496-1), Type 4 and Type 2 AOPD (UL61496-2), UL508, UL1998, CAN/CSA C22.2 No.14, CAN/CSA C22.2 No.0.8

- (3) China National Casting and Forging Machines Quality Supervision and Inspection Center
 - · Certificate:

GB4584 (Specification of active opto-electronic protective devices for presses) (Type 4)

6. Other Standards

The F3SG-R is designed according to the standards listed below. To make sure that the final system complies with the following standards and regulations, you are asked to design and use it in accordance with all other related standards, laws, and regulations. If you have any questions, consult with specialized organizations such as the body responsible for prescribing and/or enforcing machinery safety regulations in the location where the equipment is to be used.

- European Standards: EN415-4, EN691-1, EN692, EN693, IEC/TS 62046
- U.S. Occupational Safety and Health Standards: OSHA 29 CFR 1910.212
- U.S. Occupational Safety and Health Standards: OSHA 29 CFR 1910.217
- American National Standards: ANSI B11.1 to B11.19
- American National Standards: ANSI/RIA R15.06
- Canadian Standards Association CSA Z142, Z432, Z434
- · SEMI Standards SEMI S2
- Japan Ministry of Health, Labour and Welfare "Guidelines for Comprehensive Safety Standards of Machinery", Standard Bureau's Notification No. 0731001 dated July 31, 2007.rms and Conditions Agreement
- Chinese National Standards: GB17120, GB27607

Terms and Conditions Agreement

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Safety Precautions

Indications and Meanings for Safe Use

The precautions listed in this document indicated by alert symbols and statements must be followed for the safe use of the F3SG-R. Failure to follow all precautions and alerts may result in an unsafe use or operation. Thoroughly read this manual and understand the installation procedures, operation check procedures, and maintenance procedures before using F3SG-R.

The following word and symbols are used in this document.

Meaning of Signal Word



Indicates an imminently hazardous situation which, if not avoided, is likely to result in serious injury or may result in death. Additionally there may be severe property damage.

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

Meanings of Alert Symbols



Indicates prohibited actions.



Indicates mandatory actions.



Indicates the risk of electric shock.

Alert Statements in this Manual

M DANGER

Make sure to test the operation of the F3SG-R after setting with DIP Switch to verify that the F3SG-R operates as intended. Make sure to stop the machine until the test is complete. Unintended settings may cause a person to go undetected, resulting in serious injury or death.



For users

MARNING

The F3SG-R must be installed, configured, and incorporated into a machine control system by a sufficiently trained and qualified person. An unqualified person may not be able to perform these operations properly, which may cause a person to go undetected, resulting in serious injury.



For machines

⚠ WARNING

Do not use this sensor for machines that cannot be stopped by electrical control. For example, do not use it for a pressing machine that uses full-rotation clutch. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



To use F3SG-R in PSDI mode (initiation of cycle operations by a presence sensing device), you must configure an appropriate circuit between F3SG-R and the machine. For details about PSDI, refer to OSHA1910.217, IEC61496-1, and other relevant standards and regulations.



For installation

⚠ WARNING

Make sure Responsible Person tests the operation of the F3SG-R after installation to verify that the F3SG-R operates as intended. Make sure to stop the machine until the test is complete. Unintended installation, wiring or function settings may cause a person to go undetected, resulting in serious injury.



Make sure to install the F3SG-R at the safe distance from the hazardous part of the equipment. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous zones. If a person is able to step into the hazardous zone of a machine and remain behind the F3SG-R's detection zone, configure the system with Restart Interlock function due to unexpected startup. Failure to do so may result in serious injury.



Install the reset switch in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone.



Install the pre-reset switch always in the hazardous zone and where it cannot be activated from outside the hazardous zone.




The F3SG-R cannot protect a person from a projectile exiting the hazardous zone. Install protective cover(s) or fence(s).



When the fixed blanking or floating blanking function is used, observe the following. Failure to do so may cause a person to go undetected, resulting in serious injury.



- Responsible Person must verify that a test rod is detected for all detection zones except the blanked area.
- When the fixed blanking function is used, install a protective structure to cover the whole blanked area in order to prevent personnel approach to hazardous part of the machine through the blanked area.

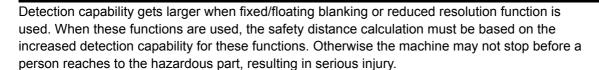



A warning zone must not be used for safety applications. Always install your system so that a detection zone should be passed before reaching a source of danger.



When a warning zone is configured, you must attach labels that indicate a border between normal detection zone and warning zone. Otherwise the machine may not stop before a person reaches to the hazardous part, resulting in serious injury.



A warning zone must be configured based on a safety distance.



The muting and override functions disable the safety functions of the device. You must ensure safety using other method when these functions are operating.



Install muting sensors so that they can distinguish between the object that is being allowed to pass through the detection zone and a person. If the muting function is activated by the detection of a person, the machine may not stop operating, resulting in serious injury.



Muting lamps that indicate the state of the muting and override functions must be installed where they are clearly visible to workers from all the operating positions.



Use 2 independent input devices for muting inputs. Failure to do so may result in a muting status due to a single muting sensor's failure.



You must install F3SG-R, muting sensor, and physical barrier, and configure time settings for muting so that an operator should not enter hazardous zone.



The Dynamic Muting function can configure a new muting zone after muting is enabled based on a result measuring a workpiece height for a certain period of time. The function must be completely verified by a trained and qualified person before being used. Take additional safety measures if necessary.



Install the switch that activates the override and that uses hold-to-run device, such as spring return key switch, in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone. Make sure that nobody is in the hazardous zone before activating the override function.



Override time must be properly configured for its application by a sufficiently trained and qualified person.



Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.



Install F3SG-R so that it is not affected by reflective surfaces. Failure to do so may hinder detection, resulting in serious injury. For an installation distance from reflective surfaces, see *4-1-3. Distance from Reflective Surfaces*.



When using more than 1 set of F3SG-R in adjacent areas, the emitter of one F3SG-R may interfere with the receiver of the other, causing the safety functions to stop working properly. Install and configure them so that mutual interference does not occur.



Make sure that foreign material such as water, oil, or dust does not enter the F3SG-R or the connector while the cap or the cover of the DIP Switch is removed.





To change the response time, calculate the safety distance based on the setting. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



Do not use the sensor system with mirrors in a retro-reflective configuration as shown below. Doing so may hinder detection. It is possible to use mirrors to alter the detection zone to a 90-degree angle.



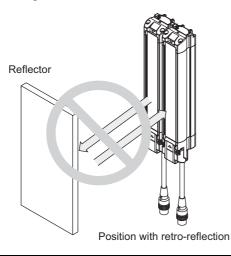

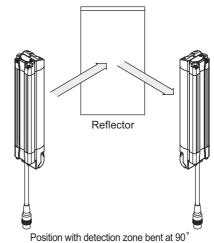

Perform an inspection for all F3SG-R as described in *Chapter 6 Checklists*. When using cascade connections, perform inspections for every connected F3SG-R.



For wiring

MARNING

When using the PNP output, connect the load between the output and 0 V line. When using the NPN output, connect the load between the output and +24 VDC line. Connecting the load between the output and a different power supply line from the above will result in a dangerous condition because the operation mode of safety output is reversed to "Dark-ON".



When using the PNP output, do not ground +24 VDC line. When using the NPN output, do not ground 0 V line. Otherwise, a ground fault may turn the safety output ON, resulting in a failure of stopping the machine.



Configure the system by using the optimal number of safety outputs that satisfy the requirements of the necessary safety category.



Do not connect each line of F3SG-R to a DC power supply of higher than 24 VDC+20%. Also, do not connect it to an AC power supply. Failure to do so may result in electric shock.



Make sure to perform wiring while the power supply is OFF.



Do not use the auxiliary output for safety applications. Failure to do so may result in serious injury when the F3SG-R fails.



For the F3SG-R to comply with IEC 61496-1 and UL 508, the DC power supply unit must satisfy all of the following conditions:



- Must be within the rated power voltage (24 VDC ± 20%)
- Must have tolerance against the total rated current of devices if it is connected to multiple devices
- Must comply with EMC directives (industrial environment)
- Double or reinforced insulation must be applied between the primary and secondary circuits
- Automatic recovery of overcurrent protection characteristics
- Output holding time must be 20ms or longer
- Must satisfy output characteristic requirements for class 2 circuit or limited voltage current circuit defined by UL508. Refer to 4-5-2. Power Supply Unit.
- Must comply with laws and regulations, regarding EMC and electrical equipment safety, of the country or region where the F3SG-R is used (For example, in EU, the power supply must comply with the EMC Directive and the Low Voltage Directive.)

Double or reinforced insulation from hazardous voltage must be applied to all input and output lines. Failure to do so may result in electric shock.



Extension of the cable must be within a specified length. If it isn't, safety function may not work properly, resulting in danger.



Settings

∕ WARNING

Some settings of functions or the Setting Recovery function configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person go to undetected, resulting in serious injury.



After completion of teach-in, check that the configuration have been properly done.



Other

⚠ WARNING

Do not try to disassemble, repair, or modify this product. Doing so may cause the safety functions to stop working properly.



Do not use the F3SG-R in environments where flammable or explosive gases are present. Doing so may result in explosion.



Perform daily and 6-month inspections for the F3SG-R as described in *Chapter 6 Checklists*. Otherwise, the system may fail to work properly, resulting in serious injury.



Do not use the F3SG-R in environments where strong magnetic field may be produced. Doing so may cause the safety functions to stop working properly.



Precautions for Safe Use

Make sure to observe the following precautions that are necessary for ensuring safe use of the product.

Do not install, use, or store the F3SG-R in the following types of environments:

- Areas exposed to intense interference light, such as direct sunlight
- Areas with high humidity where condensation is likely to occur
- Areas where oil mist or corrosive gases are present
- Areas exposed to vibration or shock levels higher than in the specification provisions
- Areas where the product may come into contact with water
- Areas where the pollution degree is harsher than 3, such as outdoor environment
- Areas where the product may get wet with oil that can solve adhesive
- · Loads must satisfy both of the following conditions:
 - Not short-circuited
 - Not used with a current that is higher than the rating
- Do not drop the product.
- Dispose of the product in accordance with the relevant rules and regulations of the country or area where the product is used.
- Make sure that the F3SG-R is securely mounted and its cables and connectors are properly secured based on the torque recommended in this document.
- Bending radii of cables must be equal to or higher than specified minimum values.
- When replacing the cable connectors with other types of connectors, use connectors that provide a protection grade of IP54 or higher.
- Be sure to route the input/output lines for the F3SG-R separate from high-potential power lines or through an exclusive conduit.
- To extend a cable length with a cable other than the dedicated cable, use a cable with the same or superior specifictions.
 - Refer to 4-5-3-4. Extending Cable Length with Commercially Available Cable
- In environments where foreign material such as spatter adheres to the F3SG-R, attach a cover to protect the F3SG-R from the spatter.
- Interface Unit F39-GIF is dedicated to the F3SG-R series. Do not use it for F3SJ-A or F3SJ-E/B series.
- Read and understand this document for DIP Switch setting.
- The rated life of this product is 6 years.

Precautions for Correct Use

Observe the precautions described below to prevent operation failure, malfunctions, or undesirable effects on product performance.

■ Storage conditions and installation environment

- Do not install, use, or store the F3SG-R for a long time at a temperature or humidity out of the specified range.
- This is a class A product. In residential areas it may cause radio interference, in which case the Responsible Person may be required to take adequate measures to reduce interference.

Wiring and installation

- Properly perform the wiring after confirming the signal names of all the terminals.
- Be sure that there is nothing in the detection zone and the stable-state indicator is turned ON after power is turned ON.
- Do not operate the control system until 2 seconds or more after turning ON the power of the F3SG-R.
- When using a commercially available switching regulator power supply, make sure to ground the PE terminal (protective earth terminal).
- Install the emitter and receiver to the same vertical direction.
- Use brackets of specified quantities and locations according to the dimensions.
 If the brackets described above are not used, ratings and performance cannot be met.
- Do not install the F3SG-R close to a device that generates high-frequency noise. Otherwise, take sufficient blocking measures.

Cleaning

• Do not use thinner, benzene, or acetone for cleaning. They affect the product's resin parts and paint on the housing.

■ Object detection

• The F3SG-R cannot detect transparent and/or translucent objects.

Settings

- Do not operate the DIP Switch during normal operation of the F3SG-R. Otherwise, the F3SG-R enters the Lockout state.
- Do not operate the DIP Switch and Push Switch with tools that may damage the product.
- Be sure that the F3SG-R is in the Setting mode when making a change to the setting.

Visual Aids

The following symbols appear in this document to help you locate different types of information.



Indicates important information or advice on a function or operation of the product.



Indicates page numbers or chapter title of related information.

Table of Contents

Legislation and Standards	
Terms and Conditions Agreement	iii
Safety Precautions	V
Precautions for Safe Use	Xi
Precautions for Correct Use	xii
Visual Aids	xiii
Chapter1 Overview and Specifications	1
1-1. What is Included	2
1-2. System Components	3
1-2-1. Basic Components	4
1-2-2. Model Overview	5
1-3. List of Features	6
1-3-1. Model Overview	6
1-3-2. List of Feature	6
1-4. LED Indicators	7
1-4-1. LED Indicator Status	8
1-5. Ratings/Specifications	10
1-6. List of Models	14
1-6-1. List of Models/Response Time/Current Consumption/Weight	14
1-6-2. Calculation of Response Time of Cascaded Segments	17
Chapter2 System Operation and Functions	19
2-1. Combination of Functions	21
2-2. Operating States	22
2-2-1. Machine Run State	22
2-2-2. Machine Stop State	22
2-2-3. Interlock State	22
2-2-4. Lockout State	22
2-2-5. Teach-in Mode	22
2-2-6. Setting State	23
2-3. Optical synchronization	24
2-3-1. Overview	24
2-4. Scan Code Selection	25
2-4-1. Overview	25
2-4-2. Factory Default Setting	25
2-4-3. Setting with DIP Switch	25
2-4-4. Setting with Configuration Tool	25
2-5. PNP/NPN Selection	26

2-5-1. Overview	26
2-5-2. Factory Default Setting	26
2-5-3. Setting with DIP Switch	26
2-5-4. Setting with Configuration Tool	26
2-6. Self-Test	27
2-6-1. Overview	27
2-6-1-1. Self-Test details	27
2-6-1-2. Waveform of safety outputs	28
2-7. External Test	29
2-7-1. Overview	29
2-7-2. Factory Default Setting	30
2-7-3. Setting with DIP Switch	30
2-7-4. Setting with Configuration Tool	30
2-8. Lockout Reset	31
2-8-1. Overview	31
2-9. Interlock	32
2-9-1. Over view	32
2-9-2. Factory Default Setting	35
2-9-3. Setting with DIP Switch	35
2-9-4. Setting with Configuration Tool	36
2-10. External Device Monitoring (EDM)	37
2-10-1.Overview	37
2-10-2.Factory Default Setting	38
2-10-3.Setting with DIP Switch	38
2-10-4.Setting with Configuration Tool	38
2-11. Auxiliary Output	40
2-11-1.Overview	40
2-11-2.Factory Default Setting	41
2-11-3.Setting with DIP Switch	41
2-11-4.Setting with Configuration Tool	42
2-12. Muting	44
2-12-1.Standard Muting Mode	46
2-12-2.Exit-Only Muting Mode	56
2-12-3.Position Detection Muting Mode	62
2-12-4.Dynamic Muting	67
2-12-5.Factory Default Setting	68
2-12-6.Setting with DIP Switch	68
2-12-7.Setting with Configuration Tool	68
2-13. Override	70
2-13-1.Override at Normal Operation	71
2-13-2.Override upon Startup	73
2-13-3.Setting with DIP Switch	74

2-13-4.Setting with Configuration Tool	74
2-14. Fixed Blanking	75
2-14-1.Overview	75
2-14-2.Factory Default Setting	78
2-14-3.Setting with DIP Switch	78
2-14-4.Setting with Configuration Tool	78
2-15. Floating Blanking	79
2-15-1.Overview	79
2-15-2.Factory Default Setting	82
2-15-3.Setting with DIP Switch	82
2-15-4.Setting with Configuration Tool	83
2-16. Reduced Resolution	84
2-16-1.Overview	84
2-16-2.Factory Default Setting	84
2-16-3.Setting with DIP Switch	85
2-16-4.Setting with Configuration Tool	85
2-17. Warning Zone	86
2-17-1.Overview	86
2-17-2.Factory Default Setting	89
2-17-3.Setting with DIP Switch	89
2-17-4.Setting with Configuration Tool	89
2-18. Setting Zone Adjacency Conditions	90
2-19. Operating Range Selection	92
2-19-1.Overview	92
2-19-2.Factory Default Setting	92
2-19-3.Setting with DIP Switch	92
2-19-4.Setting by Wiring	93
2-19-5.Setting with Configuration Tool	93
2-20. Response Time Adjustment	94
2-20-1.Overview	94
2-20-2.Factory Default Setting	94
2-20-3.Setting with DIP Switch	94
2-20-4.Setting with Configuration Tool	94
2-21. Lamp	95
2-21-1.Overview	95
2-21-2.Factory Default Setting	95
2-21-3.Setting with DIP Switch	95
2-21-4.Setting with Configuration Tool	95
2-22. Designated Beam Output	98
2-22-1.Overview	98
2-22-2.Factory Default Setting	98
2-22-3.Setting with DIP Switch	98

2-22-4.Setting with Configuration Tool	99
2-23. Light Level Monitoring	100
2-23-1.Incident Light Level Information	100
2-23-1-1. Overview	100
2-23-1-2. Setting with Configuration Tool	100
2-23-2.Ambient Light Level Information	100
2-23-2-1. Overview	100
2-23-2-2. Setting with Configuration Tool	100
2-24. Maintenance Information	101
2-24-1.Overview	101
2-24-2.Error Log	101
2-24-3.Warning Log	101
2-24-4.Power-ON Time	101
2-24-5.Load Switching Frequency	102
2-24-6.Muting Statistics Information	102
2-25. Operating Status Monitoring	103
2-25-1.Overview	103
2-25-2.Readout Information	103
2-26. Setting Recovery	104
2-26-1.Overview	104
Chapter3 Setting with DIP Switch	105
3-1. List of Features Configurable by DIP Switch	106
3-2. DIP Switch	107
3-2-1. DIP Switch on Receiver	108
3-2-2. DIP Switch on Emitter	109
3-2-3. Push Switch	109
3-3. Setting by Teach-in	110
3-3-1. Setting Fixed Blanking by Teach-in	110
3-3-2. Setting Floating Blanking by Teach-in	113
Chapter4 Wiring/Installation	117
4-1. Installation Considerations	119
4-1-1. Detection Zone and Approach	119
4-1-2. Safety Distance	120
4-1-2-1. Safety Distance Formulas according to ISO 13855/EN ISO 13855	120
4-1-2-2. Safety Distance Formulas according to ANSI B11.19	121
4-1-3. Distance from Reflective Surfaces	123
4-1-3-1. F3SG-4R□ (Type 4 ESPE)	123
4-1-3-2. F3SG-2R□ (Type 2 ESPE)	123

4-1-4. Mutual Interference Prevention	124
4-2. Cascade Connection	126
4-2-1. Overview	126
4-2-2. Connection Procedure	128
4-3. Dimensions	129
4-3-1. Mounted with Standard Fixed Brackets (F39-LGF)	129
4-3-1-1. Backside Mounting	129
4-3-1-2. Side Mounting	131
4-3-1-3. Standard Fixed Bracket	133
4-3-2. Mounted with Standard Adjustable Brackets (F39-LGA)	134
4-3-2-1. Backside Mounting	134
4-3-2-2. Side Mounting	136
4-3-2-3. Standard Adjustable Bracket	138
4-4. Mounting	139
4-4-1. Mounting Method	139
4-4-2. Number of Brackets Required	139
4-4-3. Mounting Procedure	140
4-4-3-1. Mounting with Standard Fixed Brackets (F39-LGF)	140
4-4-3-2. Mounting with Standard Adjustable Brackets (F39-LGA)	141
4-4-4. Beam Alignment Procedure	144
4-5. Wiring	145
4-5-1. Wiring Precautions	145
4-5-2. Power Supply Unit	146
4-5-3. Cable Connections(F3SG-RA Series)	147
4-5-3-1. Single-Ended Cable	147
4-5-3-2. Double-Ended Cable	148
4-5-3-3. Cascading Cable	150
4-5-3-4. Extending Cable Length with Commercially Available Cable	151
4-5-3-5. Reduced Wiring Connector System	151
4-5-4. Cable Connections(F3SG-RE Series)	152
4-5-4-1. Recommended Cable	152
4-5-4-2. Extending Cable Length with Commercially Available Cable	153
4-5-4-3. Reduced Wiring Connector System	153
4-5-5. Functional Earth Connection	154
er5 Input/Output Circuit and Applications	155
5-1. Input/Output Circuit	157
5-1-1. Entire Circuit Diagram	157
5-1-1. F3SG-RA Series	157
5-1-1-2. F3SG-RE Series	159
5-1-2. Input Circuit Diagram by Function	161

5-1-2-1. F3SG-RA Series	161
5-1-2-2. F3SG-RE Series	161
5-2. Wiring Examples(F3SG-RA Series)	162
5-2-1. Standalone F3SG-RA using PNP Outputs	162
5-2-2. Standalone F3SG-RA using NPN Outputs	163
5-2-3. Standard Muting Mode/Exit-Only Muting Mode using PNP Outputs	164
5-2-4. Standard Muting Mode/Exit-Only Muting Mode using NPN Outputs	165
5-2-5. Standard Muting Mode/Exit-Only Muting Mode with two Muting Sensors using PI 166	NP Outputs
5-2-6. Standard Muting Mode/Exit-Only Muting Mode with two Muting Sensors using NI 167	PN Outputs
5-2-7. Standard Muting Mode/Exit-Only Muting Mode with four Muting Sensors using P 168	NP Outputs
5-2-8. Standard Muting Mode/Exit-Only Muting Mode with four Muting Sensors using N 169	PN Outputs
5-2-9. Pre-Resest Mode using PNP Output	170
5-2-10.Pre-Resest Mode using NPN Output	171
5-2-11.Standalone F3SG-RA with Y-Joint Plug/Socket Connector using PNP outputs	172
5-2-12.Standalone F3SG-RA with Y-Joint Plug/Socket Connector using NPN outputs	173
5-2-13.F3SG-RA with Y-Joint Plug/Socket Connector in Standard Muting Mode/Exit-Or Mode using PNP outputs 174	nly Muting
5-3. Wiring Examples (F3SG-RE Series)	175
5-3-1. Short Mode	175
5-3-2. Long Mode	176
5-3-3. Standalone F3SG-RE with Y-Joint Plug/Socket Connector using PNP outputs	177
5-4. Connectable Safety Control Units	178
oter6 Checklists	179
6-1. Pre-Operation Checklists	180
6-1-1. Checklists	180
6-1-1-1. Installation Condition Check	180
6-1-1-2. Wiring Check Before Power Is Turned ON	180
6-1-1-3. Operation Check While the Machine Is Stopped	181
6-1-1-4. Checking that Hazardous Parts Stop While the Machine Operates	182
6-2. Maintenance Checklists	183
6-2-1. Checklists	183
6-2-1-1. Inspection at Startup and When Changing Operators	183
6-2-1-2. Checking that Hazardous Parts Stop While the Machine Operates	184
6-2-1-3. Items to Inspect Every 6 Months or When Machine Settings Are Changed	184
oter7 Appendix	187
7-1. Troubleshooting	188

7-1-1. Lockout State	189		
7-1-1. Description	189		
7-1-1-2. Troubleshooting	190		
7-1-2. Warning	193		
7-1-2-1. Description	193		
7-1-2-2. Troubleshooting	193		
7-1-2-3. Muting Sequence Error Indication	194		
7-1-2-4. Interlock Sequence Error Indication	195		
7-2. Optional Accessories(Sold Separately)	196		
7-3. Glossary	202		
-4. Revision History			

Chapter 1 Overview and Specifications

1-1. What is Included	2
1-2. System Components	3
1-2-1. Basic Components	4
1-2-2. Model Overview	5
1-3. List of Features	6
1-3-1. Model Overview	6
1-3-2. List of Feature	6
1-4. LED Indicators	7
1-4-1. LED Indicator Status	8
1-5. Ratings/Specifications	10
1-6. List of Models	14
1-6-1. List of Models/Response Time/Current Consumption/Weight	14
1-6-2. Calculation of Response Time of Cascaded Segments	17


1-1. What is Included

Before use, confirm that the items below are included with the product. If you find that an item is missing, please contact your local branch office or distributor.

Product	Quantity
F3SG-□RA□□□□□□□ main unit	Emitter x 1, Receiver x 1
F3SG-□RE□□□□□□□ main unit	
Standard Fixed Bracket	The number of brackets included depends on protective height of the F3SG-R. Less than 1,280 mm: 2 sets 1,280 mm or longer and up to 2,270 mm: 3 sets 2,350 mm or longer and up to 2,510 mm: 4 sets
Warning Zone Label Troubleshooting Guide Sticker	F3SG-RA series: 1, F3SG-RE series: Not included
Safety Precautions	4
Quick Installation Manual	1

1-2. System Components

This section describes the system components and part names of the F3SG-R system.

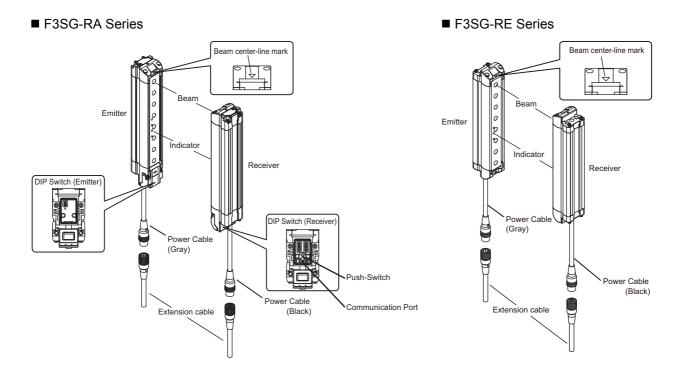

1-2-1. Basic Components

Component	Model name	Description
Emitter, receiver	F3SG-□RA□□□□-□□-□	Select a model name based on the required protective height and ESPE type. The model name can be understood as follows: F3SG-□RA□□□-□-□ 1 2 3 4 1: ESPE type (4: Type 4, 2: Type 2) 2: Protective height (mm) 3: Object resolution (mm) 4: L: Emitter, D: Receiver, blank: Emitter and receiver.
Emitter, receiver	F3SG-DREDDDDDD-D	Select a model name based on the required protective height and ESPE type. The model name can be understood as follows: F3SG-□RE□□□□□□□-□ 1 2 3 4 5 1: ESPE type (4: Type 4, 2: Type 2) 2: Protective height (mm) 3: Output type (P: PNP output, N: NPN output*) 4: Object resolution (mm) 5: L: Emitter, D: Receiver, blank: Emitter and receiver. * For emitter, a hyphen "-" is indicated instead of "P" or "N".

CHECK!

To distinguish between the emitter and receiver, find the labels attached to the front of the F3SG-R. The label on the emitter reads "EMITTER" and the label on the receiver reads "RECEIVER".

1-2-2. Model Overview

The F3SG-R safety light curtain family is available in two ESPE types, Type 4 and Type 2 according to EN 61496-1, identified as follows:

F3SG-4RA□□□□□□□ : Type 4 ESPE F3SG-2RADDDDDDD : Type 2 ESPE (These are also referred to as the "F3SG-RA".)

The F3SG-RA is multi-functional and designed for various applications.

Refer to Chapter 2 System Operation and Functions for more information on available features.

1-3. List of Features

1-3-1. Model Overview

The F3SG-R safety light curtain family has two types, F3SG-RA and F3SG-RE.

■ F3SG-RA Series

The model name is represented as F3SG-\(\sigma\)RA\(\sigma\)\(\sigma\).

The F3SG-RA series is an advance model, allowing you to configure the safety light curtain to fit your

Refer to the List of Features below for available features.

■ F3SG-RE Series

The model name is represented as F3SG-□RE□□□□□□□.

The F3SG-RE series is a limited-function model, easy to use with simple wiring (emitter: 4-wire, receiver: 4-wire).

Refer to the List of Features below for available features.

1-3-2. List of Feature

The F3SG-R safety light curtain family has the following features. For the F3SG-RA, some of the features are available or configurable by the DIP Switch on the body of the safety light curtain or the Configuration Tool via a PC.





Setting with DIP Switch and Configuration Tool is not available for the F3SG-RE.

		F3SG-		Page	
Feature	Setting by DIP Switch Setting by Configuration Tool		Factory default setting		F3SG-RE Series
PNP/NPN Selection	Х		PNP output		p.26
External Test	Х		24 V Active		p.29
Interlock	Х	Х	Auto Reset Mode		p.32
Pre-Reset	Х	Х	Disabled		p.37
EDM (External Device Monitoring)	Х	Х	Disabled		p.37
Auxiliary Output		Х	Muting/Override information		p.40
Muting		Х	Standard Muting mode		p.44
Override		Х	Enabled		p.70
Fixed Blanking	Х	Х	Disabled		p.75
Floating Blanking	Х	Х	Disabled		p.79
Reduced Resolution		Х	Disabled		p.84
Warning Zone		X	Disabled		p.86
Scan Code Selection	Х		Code A		p.25
Operating Range Selection	Х		Short mode	Х	p.92
Response Time Adjustment		X	Disabled		p.94

1-4. LED Indicators


■ F3SG-RA Series

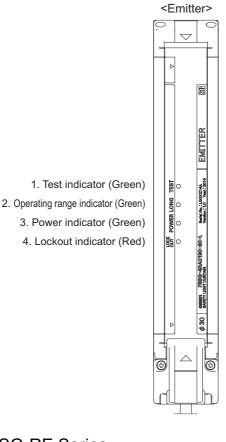


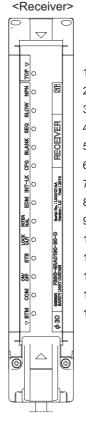

- 1. Top-beam-state indicator (Blue)
- 2. PNP/NPN mode indicator (Green)
- 3. Response time indicator (Green)
- 4. Sequence error indicator (Yellow)
- 5. Blanking indicator (Green)
- 6. Configuration indicator (Green)
- 7. Interlock indicator (Yellow)
- 8. External device monitoring indicator (Green)
- 9. Internal error indicator (Red)
- 10. Lockout indicator (Red)
- 11. Stable-state indicator (Green)
- 12. ON/OFF indicator (Green/Red)
- 13. Communication indicator (Green)
- 14. Bottom-beam-state indicator (Blue)

■ F3SG-RE Series

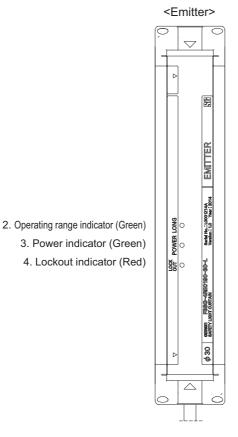

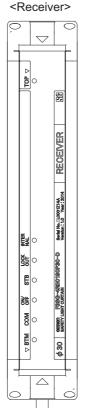

1. Top-beam-state indicator (Blue)

- 9. Internal error indicator (Red)
- 10. Lockout indicator (Red)
- 11. Stable-state indicator (Green)
- 12. ON/OFF indicator (Green/Red)
- 13. Communication indicator (Green)
- 14. Bottom-beam-state indicator (Blue)

1-4-1. LED Indicator Status

Shown below are indication statuses of F3SG-R LED indicators when you purchased.

Emitter

Location	Name of Ind	licator	Color	F3SG-RA Series	F3SG-RE Series	Illuminated	Blinking
1	Test	TEST	Green	Х		-	External Test is being performed
2	Operating range	LONG	Green	x	x	Long range mode is selected	Lockout state due to DIP Switch setting error or Operating range selection setting error
3	Power	POWER	Green	Х	Х	Power is ON.	Error due to noise
4	Lockout	LOCKOUT	Red	Х	Х	-	Lockout state due to error in emitter


Receiver

Location	Name of Indicator		Color	F3SG-RA Series	F3SG-RE Series	Illuminated	Blinking
1	Top-beam-state	TOP	Blue	×	×	The top beam is unblocked	Muting/Override state, or Lockout state due to Cap error or Other sensor error *3
2	PNP/NPN mode	NPN	Green	Х		NPN mode is selected by DIP Switch	-
3	Response time	SLOW	Green	Х		Response Time Adjustment is enabled	-
4	Sequence error	SEQ	Yellow	Х		-	Sequence error in Muting or Pre-reset mode
5	Blanking	BLANK	Green	х		Blanking, Warning Zone or Reduced Resolution is enabled	Teach-in mode, or Blanking Monitoring error
6	Configuration	CFG	Green	х		-	Teach-in mode, zone measurement beng performed by Dynamic Muting, or Lockout state due to Parameter error or Cascading Configuration error
7	Interlock	INT-LK	Yellow	Х		Interlock state	Pre-reset mode *2
8	External device monitoring	EDM	Green	Х		RESET input is in ON state *1	Lockout state due to EDM error
9	Internal error	INTERNAL	Red	x	x	-	Lockout state due to Internal error, or error due to abnormal power supply or noise
10	Lockout	LOCKOUT	Red	Х	Х	-	Lockout state due to error in receiver
11	Stable-state	STB	Green	х	×	Incident light level is 170% or higher of ON- threshold	Safety output is instantaneously turned OFF due to ambient light or vibration
			Green			Safety output is in ON state	-
12	ON/OFF	ON/OFF	Red	Х	Х	Safety output is in OFF state, or the sensor is in Setting state	Lockout state due to Safety Output error, or error due to abnormal power supply or noise

Location	Name of Indicator		Color	F3SG-RA Series	F3SG-RE Series	Illuminated	Blinking
13	Communication	СОМ	Green	×	×	Synchronization between emitter and receiver is maintained	Lockout state due to Communication error, or error due to abnormal power supply or noise
14	Bottom-beam- state	ВТМ	Blue	Х	Х	The bottom beam is unblocked	Muting/Override state , or Lockout state due to DIP Switch setting error *3

^{*1.} The EDM indicator is illuminated when the RESET input is in the ON state regardless of the use of the EDM function.

- *2. Refer to the timing chart of Pre-Reset mode in 2-9. *Interlock* for more information of blinking patterns.
- *3. Muting/Override and cascade connection are not available for the F3SG-RE.

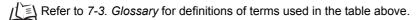



TOP, CFG, LOCKOUT, STB and ON/OFF indicators are illuminated when the receiver of the F3SG-RA is in Setting mode.

1-5. Ratings/Specifications

The $\Box\Box\Box\Box$ in the model names indicate the protective heights in millimeters.

= = = =		Traines indicate the		T	5000 (DEDDDDD00				
		F3SG-4RA□□□□-14 F3SG-2RA□□□□-14	F3SG-4RA□□□□-30 F3SG-2RA□□□□-30	F3SG-4REDDDD14	F3SG-4RE□□□□□30 F3SG-2RE□□□□□30				
Type of ESPE Type 4		F3SG-4RADDDD-14/-3		F3SG-4RE□□□□□□14/30					
(IEC 61496-1) Type 2		F3SG-2RADDDD-14/-3		F3SG-2REDDDDD14/30					
Performance		1 33G-2RALLLLL-14/-3	0	1 33G-2KLLLLLLLL 14/3	JO				
		Onagua abigata							
Object Resolution (Detection Capability)		Opaque objects 14-mm dia. 30-mm dia.		14-mm dia.	30-mm dia.				
		14-mm			20 mm				
Beam Gap			20 mm 8 to 124	10 mm	-				
Number of Beams		15 to 207	- 10 1-1	15 to 207	8 to 124				
Lens Size		5.2 × 3.4 (W × H) mm	7-mm dia.	5.2 × 3.4 (W × H) mm	7-mm dia.				
Protective Height		160 to 2080 mm (6.3 to 81.9 inch)	190 to 2510 mm (7.3 to 98.7 inch)	160 to 2080 mm (6.3 to 81.9 inch)	190 to 2510 mm (7.3 to 98.7 inch)				
	Long	,	0.3 to 20.0 m (1 to 65 ft.)	,	0.3 to 20.0 m (1 to 65 ft.)				
Operating Range	Long Short	, ,	, ,	, ,	, ,				
	SHOIL	0.3 to 3.0 m (1 to 10 ft.) Normal mode: 8 to 18 ms	0.3 to 7.0 m (1 to 23 ft.)	0.3 to 3.0 m (1 to 10 ft.)	0.3 to 7.0 m (1 to 23 ft.)				
	ON to OFF	Slow mode: 16 to 36 ms		5 to 15 ms					
	OFF to ON	40 to 90 ms *1		25 to 75 ms					
Response Time	*1. Respons	esponse time when used in one segment system or in cascaded connection.							
	Refe	,							
	*2. Selectab	ole by Configuration Tool.							
Effective Aperture	Type 4	±2.5° max., emitter and receiver at operating range of 3 m or greater							
Angle (EAA) (IEC 61496-2)	Type 2	±5.0° max., emitter and re	eceiver at operating range	of 3 m or greater					
Light Source		Infrared LEDs, Wavelength: 870 nm							
Startup Waiting Tir	ne	2 s max.							
Electrical									
Power Supply Volt	age (Vs)	SELV/PELV 24 VDC±20%	% (ripple p-p 10% max.)						
Current Consumpt	ion	Refer to 1-6. List	of Models						
		Two PNP or NPN transist	tor outputs (PNP or NPN	F3SG-□RE□□□□□P□□: Two PNP transistor					
		is selectable by DIP Swite	ch.)	outputs					
				F3SG-□RE□□□□□N□□: Two NPN transistor					
		outputs							
Safety Outputs (O	SSD)	Load current of 300 mA max., Residual voltage of 2 V max. (except for voltage drop due to cable extension), Capacitive load of 1 μ F max., Inductive load of 2.2 H max. *1 Leakage current of 1 mA max. (PNP), 2 mA max. (NPN) *2							
		*1. The load inductance is the maximum value when the safety output frequently repeats ON and OFF. When you use the safety output at 4 Hz or less, the usable load inductance becomes larger. *2. These values must be taken into consideration when connecting elements including a capacitive load such as a capacitor.							
		load such as a capaci							
Auxiliary Output		One PNP or NPN transist selectable by DIP Switch.							
		Load current of 100 mA max., Residual voltage of							
		2 V max .	,						
Output On anation	Safety Output	Light-ON (Safety output is enabled when the receiver receives an emitting signal.)							
Output Operation Mode	·	Muting or Override output							
IVIOUE	Auxiliary Output	by Configuration Tool)	i (ueiauii) (Ooniigurable		-				
	put	_,,,,							

	F3SG-2RA□□□□-14 F3SG-2RA□□□□-30 F3SG-2RE□□□□□□14 F3SG-2RE□□□□□□ TEST: Operating Range Select Input: 24 V Active: 9 V to Vs (sink current 3 mA max.) * Long: 9 V to Vs (sink current 3 mA max.) *						
ON Voltage	0 V Active: 0 to 3 V (source current 3 mA max.) MUTE A/B: PNP: Vs to Vs-3 V (sink current 3 mA max.) * NPN: 0 to 3 V (source current 3 mA max.) RESET: PNP: Vs to Vs-3 V (sink current 5 mA max.) * NPN: 0 to 3 V (source current 5 mA max.)						
OFF Voltage	TEST: 24 V Active: 0 to 1.5 V 0 V Active: 9 to 24V or open MUTE A/B, RESET: PNP: 0 to 1/2 Vs, or open * NPN: 1/2 Vs to Vs, or open *						
	indicates a supply voltage value in your environment.						
Overvoltage Category (IEC 60664-1)	II .						
Indicators	Refer to 1-4-1. LED Indicator Status						
Protective Circuit	Output short protection, Power supply reverse polarity protection						
Insulation Resistance	20 M Ω or higher (500 VDC megger)						
Dielectric Strength	1,000 VAC, 50/60 Hz (1 min)						
Functional							
Mutual Interference Prevention (Scan Code)	This function prevents mutual interference in up to two F3SG-RA systems.						
	4-1-4. Mutual Interference Prevention						
Cascade Connection	Number of cascaded segments: 3 max. Total number of beams: 255 max. Total sum of cable lengths between sensors: 10 m max.						
Test Function	Self-test (at power-on, and during operation) External test (light emission stop function by test input) Self-test (at power-on, and during operation)						
Safety-Related Functions	Interlock External device monitoring (EDM) Pre-reset Fixed blanking/Floating blanking Reduced resolution Muting/Override Scan code selection PNP/NPN selection Response time adjustment						
	Chapter 2 System Operation and Functions Chapter 3 Setting with DIP Switch						
Environmental							
Ambient Operatin	-10 to 55°C (14 to 131°F) (non-icing)						
Temperature Storage	-25 to 70°C (-13 to 158°F)						
Ambient Operating Humidity Storage							
Ambient Illuminance	35% to 95% Incandescent lamp: 3,000 lx max. on receiver surface Sunlight: 10,000 lx max. on receiver surface						
Degree of Protection (IEC 60529)	IP65/IP67						
Vibration Resistance (IEC 61496-1)	10 to 55 Hz, Multiple amplitude of 0.7 mm, 20 sweeps for all 3 axes						
Shock Resistance (IEC 61496-1)	100 m/s ² , 1000 shocks for all 3 axes						

		F3SG-4RA□□□□-14	F3SG-4RA□□□□-30	F3SG-4REDDDDD14	F3SG-4RE□□□□□30			
		F3SG-2RA□□□□-14	F3SG-2RA□□□□-30	F3SG-2RE□□□□□14	F3SG-2RE□□□□□30			
Pollution Degree (IEC 60664-1)		Pollution Degree 3						
Connections								
	Type of Connection	M12 connectors: 5-pin er IP67 rated when mated, Cables prewired to the se		M12 connectors: 4-pin, IP67 rated when mated, Cables prewired to the sensors				
	Number of Wires	Emitter: 5, Receiver: 8		Emitter: 4, Receiver: 4				
Power cable	Cable Length	0.3 m						
	Cable Diameter	6 mm						
	Minimum Bending Radius	R5 mm						
	Type of Connection	M12 connectors: 5-pin er IP67 rated when mated	nitter and 8-pin receiver,					
	Number of Wires	Emitter: 5, Receiver: 8		- Use the XS5□-D42□ series cables.				
Cascading cable	Cable Length	0.2 m						
	Cable Diameter	6 mm						
	Minimum Bending Radius	R5 mm						
	Type of Connection	M12 connectors: 5-pin er IP67 rated when mated	nitter and 8-pin receiver,					
Extension cable	Number of Wires	Emitter: 5, Receiver: 8						
- Single-ended cable - Double-ended	Cable Length	Refer to 4-5-3-1. S 4-5-3-2. Double-El lengths and twiste	nded Cable for cable					
cable	Cable Diameter	6.6 mm						
	Minimum Bending Radius	R36 mm						
Extension of Powe	er Cable	100 m max.						
Material								
Material		Housing: Aluminum Cap: PBT Front window: PMMA Cable: Oil resistant PVC Mounting Bracket: ZDC2 FE plate: SUS						
Weight (packaged)	Refer to 1-6. List of Models						
Included Accessories		Safety Precautions, Quick Installation Manual, Standard Fixed Bracket*1, Troubleshooting Guide Sticker, Warning Zone Label *2						
		*1. The quantity of Standard Fixed Brackets included varies depending on the protective height. [F3SG-□RA□□□□-14]/F3SG-□RE□□□□□□14] - Protective height of 0160 to 1200: 2 sets - Protective height of 1280 to 2080: 3 sets [F3SG-□RA□□□-30]/F3SG-□RE□□□□□□30] - Protective height of 0190 to 1230: 2 sets - Protective height of 1310 to 2270: 3 sets - Protective height of 2350 to 2510: 4 sets *2. Included in the F3SG-RA series.						

		F3SG-4RA□□□□-14	F3SG-4RA□□□□-30	F3SG-4RE□□□□□14	F3SG-4RE□□□□□30			
		F3SG-2RA□□□□-14	F3SG-2RA□□□□-30	F3SG-2RE□□□□□14	F3SG-2RE□□□□□30			
Conformity								
Conforming stand	ards	Refer to Legislation	on and Standards					
Performance Level	Type 4	PL e/Category 4 (EN ISO	PL e/Category 4 (EN ISO 13849-1:2008)					
(PL)/Safety category	Type 2	PL c/Category 2 (EN ISO	13849-1:2008)					
PFHd	•	≤ 9.9 × 10 ⁻⁸ (IEC 61508)						
Proof test interval	Тм	Every 20 years (IEC 6150	08)					
SFF 99% (IEC 61508)								
HFT 1 (IEC 61508)								
Classification Type B (IEC 61508-2)								
		•						

1-6. List of Models

1-6-1. List of Models/Response Time/Current Consumption/Weight

F3SG-4RA□□□□-14/F3SG-2RA□□□□-14

Mo	del	Number of	Protective Height	Re	esponse Time[n	Current Consumption [mA]		Weight	
IVIO	uei	Beams	[mm]	ON→OFF *1	OFF	OFF (Not	C:44	Danairon	[kg]*2
				UN→UFF "I	(Synchronized) →ON	→ON	Emitter	Receiver	
F3SG-4RA0160-14	F3SG-2RA0160-14	15	160	8	40	140	40	75	1.8
F3SG-4RA0240-14	F3SG-2RA0240-14	23	240	8	40	140	45	75	2.0
F3SG-4RA0320-14	F3SG-2RA0320-14	31	320	8	40	140	55	75	2.2
F3SG-4RA0400-14	F3SG-2RA0400-14	39	400	8	40	140	60	80	2.7
F3SG-4RA0480-14	F3SG-2RA0480-14	47	480	13	65	165	50	80	2.9
F3SG-4RA0560-14	F3SG-2RA0560-14	55	560	13	65	165	55	80	3.1
F3SG-4RA0640-14	F3SG-2RA0640-14	63	640	13	65	165	60	85	3.3
F3SG-4RA0720-14	F3SG-2RA0720-14	71	720	13	65	165	65	85	3.9
F3SG-4RA0800-14	F3SG-2RA0800-14	79	800	13	65	165	65	90	4.1
F3SG-4RA0880-14	F3SG-2RA0880-14	87	880	13	65	165	70	90	4.3
F3SG-4RA0960-14	F3SG-2RA0960-14	95	960	13	65	165	75	90	4.5
F3SG-4RA1040-14	F3SG-2RA1040-14	103	1040	13	65	165	80	95	4.7
F3SG-4RA1120-14	F3SG-2RA1120-14	111	1120	13	65	165	85	95	4.8
F3SG-4RA1200-14	F3SG-2RA1200-14	119	1200	13	65	165	90	100	5.0
F3SG-4RA1280-14	F3SG-2RA1280-14	127	1280	13	65	165	95	100	5.2
F3SG-4RA1360-14	F3SG-2RA1360-14	135	1360	13	65	165	95	105	5.6
F3SG-4RA1440-14	F3SG-2RA1440-14	143	1440	18	90	190	85	105	5.8
F3SG-4RA1520-14	F3SG-2RA1520-14	151	1520	18	90	190	90	105	6.0
F3SG-4RA1600-14	F3SG-2RA1600-14	159	1600	18	90	190	90	110	6.6
F3SG-4RA1680-14	F3SG-2RA1680-14	167	1680	18	90	190	95	110	6.8
F3SG-4RA1760-14	F3SG-2RA1760-14	175	1760	18	90	190	100	115	7.0
F3SG-4RA1840-14	F3SG-2RA1840-14	183	1840	18	90	190	100	115	7.2
F3SG-4RA1920-14	F3SG-2RA1920-14	191	1920	18	90	190	105	120	7.3
F3SG-4RA2000-14	F3SG-2RA2000-14	199	2000	18	90	190	105	120	7.5
F3SG-4RA2080-14	F3SG-2RA2080-14	207	2080	18	90	190	110	125	8.1

^{*1.} The response times are values when Scan Code is set at Code B. The response times for Code A are 1 ms shorter than these values.

F3SG-4RA□□□□-30/F3SG-2RA□□□□-30

Model		Number Protective		Re	esponse Time[n	Current Consumption [mA]		Weight	
Mid	udei	of Beams	Height[m m]	ON→OFF *1	OFF (Synchronized) →ON	OFF (Not synchronized) →ON	Emitter	Receiver	[kg] *2
F3SG-4RA0190-30	F3SG-2RA0190-30	8	190	8	40	140	35	75	1.8
F3SG-4RA0270-30	F3SG-2RA0270-30	12	270	8	40	140	35	75	2.0
F3SG-4RA0350-30	F3SG-2RA0350-30	16	350	8	40	140	40	75	2.2
F3SG-4RA0430-30	F3SG-2RA0430-30	20	430	8	40	140	45	75	2.7
F3SG-4RA0510-30	F3SG-2RA0510-30	24	510	8	40	140	50	75	2.9
F3SG-4RA0590-30	F3SG-2RA0590-30	28	590	8	40	140	50	75	3.1
F3SG-4RA0670-30	F3SG-2RA0670-30	32	670	8	40	140	55	75	3.3
F3SG-4RA0750-30	F3SG-2RA0750-30	36	750	8	40	140	60	80	3.9
F3SG-4RA0830-30	F3SG-2RA0830-30	40	830	8	40	140	65	80	4.0
F3SG-4RA0910-30	F3SG-2RA0910-30	44	910	13	65	165	50	80	4.2

^{*2.} The weight includes an emitter, a receiver and included brackets in a product package.

Mo	odel	Number of	er Protective Height[m					Current Consumption [mA]		Weight
Mid	udei	Beams	m]	ON→OFF *1	OFF (Synchronized) →ON	OFF (Not synchronized) →ON	Emitter	Receiver	[kg] *2	
F3SG-4RA0990-30	F3SG-2RA0990-30	48	990	13	65	165	50	80	4.4	
F3SG-4RA1070-30	F3SG-2RA1070-30	52	1070	13	65	165	55	80	4.6	
F3SG-4RA1150-30	F3SG-2RA1150-30	56	1150	13	65	165	55	85	4.8	
F3SG-4RA1230-30	F3SG-2RA1230-30	60	1230	13	65	165	55	85	4.9	
F3SG-4RA1310-30	F3SG-2RA1310-30	64	1310	13	65	165	60	85	5.1	
F3SG-4RA1390-30	F3SG-2RA1390-30	68	1390	13	65	165	60	85	5.6	
F3SG-4RA1470-30	F3SG-2RA1470-30	72	1470	13	65	165	65	85	5.8	
F3SG-4RA1550-30	F3SG-2RA1550-30	76	1550	13	65	165	65	90	6.0	
F3SG-4RA1630-30	F3SG-2RA1630-30	80	1630	13	65	165	70	90	6.5	
F3SG-4RA1710-30	F3SG-2RA1710-30	84	1710	13	65	165	70	90	6.7	
F3SG-4RA1790-30	F3SG-2RA1790-30	88	1790	13	65	165	70	90	6.9	
F3SG-4RA1870-30	F3SG-2RA1870-30	92	1870	13	65	165	75	90	7.1	
F3SG-4RA1950-30	F3SG-2RA1950-30	96	1950	13	65	165	75	95	7.3	
F3SG-4RA2030-30	F3SG-2RA2030-30	100	2030	13	65	165	80	95	7.4	
F3SG-4RA2110-30	F3SG-2RA2110-30	104	2110	13	65	165	80	95	8.0	
F3SG-4RA2190-30	F3SG-2RA2190-30	108	2190	13	65	165	85	95	8.2	
F3SG-4RA2270-30	F3SG-2RA2270-30	112	2270	13	65	165	85	100	8.4	
F3SG-4RA2350-30	F3SG-2RA2350-30	116	2350	13	65	165	85	100	8.8	
F3SG-4RA2430-30	F3SG-2RA2430-30	120	2430	13	65	165	90	100	8.9	
F3SG-4RA2510-30	F3SG-2RA2510-30	124	2510	13	65	165	90	100	9.1	

^{*1.} The response times are values when Scan Code is set at Code B. The response times for Code A are 1 ms shorter than these values.

F3SG-DREDDDDD14

Model	Number of	Protective Height	Re	esponse Time[n	ns]	Consu	rent mption nA]	Weight
Wode	Beams	[mm]	ON→OFF	OFF (Synchronized) →ON	OFF (Not synchronized) →ON	Emitter	Receiver	[kg] *
F3SG-□RE0160□14	15	160	5	25	125	45	50	1.7
F3SG-□RE0240□14	23	240	5	25	125	55	55	1.9
F3SG-□RE0320□14	31	320	7	35	135	55	55	2.1
F3SG-□RE0400□14	39	400	7	35	135	65	60	2.6
F3SG-□RE0480□14	47	480	7	35	135	70	60	2.8
F3SG-□RE0560□14	55	560	7	35	135	80	60	3.1
F3SG-□RE0640□14	63	640	7	35	135	85	65	3.3
F3SG-□RE0720□14	71	720	9	45	145	80	65	3.8
F3SG-□RE0800□14	79	800	9	45	145	85	70	4.0
F3SG-□RE0880□14	87	880	9	45	145	90	70	4.2
F3SG-□RE0960□14	95	960	9	45	145	95	75	4.4
F3SG-□RE1040□14	103	1040	9	45	145	100	75	4.6
F3SG-□RE1120□14	111	1120	11	55	155	90	75	4.7
F3SG-□RE1200□14	119	1200	11	55	155	95	80	4.9
F3SG-□RE1280□14	127	1280	11	55	155	100	80	5.1
F3SG-□RE1360□14	135	1360	11	55	155	105	85	5.6
F3SG-□RE1440□14	143	1440	11	55	155	110	85	5.7
F3SG-□RE1520□14	151	1520	13	65	165	100	90	5.9
F3SG-□RE1600□14	159	1600	13	65	165	105	90	6.5

^{*2.} The weight includes an emitter, a receiver and included brackets in a product package.

Model	Number of	Protective Height	Re	esponse Time[n	าร]	Consu	rent mption nA]	Weight
Wiodei	Beams	[mm]		OFF	OFF (Not			[kg] *
			ON→OFF	(Synchronized)	synchronized)	Emitter	Receiver	
				→ON	→ON			
F3SG-□RE1680□14	167	1680	13	65	165	110	95	6.7
F3SG-□RE1760□14	175	1760	13	65	165	115	95	6.9
F3SG-□RE1840□14	183	1840	13	65	165	115	95	7.1
F3SG-□RE1920□14	191	1920	15	75	175	110	100	7.3
F3SG-□RE2000□14	199	2000	15	75	175	115	100	7.4
F3SG-□RE2080□14	207	2080	15	75	175	115	105	8.0

^{*} The weight includes an emitter, a receiver and included brackets in a product package.

F3SG-□RE□□□□□30

						Cur	rent	
	NI		Re	ns]	Consumption			
Model	of	Protective Height				[m	nA]	Weight
Wiodel	Beams	[mm]		OFF	OFF (Not			[kg] *
			ON→OFF	(Synchronized)		Emitter	Receiver	
				→ON	→ON			
F3SG-□RE0190□30	8	190	5	25	125	40	50	1.7
F3SG-□RE0270□30	12	270	5	25	125	45	50	1.9
F3SG-□RE0350□30	16	350	5	25	125	50	50	2.1
F3SG-□RE0430□30	20	430	5	25	125	55	55	2.6
F3SG-□RE0510□30	24	510	5	25	125	60	55	2.8
F3SG-□RE0590□30	28	590	7	35	135	50	55	3.0
F3SG-□RE0670□30	32	670	7	35	135	55	55	3.2
F3SG-□RE0750□30	36	750	7	35	135	60	60	3.8
F3SG-□RE0830□30	40	830	7	35	135	65	60	4.0
F3SG-□RE0910□30	44	910	7	35	135	65	60	4.2
F3SG-□RE0990□30	48	990	7	35	135	70	60	4.4
F3SG-□RE1070□30	52	1070	7	35	135	75	60	4.5
F3SG-□RE1150□30	56	1150	7	35	135	80	65	4.7
F3SG-□RE1230□30	60	1230	7	35	135	85	65	4.9
F3SG-□RE1310□30	64	1310	7	35	135	85	65	5.1
F3SG-□RE1390□30	68	1390	9	45	145	75	65	5.5
F3SG-□RE1470□30	72	1470	9	45	145	80	65	5.7
F3SG-□RE1550□30	76	1550	9	45	145	80	70	5.9
F3SG-□RE1630□30	80	1630	9	45	145	85	70	6.4
F3SG-□RE1710□30	84	1710	9	45	145	85	70	6.6
F3SG-□RE1790□30	88	1790	9	45	145	90	70	6.8
F3SG-□RE1870□30	92	1870	9	45	145	95	75	7.0
F3SG-□RE1950□30	96	1950	9	45	145	95	75	7.2
F3SG-□RE2030□30	100	2030	9	45	145	100	75	7.3
F3SG-□RE2110□30	104	2110	9	45	145	100	75	7.9
F3SG-□RE2190□30	108	2190	11	55	155	90	75	8.1
F3SG-□RE2270□30	112	2270	11	55	155	95	80	8.2
F3SG-□RE2350□30	116	2350	11	55	155	95	80	8.7
F3SG-□RE2430□30	120	2430	11	55	155	95	80	8.8
F3SG-□RE2510□30	124	2510	11	55	155	100	80	9.0

^{*} The weight includes an emitter, a receiver and included brackets in a product package.



The maximum speed of movement of a test rod up to which the detection capability is maintained is 2.0 m/s.

1-6-2. Calculation of Response Time of Cascaded Segments

The F3SG-RA can be used in cascade connection.


In case of a cascade connection, a response time is determined by the total number of beams.

If the total number of beams of all F3SG-RA in a cascade connection is 140 or less, its response time is 12 ms (Code A)/13 ms (Code B). The number of beams of respective F3SG-RA, however, must be 112 or less. If an F3SG-RA with 113 or more beams is included in the cascade connection, its response time is 17 ms (Code A)/18 ms (Code B).



The F3SG-RE cannot be used in cascade connection.

The diagram below summarizes the relation described above.

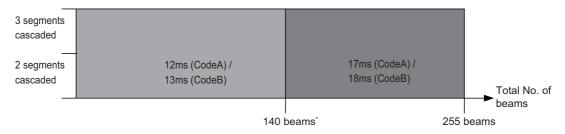

^{*} The number of beams of each segment in cascaded connection must be 112 or less.



戊国 4-2. Cascade Connection

Chapter 2 System Operation and Functions

2-1. Combination of Functions	21
2-2. Operating States	22
2-2-1. Machine Run State	22
2-2-2. Machine Stop State	22
2-2-3. Interlock State	22
2-2-4. Lockout State	22
2-2-5. Teach-in Mode	22
2-2-6. Setting State	23
2-3. Optical synchronization	24
2-4. Scan Code Selection	25
2-5. PNP/NPN Selection	26
2-6. Self-Test	27
2-7. External Test	29
2-8. Lockout Reset	31
2-9. Interlock	32
2-10. External Device Monitoring (EDM)	37
2-11. Auxiliary Output	40
2-12. Muting	44
2-13. Override	70
2-14. Fixed Blanking	75
2-15. Floating Blanking	79
2-16. Reduced Resolution	84
2-17. Warning Zone	86
2-18. Setting Zone Adjacency Conditions	90
2-19. Operating Range Selection	92
2-20. Response Time Adjustment	94
2-21. Lamp	95

2-22. Designated Beam Output	98
2-23. Light Level Monitoring	100
2-24. Maintenance Information	101
2-25. Operating Status Monitoring	103
2-26. Setting Recovery	104

2-1. Combination of Functions

Possible combinations of the F3SG-R functions are shown in the table below. The combinations in the table are available under certain conditions. The other functions can be combined without any limitations.

CHECK!

The functions listed in the table below are not available for the F3SG-RE.

/[三] Refer to 2-18. Setting Zone Adjacency Conditions for further information.

 \bigwedge The DIP Switch must be set so as to allow the F3SG-R to be configurable by the Configuration Tool. Refer to Chapter 3 Setting with DIP Switch for more information.


YES: Combination available

YES-C: Combination available by setting with Configuration Tool.

NO: Combination unavailable

	Fixed Blanking	Floating Blanking	Reduced Resolution	Muting/ Override	Pre-Reset	Warning Zone	EDM	Interlock
Fixed Blanking	-	YES-C*2	NO	YES	NO	YES-C	YES	YES
Floating Blanking	YES-C *2	-	NO	YES *1	NO	YES-C	YES	YES
Reduced Resolution	NO	NO	-	NO	YES-C	NO	YES-C	YES-C
Muting/Override	YES	YES *1	NO	-	NO	YES-C	YES	YES
Pre-Reset	NO	NO	YES-C	NO	-	YES-C	YES	NO
Warning Zone	YES-C	YES-C	NO	YES-C	YES-C	-	YES-C	YES-C
EDM	YES	YES	YES-C	YES	YES	YES-C	-	YES
Interlock	YES	YES	YES-C	YES	NO	YES-C	YES	-

- *1. This combination requires that the Floating Blanking zone covers the full detection zone and that the Muting/Override function also covers the full detection zone.
- *2. When the Fixed Blanking and Floating Blanking are selected, the top or bottom beam must be included in the Fixed Blanking zone, as shown in the left figure below. It is not allowed to set the Fixed Blanking zone not to cover the top or bottom beam, as shown in the right figure below.

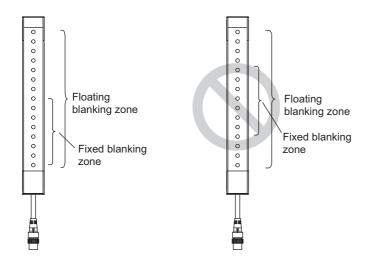

2-2. Operating States

The operating condition of a F3SG-R system is described in terms of states. The following operating states exist for a F3SG-R system.

2-2-1. Machine Run State

The two receiver safety outputs are in the ON state, the green ON/OFF indicator is illuminated. The protected machine is allowed to operate. Pressing and releasing the reset switch has no effect.

2-2-2. Machine Stop State

The two receiver safety outputs are in the OFF state, the red ON/OFF indicator is illuminated. The protected machine is not allowed to operate.

2-2-3. Interlock State

The two receiver safety outputs are in the OFF state, yellow Interlock indicator is illuminated. The Interlock state does not allow the protected machine to operate until the detection zone is clear of obstructions and the reset switch is pressed and released.



The F3SG-RE does not have the Interlock state.



Refer to 2-9. Interlock for more information.

2-2-4. Lockout State

The two receiver safety outputs are in the OFF state, the red Lockout indicator is blinking, and another indicator is blinking showing an error. The Lockout state does not allow the protected machine to operate. The primary difference between Lockout and Interlock states is that the F3SG-R system will remain in the Lockout state until the cause of the error is corrected, regardless of power cycling or an external reset switch press and release.

2-2-5. Teach-in Mode

The two receiver safety outputs are in the OFF state, the green Blanking indicator and the green Configuration indicator are blinking.



The F3SG-RE does not have the Teach-in mode.



Refer to 3-3. Setting by Teach-in for more information.

2-2-6. Setting State

The two receiver safety outputs are in the OFF state, the green Power indicator of the emitter is blinking. The blue Top-beam-state indicator, green Configuration indicator, red Lockout indicator, green Stable-state indicator and green ON/OFF indicator of the receiver are blinking. The Setting state does not allow the protected machine to operate. The user can change settings of the functions, monitor the operating states or view maintenance information with the Configuration Tool (SD Manager 2) under this state.



The F3SG-RE does not have the Setting state.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more

2-3. Optical synchronization

F3SG-RA Series	Х
F3SG-RE Series	Х

2-3-1. Overview

Synchronization is required between an emitter and a receiver for normal operation of F3SG-R. F3SG-R uses a specific beam for Synchronization. The beam is hereinafter called synchronization beam.


Depending on sensor configuration, the synchronization beam is either of the followings:

- One segment system: End beams (Top or Bottom beam)
- · Cascaded system*: End beams (Top or Bottom beam) of the primary sensor
 - * The F3SG-RE cannot be used in cascade connection.

For an emitter and a receiver to synchronize, at least one synchronization beam must be unblocked.

The synchronization process is performed when:

- (1) The power is turned on for an emitter and a receiver
- (2) All beams of the primary sensor are blocked and then unblocked
- (3) Synchronization is lost due to an error such as noise and ambient light

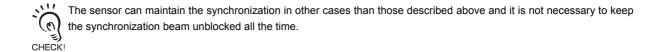

2-4. Scan Code Selection

F3SG-RA Series	Х
F3SG-RE Series	

2-4-1. Overview

The F3SG-RA has two scan codes (Code A and Code B). Scan Code Selection allows for placement of systems in close proximity and in line with each other and minimize mutual interference.

Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.



The Scan Code Selection is not available for the F3SG-RE.



Refer to 4-1-4. Mutual Interference Prevention for how to mitigate mutual interference.

2-4-2. Factory Default Setting

The factory default setting is Code A.



Both the emitter and receiver units must be set to the same code.

2-4-3. Setting with DIP Switch

The user can select the scan code from Code A or Code B by the DIP Switch.



The user cannot make any changes to the scan code by the Configuration Tool.

2-5. PNP/NPN Selection

F3SG-RA Series	Х
F3SG-RE Series	

2-5-1. Overview

The F3SG-RA offers PNP/NPN selection for the user to select the polarity of the inputs and outputs of the receiver between PNP and NPN.

When the system is set to the NPN type, the "NPN" indicator is illuminated.



The PNP/NPN Selection function is not available for the F3SG-RE. Select an F3SG-RE of your preferred I/O type.

2-5-2. Factory Default Setting

The factory default setting is PNP type.

2-5-3. Setting with DIP Switch

The user can select the type from PNP or NPN by the DIP Switch.

Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.

2-5-4. Setting with Configuration Tool

The user cannot make any changes to the PNP/NPN selection by the Configuration Tool.


2-6. Self-Test

F3SG-RA Series	Х
F3SG-RE Series	Χ

2-6-1. Overview

The F3SG-R performs the Self-Test when power is turned ON (within 2 seconds) to check for errors. Also, it regularly performs the Self-Test (within a response time) while operating.

This function cannot be cancelled.

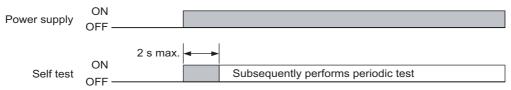

If an error is found in the Self-Test, the F3SG-R enters the Lockout state, keeps the safety output in the OFF state, and indicates the error at the same time.

2-6-1-1. Self-Test details

The Self-Test detects such error as described below.

Emitter

- · Failure of emitter unit or circuit
- · CPU failure
- · Memory failure
- Failure of DIP Switch*


Receiver

- · Abnormal external power supply voltage
- · Failure of internal power supply circuit
- · Failure of receiver unit or detection circuit
- CPU failure
- · Memory failure
- · Failure of safety output circuit
- · Disconnected or short-circuited cable
- Failure of DIP Switch*
- * The Self-Test for the DIP Switch is not available for the F3SG-RE as it does not have the DIP Switch.

2-6-1-2. Waveform of safety outputs


When the safety outputs are in the ON state, they are cyclically turned OFF as shown below to test the output circuit. When this OFF signal is fed back, the output circuit is diagnosed as normal. If the output signal does not include an OFF pulse signal due to short-circuit, etc, the receiver diagnoses a failure in the output circuit or wiring, and it enters the Lockout state.

■ F3SG-RA Series

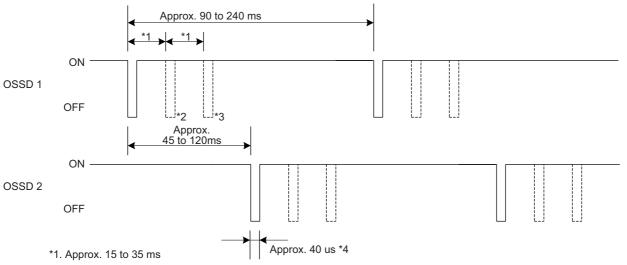

- *2. Signal when in 2-segment or 3-segment cascade.
- *3. Signal when in 3-segment cascade.
- $^{*}4.$ An OFF pulse signal of safety output may extend to about 100 μs due to the effect of the connected load (mostly capacitive load).

■ F3SG-RE Series

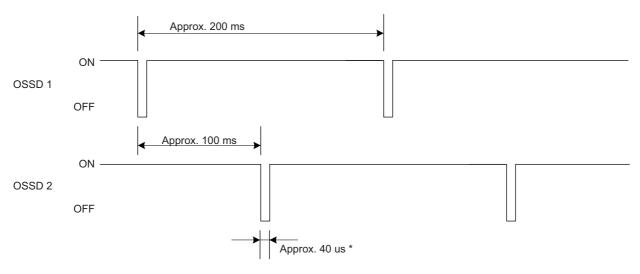

*An OFF pulse signal of safety output may extend to about 100 µs due to the effect of the connected load (mostly capacitive load).

2-7. External Test

F3SG-RA Series	Х
F3SG-RE Series	

2-7-1. Overview

This function stops the emission using an external signal. It can be used to verify that a safety system should properly stop (safety output turns OFF) when F3SG-RA is interrupted.


To stop the emission, apply the following voltage to the emitter's TEST input line according to the DIP switch settings of the emitter.

CHECK!


When muting, safety output is kept ON even if the emission is stoped.

DIP Switch settings (Position 4 on Emitter)	24 V Active	0 V Active
Input voltage	9 V to Vs	0 to 3 V

<Basic wiring diagram>

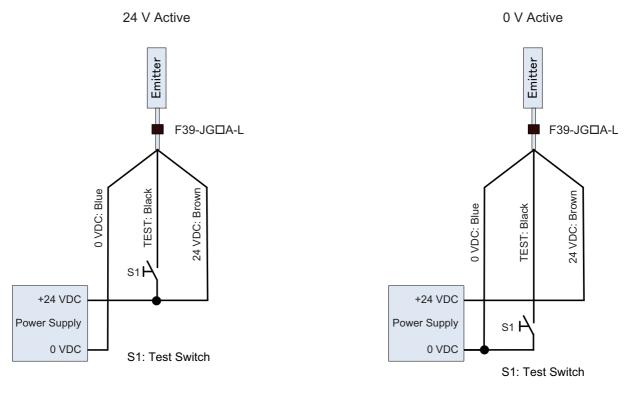

<Timing chart>

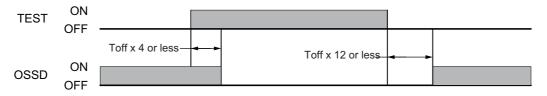


Toff: ON to OFF Response time

2-7-2. Factory Default Setting

The factory default setting is 24 V Active.

2-7-3. Setting with DIP Switch

The user can select the setting from 24 V Active or 0 V Active by the DIP Switch.

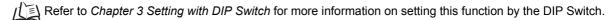

2-7-4. Setting with Configuration Tool

The user cannot make any changes to the External Test settings by the Configuration Tool.

2-8. Lockout Reset

F3SG-RA Series	Х
F3SG-RE Series	


2-8-1. Overview

When the cause of the lockout is removed, you can release the Lockout state of the F3SG-RA by using either of the following methods.

- · Cycle the power back ON
- · Reset input

For the F3SG-RE, you can release the Lockout state by cycling the power back ON.

<Basic wiring diagram>

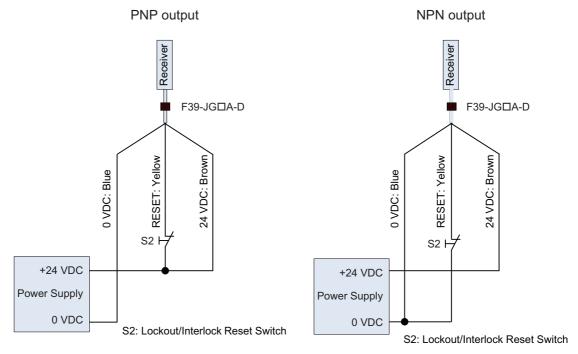

<Timing chart>



The table below shows the relation between the ON/OFF states and external lines.

Input	External Connection PNP NPN	
mpat		
ON	Vs-3 V to Vs	0 to 3 V
OFF	0 V to 1/2 Vs, or open	1/2 Vs to Vs, or open

2-9. Interlock

MARNING

Install the reset switch in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone.



Install the pre-reset switch always in the hazardous zone and where it cannot be activated from outside the hazardous zone.



F3SG-RA Series	Х
F3SG-RE Series	

2-9-1. Over view

The F3SG-RA turns the safety outputs OFF when its power is turned on or the F3SG-RA is blocked and holds this state until a reset signal is received. This state is called "interlock state". The function to keep the Interlock state is called "Interlock function".

The F3SG-RA has two Interlock functions, Start Interlock and Restart Interlock.



The F3SG-RE does not have the Interlock state and is only available with Auto Reset mode.

Start Interlock

The F3SG-RA turns the safety output OFF at power-on or recovery from power failure and keep this state until a reset signal is received. This is useful if you want to keep the machine stopped until a pre-operation check is completed after the power is turned ON.

Restart Interlock

The F3SG-RA turns the safety output OFF when the F3SG-R is blocked and keep this state until a reset signal is received. Restart interlock is useful if you want to restart the machine being stopped upon interruption of the F3SG-R, only after the operator confirms a safe condition.

The F3SG-RA offers three ways to reset the Interlock state: Auto Reset, Manual Reset, and Pre-Reset applicable to specific applications.

Auto Reset mode

Auto Reset mode disables the Start Interlock and Restart Interlock. When the interrupting object is removed from the detection zone, the Interlock state is automatically released and the safety outputs are automatically turned ON. Auto Reset is desirable for application where a worker is not able to enter the area between the detection zone and the hazardous part of the machine or you use a relay unit to activate Start Interlock and Restart Interlock.

Manual Reset mode

Manual Reset mode enables the Start Interlock and Restart Interlock. When a reset signal is given while no interrupting object exists in a detection zone, the safety outputs are turned ON.

Pre-Reset mode

An operator may enter and work in the hazardous zone for maintenance.


Under such a circumstance, another operator may press the resest switch to restart the machine without recognizing the operator working in the hazardous zone, posing a danger. The Pre-Reset

function ensures safety for an operator working in the hazardous zone by adding another reset switch (pre-reset switch) in the hazardous zone.

If the Pre-Reset function is enabled, an operator can work in the hazardous zone and press the prereset switch installed in the hazardous zone, pass the light curtain, and press the reset switch to restart the machine.


Shown below is overview of restarting the machine using the Pre-Reset.

- 1.Press the Pre-Reset switch (Input PRE-RESET signal)
- 2.Pass and interrupt F3SG-RA
- 3. Press the Reset switch to restart the system (Input RESET signal)

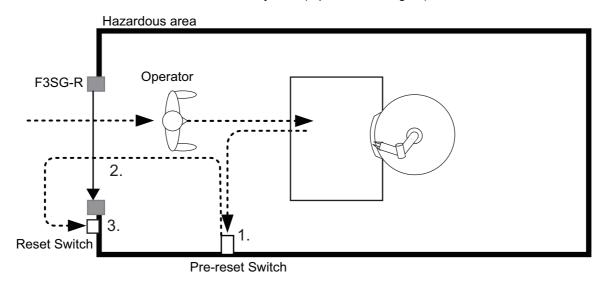


Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

- <Basic wiring diagram >
- · Auto or Manual Reset mode

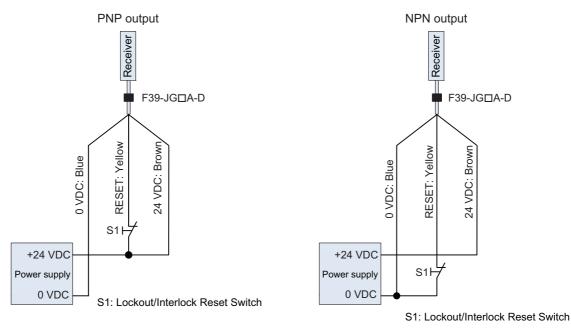


· Pre-Reset mode

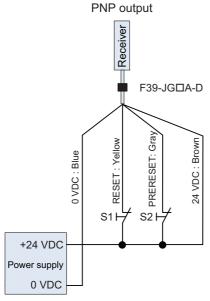

S1: Lockout/Interlock Reset Switch

S2: Pre-reset Switch

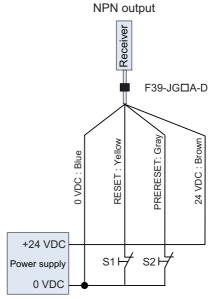

S1: Lockout/Interlock Reset Switch


S2: Pre-reset Switch

The table below shows the relation between the ON/OFF states and external lines.


Input	External Connection	
Прис	PNP	NPN
ON	Vs-3 V to Vs	0 to 3 V
OFF	0V to 1/2 Vs, or open	1/2 Vs to Vs, or open

<Timing chart>

· Start Interlock

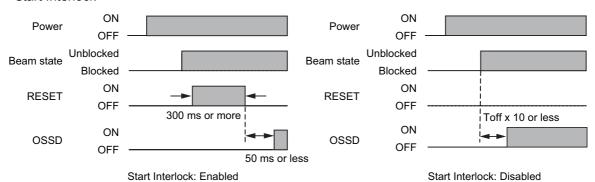


· Restart Interlock

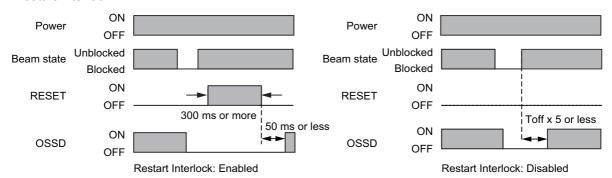

Toff: Response time ON to OFF

· Pre-Reset mode

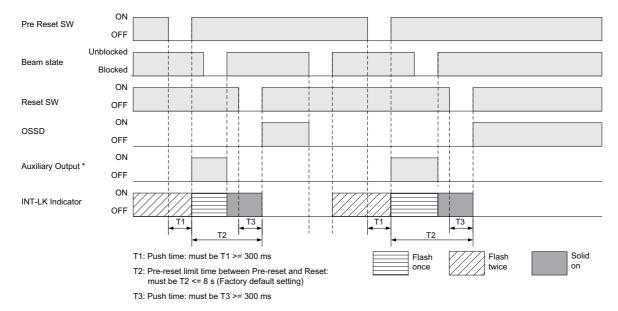

^{*} When Auxiliary Output is set to Pre-Reset Enabled by the Configuration Tool.

2-9-2. Factory Default Setting

The factory default setting is Auto Reset mode enabled, Start Interlock, Restart Interlock and Pre-Reset mode disabled.


2-9-3. Setting with DIP Switch

The user can select the mode from Auto Reset, Manual Reset or Pre-Reset by the DIP Switch.

When configured to Manual Reset mode, the Start Interlock and Restart Interlock are enabled.

When configured to Pre-Reset mode, the function is activated with the following conditions:

- Maximum number of times the F3SG-RA is blocked after input of PRE-RESET signal: Infinite (The F3SG-RA must be blocked at least once.)
- · Maximum period of time from input of PRE-RESET signal to input of RESET signal: 8 s

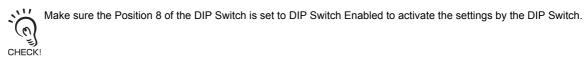



/[三] Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.

2-9-4. Setting with Configuration Tool

WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Interlock function


Function	Factory Default Setting	Available Parameters
Start Interlock	Disable	Enable/Disable
Restart Interlock	Disable	Enable/Disable

Pre-Reset function

Function	Factory Default Setting	Available Parameters
Pre-Reset	Disable	Enable/Disable
Maximum number of times F3SG-R is blocked *	infinite	1 to 9 times in 1-time increments, or infinate
Maximum period of time from input of PRE-RESET signal to input of RESET signal	8 s	1 to 60 s in 1-s increments

^{*} The minimum number of times is fixed to 1.

Note. When the Pre-Reset is enabled, it precedes all other interlock functions and the parameters of Start Interlock and Restart Interlock are ignored.

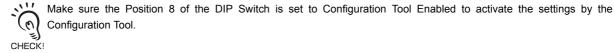



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-10. External Device Monitoring (EDM)

F3SG-RA Series	Х
F3SG-RE Series	

2-10-1. Overview

This function monitors if external relays (or contactors) operate normally to detect malfunctions, such as welding, in the external relays. When the N.C. contact of the external relays is open before the safety outputs switch from OFF to ON, the safety outputs remain in the OFF state. When the N.C. contact is not open within the allowable delay time after the safety outputs switch from OFF to ON, the F3SG-RA enters the Lockout state.


Wiring

Perform wiring so that the specified voltage is applied to the RESET input line via the N.C. contact of the extenal relays. Refer to the table below for the specified voltage.


The external relays or contactors must have the direct opening mechanism or be force-guided ones.

PNP/NPN	Voltage
PNP	Vs-3 V to Vs
NPN	0 V to 3 V

<Basic wiring diagram>

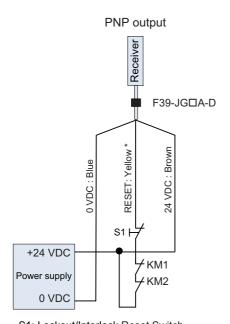


S1: Lockout/Interlock Reset Switch KM1, KM2: External device

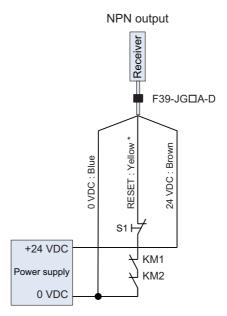

^{*} Also used as EDM input line

<Timing chart>

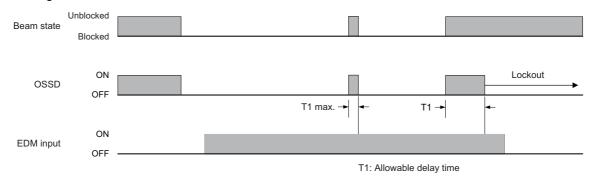



2-10-2. Factory Default Setting

The default setting is EDM Disable.

2-10-3. Setting with DIP Switch

The user can select the setting from EDM Enabled or Disabled by the DIP Switch. When it is enabled, the allowable delay time is set to 0.3 s.

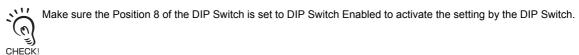

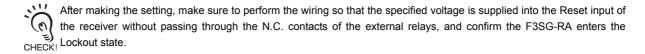

Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.

2-10-4. Setting with Configuration Tool

MARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Function	Factory Default Setting	Available Parameters	
EDM	Disable	Enable/Disable	
Allowable delay time	0.3 s	0.1 to 4 s in 0.1-s increments	



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.

After you make any in such a way that the CHECK! an external device. After you make any change to the setting, verify that the F3SG-RA goes to the Lockout state when the F3SG-RA is wired in such a way that the specified voltage is applied directly to the RESET input of the receiver without the N.C. contact of

Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-11. Auxiliary Output

WARNING WARNING

Do not use the auxiliary output for safety applications.

Failure to do so may result in serious injury when the F3SG-RA fails.



F3SG-RA Series	Х
F3SG-RE Series	

2-11-1. Overview

The auxiliary output is used to monitor the status of F3SG-RA. This output can be connected to a device such as an indication lamp, programmable controller, etc.


Usage Example:


- Indicate that F3SG-RA is in muting or override state
- Indicate that a machine is stopped (Safety outputs are in the OFF state)

<Basic wiring diagram>

Sh

own below are hard wirings for PNP and NPN types, respectively.

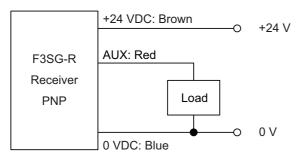

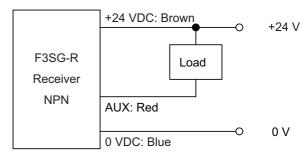



The load current of the auxiliary output is 100 mA max.


2-11-2. Factory Default Setting

The factory default setting is Muting/Override Information. When F3SG-RA is under a muting or override state, the F3SG-RA switches ON and OFF at 0.5 s (1 Hz).



2-11-3. Setting with DIP Switch

When the Interlock is set to Pre-Reset Enabled by the DIP Switch, the auxiliary output is configured as a inverted signal of the safety output. Other settings are configured as the same as the factory default setting.

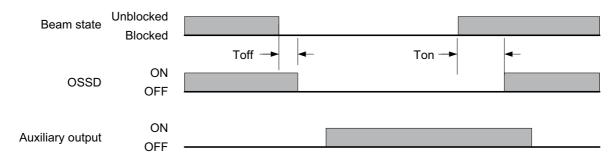

Ton: Response time OFF to ON Toff: Response time ON to OFF

2-11-4. Setting with Configuration Tool

⚠ WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

- Output operation mode
 Information to be allocated to the auxiliary output
- Inverted signal output mode
 Auxiliary output gives a inverted signal of the safety output.
- Output pattern
 Pattern to send an output signal from the auxiliary output


The user can make changes to the settings by the Configuration Tool.

Function Factory Default Setting		Available Parameters	
Output operation mode		*1	
Inverted signal output	Disable	Enable/Disable	
Output pattern ON 1 time *2		Solid-ON/ON 1 time/ON 2 times/ON 3 times *2	

- *1. Refer to the table of Information (Output operation mode) assigned to auxiliary output below.
- *2. Output signal is sent according to the patterns as shown in the output pattern chart below.

 | \(\) \(\) \(\) \(\) Refer to 2-12. Muting for more information on settings of the muting.

■ Output pattern chart

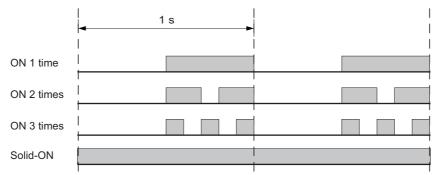

Information (Output operation mode) assigned to auxiliary output

Information Name	Description (Auxiliary output is turned ON under the following condition)	
Safety output information	When Safety output is in the ON state.	
Reset-input information	When Reset/EDM/Override input is in the ON state	
Interlock information	Under Interlock state	
Pre-reset Information	Under Pre-reset state	
Lockout information	Under error/ Lockout state	
Excess power-on time information	When power-on time exceeds power-on time threshold	

Information Name	Description (Auxiliary output is turned ON under the following condition)		
Excess load switching frequency information	When load switching frequency exceeds load switching frequency threshold		
Light level diagnosis information	When the F3SG-R is unblocked and light intensity is within a range from 100% to 170% of ON-threshold for 10 s or longer		
Blanking/Warning-zone information	When Fixed Blanking, Floating Blanking, Reduced Resolution or Warning Zone function is enabled		
Muting information	Under Muting state		
Override information	Under Override state		
Muting/Override information	Under either Muting or Override state		
Sequence error information	Under Muting sequence error state or Interlock sequence error state		
Warning Zone Information	When warning zone is interrupted		
Blanking bream unblocked information	When Fixed-Blanking or Floating Blanking beams are unblocked		
Designated beam output information	When a designated beam is blocked or unblocked		
Interference/vibration information	When the F3SG-R system stops accidentally due to interference or vibration. (In case of cascade connection, when any of cascaded segments comes under this condition.)		
Troubleshooting support signal	When one of the signals of Sequence error information, Interference/vibration information and Light level diagnosis information is in the ON state.		
Individual cascaded sensor output (Channel 1)	When Safety output of Primary sensor in cascade connection is the ON state		
Individual Cascaded Sensor Output (Channel 2)	When Safety output of 1st Secondary sensor in cascade connection is the ON state		
Individual Cascaded Sensor Output (Channel 3)	When Safety output of the 2nd Secondary sensor in cascade connection is the ON state		



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-12. Muting

F3SG-RA Series	Х
F3SG-RE Series	

Muting function temporarily disables safety function of the F3SG-RA, keeping safety output ON even if beams are interrupted. This makes it possible to install safety light curtains for AGV passage, enabling both safety and productivity. When muting, the top-beam-state indicator (TOP), bottom-beam-state indicator (BTM) and external indicator (if wired) connected to the auxiliary output blink to notify people in the surrounding zone that the safety functions are disabled.


The following three operation modes are available for the muting function.

- 1.Standard Muting Mode (factory default setting)
- 2.Exit-Only Muting Mode
- 3. Position Detection Muting Mode

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

The following settings are available for a beam range to be the muting state.

- All Range Disabled Setting
- · Partially Disabled Setting
- Dynamic Muting Setting

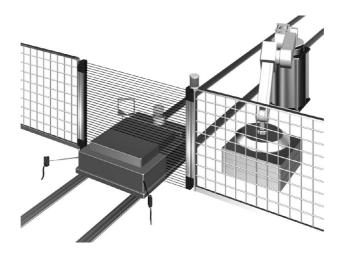

∕!\ WARNING

The muting and override functions disable the safety functions of the device. You must ensure safety using other method when these functions are operating.



Install muting sensors so that they can distinguish between the object that is being allowed to be passed through the detection zone and a person.



If the muting function is activated by the detection of a person, it may result in serious injury.

All muting lamps that indicate state of muting function must be installed where workers can see them from all the operating positions.



Use 2 independent input devices for muting input. A muting state may occur due to a single failure of the muting sensor.



You must install F3SG-RA, muting sensor, and physical barrier, and configure time settings for muting so that an operator should not enter hazardous zone.



The Dynamic Muting function can configure a new muting zone after muting is enabled based on a result of workpiece height measurement for a certain period of time. The function must be used after careful verification by a qualified person with sufficient training. Apply additional safety measures if required.



Using muting function

<Muting sensor>

The muting sensor is the sensor to trigger a signal to temporarily disable the safety functions of the F3SG-R. You can use a photoelectric switch of through-beam type or reflective type proximity switch, or limit switch. (Recommended: OMRON E3Z series, E2E series (3-wire type), D4N series) Use a 3-wire type transistor output, which is the same as the output type of the F3SG-RA, or N.O. type contact. Two-wire type sensor must not be used.



When the F3SG-RA is in PNP settings, use the muting sensor of the PNP transistor type. When the F3SG-RA is in NPN settings, use the muting sensor of the NPN transistor type.

<Muting lamp>

You may need a muting lamp depending on your application or as a result of a risk assessment analysis. Before determining the use of the muting lamp, check laws and regulations of the country or region where the F3SG-RA is used and make sure of full compliance with them. For the muting lamp, use a Lamp (sold separately) or a commercially available external indicator.

The external indicator can be connected to the auxiliary output.



For settings of the auxiliary output, see 2-11. Auxiliary Output.



For settings of the optional Lamp, see 2-21. Lamp

<LED indicator statuses of F3SG-RA: Receiver>

Top-beam-state indicator	Blinks during muting/override.	
Bottom-beam-state indicator		
Sequence error indicator	Blinks during a muting sequence error.	
Configuration indicator	If the Dynamic Muting function is enabled, the indicator flashes while measuring the workpiece height.	
	If the Dynamic Muting function is enabled, the indicator turns on after the new muting zone is reflected.	



For muting error indication, see 7-1-2-3. Muting Sequence Error Indication.



For dynamic muting, see 2-12-4. Dynamic Muting.



For the use in conjunction with other functions, see 2-1. Combination of Functions.

<Muting range>

You can specify a detection zone to be muted within the detection zone of the F3SG-RA.

Muting Range	Description	
Full Zone Muted State	Full area of the detection zone is muted.	
(factory default setting)	This disables the full detection zone and is used typically.	
Partial Zone Muted	A specified area in the detection zone configured by the Configuration Tool is muted.	
State	This can be used if you want to disable only a specific area of the detection zone.	
	Specifying the full zone results in the Full Zone Setting State.	
Dynamic Muting	This can be used by enabling the Dynamic Muting function.	
	The full detection zone is disabled for a certain time period from the start of the muting, then a partial zone is muted depending on the detected workpiece size.	
	2-12-4. Dynamic Muting	

2-12-1. Standard Muting Mode

The factory default setting is set to this mode.

Turning muting inputs A and B ON with time difference enables muting state.


■ Start Conditions

If both of the following two conditions are satisfied, the muting state is enalbed.

- 1. No interrupting object is found in the F3SG-RA's detection zone, and safety outputs are ON.
- 2. After muting input A is turned ON*, muting input B is turned ON* within the range between the muting input time limit values T1min (0.1 s) and T1max (4 s).
 - *PNP setting: Vs-3V to Vs, NPN setting: 0 to 3V

Muting state can be enabled in up to 80ms after the condition No.2 is satisfied.

When the condition No.1 is satisfied but the time requirement of the condition No.2 is not, a muting sequence error occurs and the Sequence error indicator on the receiver blinks. However, when there is a muting sequence error, the F3SG-RA does not enter the Muting state but it continues the normal operation with the safety function enabled.

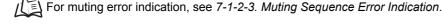

Muting error can be released by any of following conditions:

- 1. Correct muting initial condition continues for 0.1 s or longer. *
- 2. Power cycle when muting inputs A and B are in the OFF state.
- * The correct initial muting condition is the state where the following two conditions are satisfied.
 - Safety outputs of the F3SG-RA are turned ON.
 - · Muting input A and B are turned OFF.

End conditions


If either of the following conditions is satisfied, the muting state is released.

- · Muting input A or B turns OFF for the maximum allowable muting signal interruption of T3 (at least 0.1 s: configurable) or longer.
- The duration of the muting state exceeds the muting time limit of T2 (at least 60 s: configurable).



Muting state is also released when the F3SG-RA enters the Lockout state.


■ Timing chart

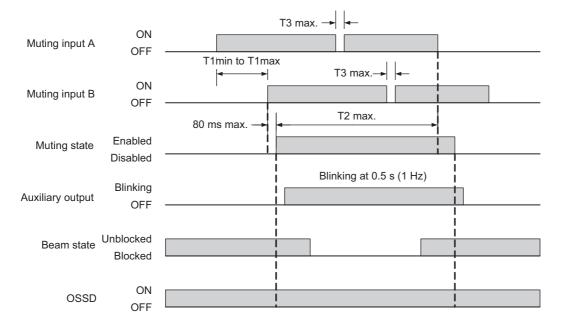

■ Default settings

Variable	Variable name	Value	Description
T1min	Muting input time limit value (minimum)	0.1 s	Minimum time difference between muting inputs A and B. If the time difference between muting inputs A and B is smaller than this value, a muting sequence error occurs.
T1max	Muting input time limit value (maximum)	4 s	Maximum time difference between muting inputs A and B. If the time difference between muting inputs A and B is larger than this value, a muting sequence error occurs.
T2	Muting time limit	60 s	The duration time of the Muting function. The Muting state is cancelled if it continues for longer than this time limit.
Тз	Maximum allowable muting signal interruption	0.1 s	Maximum duration of a signal interruption allowed in muting inputs A and B.

■ Wiring diagram

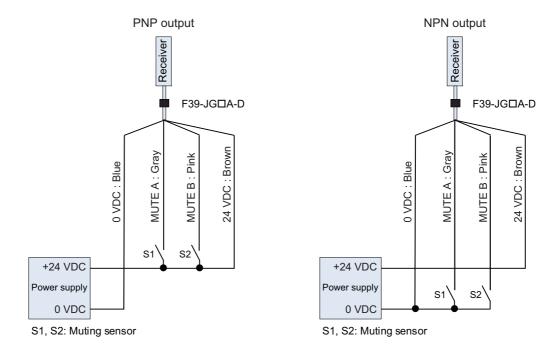

■ Installation standard for muting sensors


- Set the muting sensors so that they can detect all of the passing detection (palettes, automobiles, etc.). Do not install the muting sensor in a position so that only the front or rear end of the objects is detected.
- Set the muting sensors so that they detect the objects even when they are loaded on palettes or other transport devices.
- Also, install the F3SG-R and muting sensors so that each object passes through all muting sensors before the next object arrives at the first muting sensor. Also, install all F3SG-Rs and muting sensors so that no person is able to accidentally enter the hazardous zone while the muting function is enabled.
- If objects' speeds can vary, the allocation of muting sensors must be taken into consideration.
- Install muting sensors so that they can distinguish between the object that is being allowed to be passed through the detection zone and a person.

■ Installation example 1 of standard muting mode (Using two muting sensors)

This is an example of two retro-reflective type photoelectric sensors used as muting sensors installed in a cross pattern.

Use two sensors when the length L of the workpieces are not constant or are insufficient.

1. Before a workpiece passes through

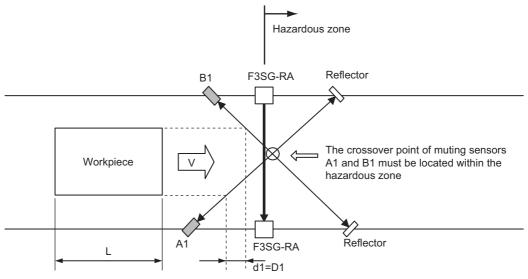


- L: Length of workpiece
- d1: Maximum distance required for the muting sensor to keep the muting function enabled
- D1: Minimum distance required for the muting sensor to keep the muting function enabled

The output state of muting sensors A1 and B1 are both OFF, and the safety function of the F3SG-RA is working.


In this example where two muting sensors are used, the crossover point of muting sensors A1 and B1 is in the hazardous zone. This configuration prevents the muting function from being enabled by a person passing through the crossover point.

2. Muting state started

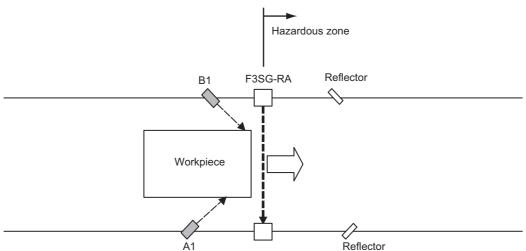


When muting sensors A1 and B1 are turned ON in this order, the F3SG-R enters the muting state. In this state, the safety function of F3SG-RA is disabled.

3. Muting state is maintained

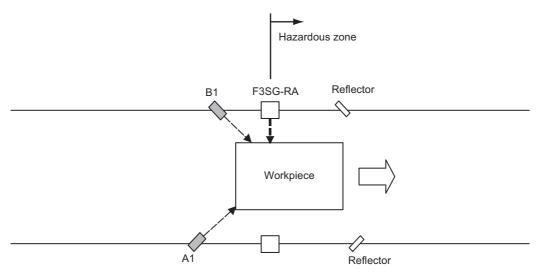

The F3SG-RA is blocked but the safety function is disabled due to the muting state, and safety outputs 1 and 2 are turned ON.

4. The muting state is released

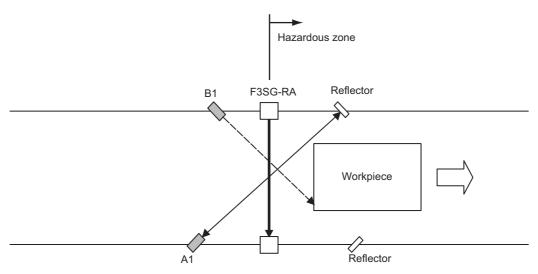

Muting sensor A1 is turned OFF, the muting state is released, and the safety function of the F3SG-RA is enabled.

<Installation distance>

The minimum distance, D1 [m], required for muting sensors to keep the muting state enabled is:

D1 < L Formula (1)

L [m]: Length of a workpiece

The maximum distance, d1 [m], required for muting sensors to keep the muting state enabled is :

 $V \times T1min < d1 < V \times T1max \dots$ Formula (2)

V [m/s]: Approach speed of a workpiece

T1min [s]: Muting input time limit value (minimum). It is set as 0.1 s.

T1max [s]: Muting input time limit value (maximum). It is set as 4 s.


To enable the muting state, D1 and d1 must satisfy formulas (1) and (2), respectively.


This distance must prevent the muting state from being enabled by a person passing through the muting sensors.

Also, install the F3SG-R and muting sensors so that each workpiece passes through all muting sensors before the next workpiece arrives at the first muting sensor (PNP mode).

<Wiring diagram (PNP setting)>


Using a photoelectric switch as a muting sensor

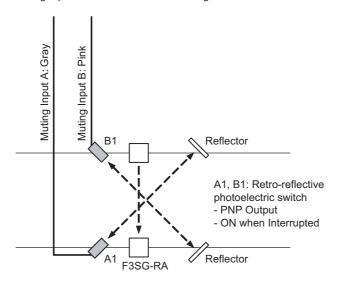

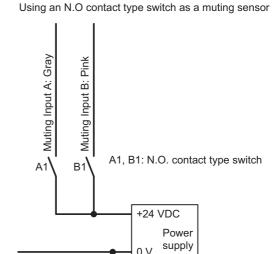

Note. Two-wire type muting sensor cannot be used.


<Timing chart>

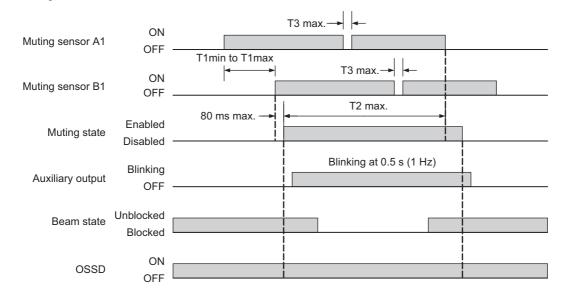

■ Installation example 2 of standard muting mode (Using four muting sensors)

This installation example uses four through-beam type photoelectric sensors as muting sensors. The use of four muting sensors is useful when the length of the workpieces is constant or longer, and the entrance and exit have enough space. Muting can be performed from both directions in the arrangement as shown below.


1. Before a workpiece passes through

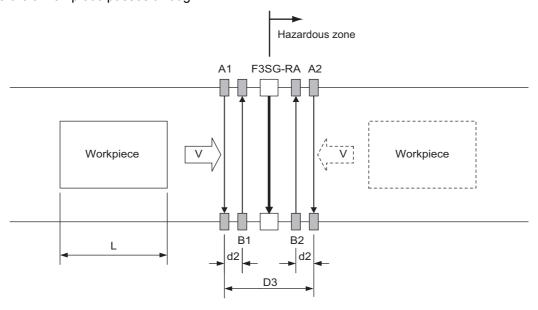

- d2: Maximum distances required for the muting sensor to keep the muting function enabled
- D3: Minimum distance required for the muting sensor to keep the muting function enabled


All muting sensors are turned OFF and the safety function of the F3SG-RA is working.

${f 2.}$ The muting sensor is blocked and the safety function of the F3SG-RA is disabled

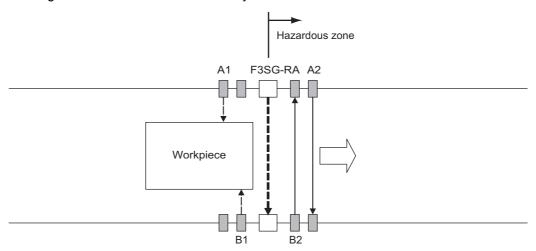


When muting sensors A1 and B1 are turned ON in this order, the muting state is enabled. In this state, the safety function of F3SG-RA is disabled.

 $oldsymbol{3}$. The muting sensor is blocked and the safety function of the F3SG-RA is disabled

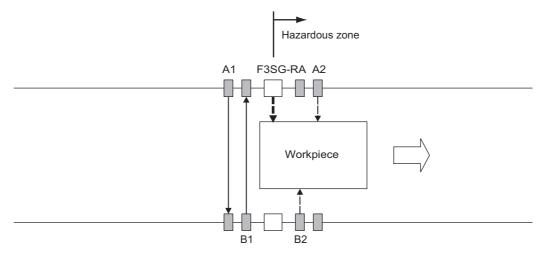

Muting sensors A1 and B1 are turned OFF but A2 and B2 are ON, so the muting state is still maintained. Safety outputs 1 and 2 are turned ON.

4. The muting state is released

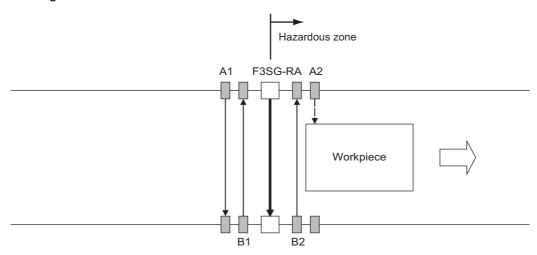

Muting sensor B2 is turned OFF, the muting state is released, and the safety function of the F3SG-RA is enabled.

<Installation distance>

The minimum distance, D3 [m], required for muting sensors to keep the muting state enabled is:

D3 < L Formula (3)

L [m]: Length of a workpiece

The maximum distance, d2 [m], required for muting sensors to keep the muting state enabled is :

 $V \times T1min < d2 < V \times T1max \dots$ Formula (4)


V [m/s] : Approach speed of a workpiece

T1min [s] : Muting input time limit value (minimum). It is set as 0.1 s. (configurable)

T1max [s]: Muting input time limit value (maximum). It is set as 4 s. (configurable)

To enable the muting state, D3 and d2 must satisfy formulas (3) and (4), respectively.


This distance must prevent the muting state from being enabled by a person passing through the muting sensors. Also, install the F3SG-RA and muting sensors so that each workpiece passes through all muting sensors before the next workpiece arrives at the first muting sensor.

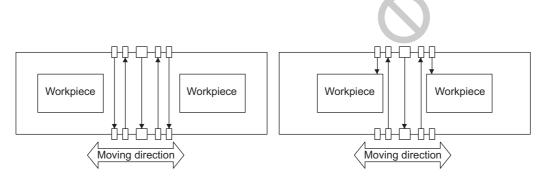

<Wiring diagram (PNP setting)>


Using a photoelectric switch as a muting sensor

Using an N.O. contact type switch as a muting sensor (PNP mode)

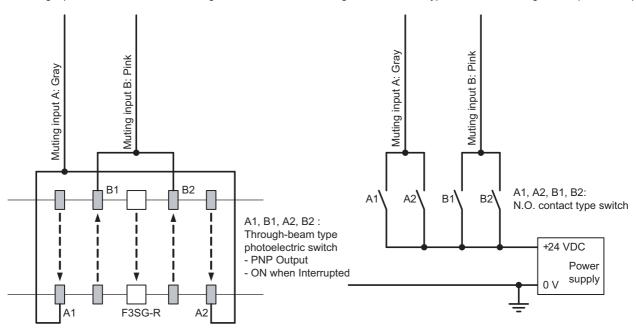

Note. Two-wire type muting sensor cannot be used.


<Timing chart>

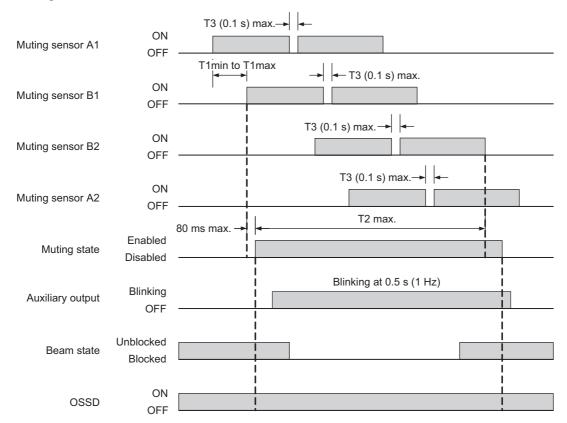

<Reference: Preventing light interference of muting sensor>

When a photoelectric sensor is used as a muting sensor, light interference may cause a muting error of F3SG-RA.

The cause and measures for light interference are shown as follows:

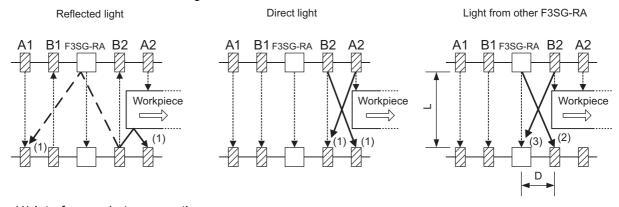

(1) Interference between muting sensors

- Use sensors with mutual interference prevention (such as retro-reflective E3Z-R□□ series)
- Use laser-type sensors (such as laser-type E3Z-LR□ series)
- Take distance from a sensor causing the interference
- Displace beams for each other to prevent interference (change installation height or place them crosswise)
- · Install a physical barrier
- Attach interference prevention filter (provided for E3Z series as accessories)
- Attach a slit to reduce light intensity (provided for E3Z series as accessories)
- · Lower the sensitivity
- · Reduce a distance between a workpiece and a muting sensor to prevent reflected light from a workpiece

- (2) Interference to a muting sensor from F3SG-RA
 - Take distance (D) from a sensor causing the interference
 - Displace beams for each other to prevent interference (change installation height or place them crosswise)
 - · Install a physical barrier
 - · Arrange sensors in alternation
 - · Lower the sensitivity
- (3) Interference to F3SG-RA from a muting sensor
 - Use a red LED type sensor (such as retro-reflective E3Z-R□□ series)
 - Use laser-type sensors (such as laser-type E3Z-LR□ series)
 - Take distance (D) from a sensor causing the interference
 - Displace beams for each other to prevent interference (change installation height or place them crosswise)
 - Install a physical barrier
 - · Arrange sensors in alternation
 - Attach a slit to reduce light intensity (provided for E3Z series as accessories)

Mutual interference between a muting sensor and F3SG-RA in (2) and (3) above can be prevented by configuring D satisfying a formula shown below:

- •If L = 0.3 to 3 m, D = 0.26 m or larger
- •If L = 3 m or larger, D = L x tan5° = L x 0.088 m or larger
- L: Distance between an emitter and a receiver of the F3SG-RA
- D: Distance between a muting sensor and a F3SG-RA

2-12-2. Exit-Only Muting Mode

Turning muting inputs A and B ON with time difference enables muting state.

Difference from standard mode exists in muting completion condition.


Start conditions

If both of the following 2 conditions are satisfied, the muting state is enalbed.

- 1. No interrupting object is found in the F3SG-RA's detection zone, and the safety outputs are ON.
- 2. After muting input A is turned ON*, muting input B is turned ON* within the range between the muting input time limit values T1min (0.1 s) and T1max (4 s).
 - *PNP setting: Vs-3V to Vs, NPN setting: 0 to 3V

Muting state can be enabled in up to 80 ms after the condition No.2 is satisfied.

If the condition No.1 is satisfied but the time requirement of the condition No.2 is not, a muting error occurs, and the Sequence error indicator on the receiver turns ON. However, when there is a muting error, the F3SG-RA continues the normal operation with the safety function enabled.

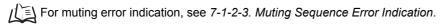

Muting error can be released by any of following conditions:


- 1. Correct muting initial condition continues for 0.1 s or longer. *
- 2. Power cycle when the muting inputs A and B are in the OFF state.
- * The correct initial muting condition is the state where the following two conditions are satisfied.
 - Safety outputs of the F3SG-RA are turned ON.
 - · Muting input A and B are turned OFF.

■ End conditions

If any of the following condition is satisfied, the muting state is released.

- When a workpiece passes a muting sensor A or B and the exit-only muting delay time (4 s) passes.
- When a workpiece passes F3SG-R's detection zone and the muting end wait time (1 s: configurable) passes.
- The duration of the muting state exceeds the muting time limit (60 s: configurable).

■ Timing chart

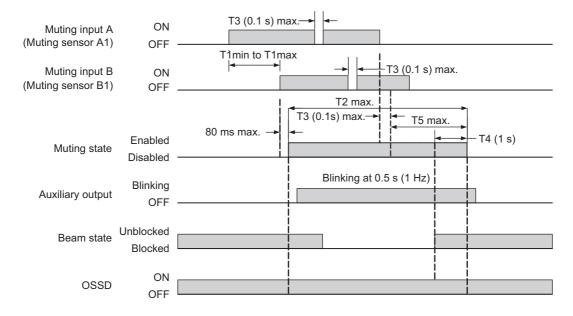


^{*} This timing chart shows the case in which the muting state was released under the condition of T4 (1 s).

■ Factory default setting

Variable	Variable name	Value	Description
T1min	Muting input time limit value	0.1 s	Minimum time difference between muting inputs A and B.
	(minimum)		If the time difference between muting inputs A and B is smaller
			than this value, a muting sequence error occurs.
T1max	Muting input time limit value	4 s	Maximum time difference between muting inputs A and B.
	(maximum)		If the time difference between muting inputs A and B is larger
			than this value, a muting sequence error occurs.
T2	Muting time limit	60 s	The duration time of the Muting function. The Muting state is
			cancelled if it continues for longer than this time limit.
T3	Maximum allowable muting	0.1 s	Maximum duration of a signal interruption allowed in muting
	signal interruption		inputs A and B.
T4	Muting end wait time	1 s	Time difference from when the F3SG-RA is unblocked until the
			Muting state is cancelled.
T5	Exit-only muting delay time	4 s	Time difference from when the signal of Muting input A or B is
			turned OFF until the Muting state is cancelled.

■ Wiring diagram

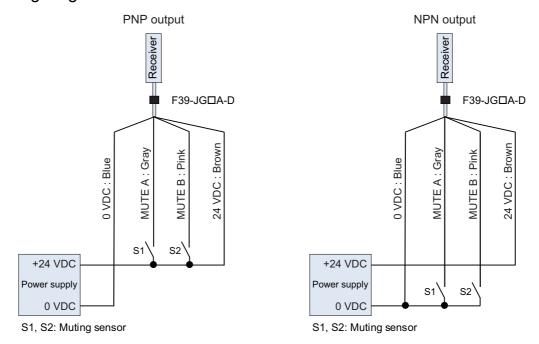


■ Installation Example of Exit-Only Muting Mode

This is an installation example of exit-only muting mode. When exit-only muting mode is set, install the muting sensor on the hazardous side of the workpiece exit.


This can be used if a workpiece has a certain length and the hazardous side of the workpiece exit has enough space around it.

1. Before a workpiece passes through

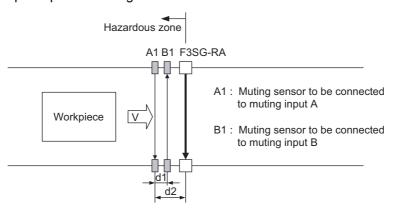


All muting sensors are turned OFF and the safety function of the F3SG-RA is working.

2. The muting sensor is blocked and the safety function of the F3SG-RA is disabled

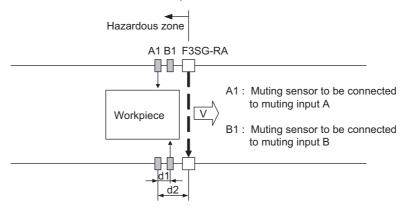


When muting sensors A1 and B1 are turned ON in this order, and the muting state is enabled. In this state, the safety function of F3SG-RA is disabled.

3. Muting sensor A1 is turned OFF

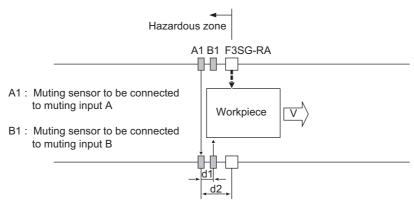


The workpiece has completely passed the muting sensor A1 and the sensor starts turning OFF. For standard muting system, muting is released here. For exit-only muting, F3SG-RA's safety function is disabled for the exit-only muting delay time: T5.

4. Muting sensor B1 is turned OFF

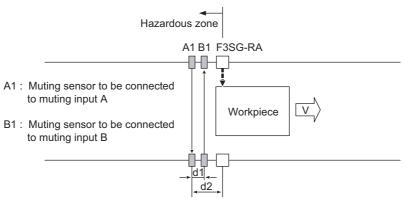

The workpiece has completely passed the muting sensor B1 and the sensor is turned OFF. F3SG-RA disables its safety function if it is within the exit-only muting delay time.

5. The workpiece passed F3SG-RA's detection zone

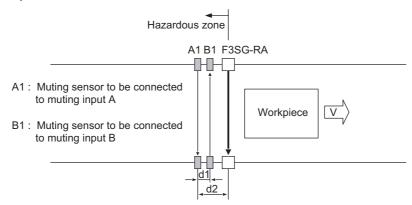

A workpiece has passed F3SG-RA's detection zone. When the muting end wait time: T4 (1 s: configurable) passes after the F3SG-RA is unblocked, the muting state is released.

■ Installation Distance

Distances between muting sensors A1, B1, and F3SG-RA must be configured based on speed of a workpiece.

Distance d1 between muting sensors A1 and B1 must satisfy Equations (1) and (2).

Distance d2 between muting sensor A1 and F3SG-RA must satisfy Equations (3) and (4).


Time t1 [s] to turn muting sensors A1 and B1 in this order is:

Time t1 in Equation (1) for F3SG-RA to enter muting state is within a range shown below:

The values of T1_{min} and T1_{max} can be changed by the Configuration Tool.

Time t2 [s] for a workpiece to pass F3SG-RA's detection zone after passing the muting sensor A1 is: $t2 = d2 / V \dots Equation (3)$ d2 [m] : Distance between muting sensor A1 and F3SG-RA V [m/s] : Approach speed of a workpiece

Time t2 in Equation (3) must satisfy following condition:

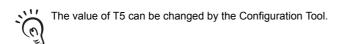


Sensors must be installed so that person's passing should not cause muting state.


CHECK!

CHECK

Also, muting sensors and F3SG-RA must be installed so that muting state caused by a workpiece should be ended before the next workpiece arrives at the first muting sensor.

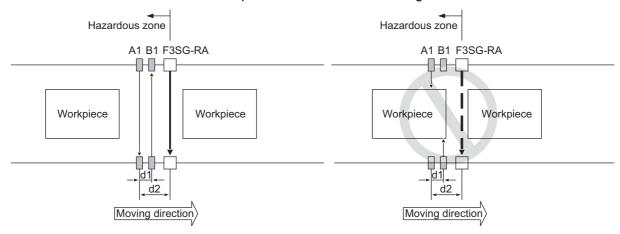

■ Timing Chart

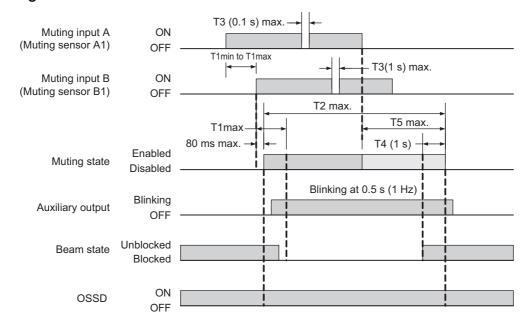

2-12-3. Position Detection Muting Mode

Muting state is enabled when muting input A turns ON from the OFF state and muting input B turns OFF from the ON state within the muting input time limit value T1max, measured by a limit switch, etc. Muting inputs must be heterogeneous redundant inputs such as the combination of N.O. contact and N.C. contact types. (When using photoelectric sensors of PNP output, use one for Light-ON operation while the other for Dark-ON.) This mode can be used for such a case that the F3SG-RA should be temporarily disabled while a worker puts objects at a loading station.

Start conditions

If both of the following 2 conditions are satisfied, the muting state is enalbed.

- 1. No interrupting object is found in the F3SG-RA's detection zone, and the safety outputs are ON.
- 2. The duration between when the muting input A is turned ON* from the OFF state and when the muting input B is turned OFF from the ON state* is within the range between the muting input time limit values T1min (0.1 s) and T1max (4 s). Order of muting inputs A and B is irrelevant.

*PNP setting: Vs-3V to Vs, NPN setting: 0 to 3V

Muting state can be enabled in up to 80 ms after the condition No. 2 is satisfied.

If the condition No. 1 is satisfied but the time requirement of the condition No.2 is not, a muting error occurs, and the Sequence error indicator on the receiver turns ON. However, when there is a muting error, the F3SG-RA continues the normal operation with the safety function enabled.



For muting error indication, see 7-1-2-3. Muting Sequence Error Indication.

Muting error can be released by any of following conditions:

- 1. Correct muting initial condition continues for 0.1 s or longer. *1
- 2. Power cycle when the muting inputs A and B are in the OFF state.
- *1 The correct initial muting condition is the state where the following two conditions are satisfied.
 - · Safety outputs of the F3SG-RA are turned ON.
 - · Muting input A is turned OFF and Muting input B is turned ON.

■ End conditions


If any of the following conditions is satisfied, the muting state is released.

- Muting input A is in the OFF state for T3 or longer (0.1 s or longer).
- Muting input B is in the ON state for T3 or longer (0.1 s or longer).
- The duration of the muting state exceeds the muting time limit of T2 (60 s).




Muting state is also released when the F3SG-RA enters the Lockout state.

■ Timing chart

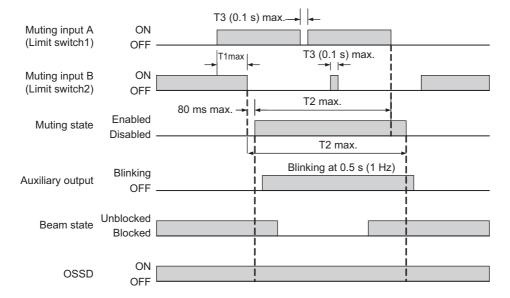

Variable	Variable name	Value	Description
T1max	Muting input time limit value (maximum)	3 s	Maximum time difference between muting inputs A and B. If the time difference between muting inputs A and B is larger than this value, a muting error occurs.
T ₂	Muting time limit	60 s	The duration time of the Muting function. The Muting state is cancelled if it continues for longer than this time limit.
Т3	Maximum muting input pulse duration	0.1 s	Maximum muting input time with allowable waveform cracks in muting input A and B.

■ Wiring diagram

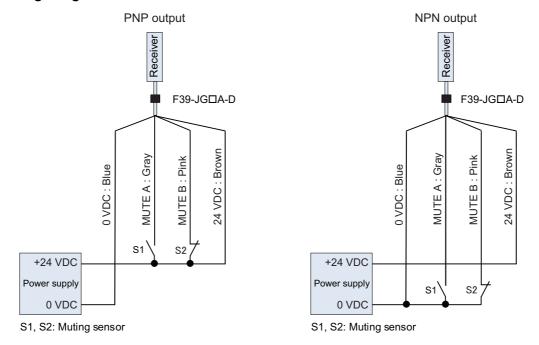


■ Installation Example of Position Detection Muting Mode

Shown below is an installation example of position detection muting mode.


This is an application that places a workpiece on a machine's turntable surrounded by guard fence. When hazardous part of the machine is on the opposite side of a human body, safety function of F3SG-RA can be disabled so that an operator should be able to place a workpiece on the turntable.

1. Hazardous part of the machine is on the same side of a human body

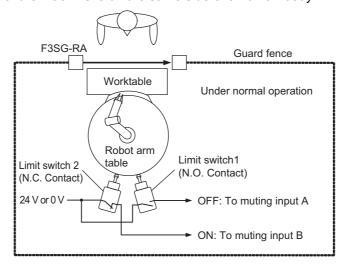


The safety functions of the F3SG-RA is activated with the limit switch 1 being in the OFF state and the limit switch 2 in the ON state.

2, Hazardous part of the machine is on the opposite side of a human body

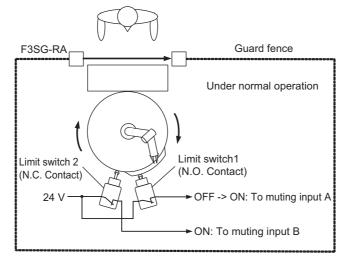


Rotation of a robot arm sets the muting input A from OFF to ON. Safety function of F3SG-RA is enabled.

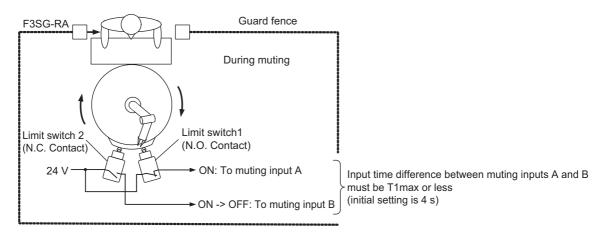


If the duration between when the muting input A is turned ON from the OFF state and when the muting input B is turned OFF from the ON state is within T1max [s], the safety function of the F3SG-RA is disabled. (Safety outputs are kept ON even if F3SG-RA is blocked)

Time t1 [s] for F3SG-RA to enter muting state is within the range shown below:

t1 < T1max..... Equation (5) T1max [s]: Muting input time limit value (maximum)

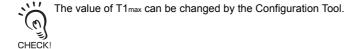

■ Timing Chart

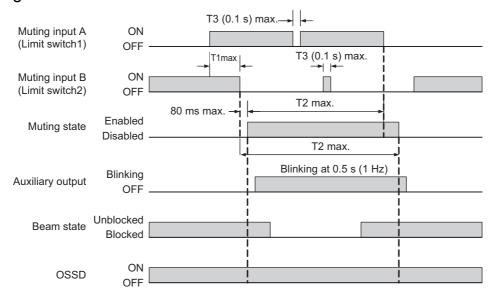

2-12-4. Dynamic Muting

The Dynamic Muting function can configure a new muting zone while the muting state is enabled, based on a result measuring a workpiece height for a certain period of time.

This materializes safer muting function with a limited muting zone adjusted according to a workpiece height.

■ Usage Example

This function cannot be used for an application in which a workpiece height gets larger after measuring the zone as shown below.

Applicable	e Example	NOT Applicable Example	
Application Examples	Position after Zone	Application Examples	Position after Zone
	Measurement		Measurement
	New zone		New zone
	New zone		New zone
	New zone		New zone
	New zone		New zone

■ Zone Measurement Start Condition

After the muting start condition is satisfied and the full detection zone is muted, interruption of a part of the F3SG-RA causes the Zone Measurement to start.

■ Zone Measurement

The Zone Measurement monitors the highest and lowest parts of a passing workpiece during the dynamic muting measurement time Tdyn (3 s). (Void spaces in workpiece(s) are ignored.)


■ Zone Determination

A zone enclosed by the highest and the lowest parts of the workpiece is set as a new muting zone. Configuring a dynamic muting allowable beam allows the muting zone to be expanded by the number of allowable beams. Configuring a dynamic muting allowable beam prevents unintended line stop due to swing of a workpiece, etc. (The factory default setting of the dynamic muting allowable beam is 1.)

■ Dynamic Muting Allowable Beam

The dynamic muting allowable beam allows the muting zone measured by the Zone Measurement to be expanded by the number of additional beam(s) specified as allowable beam.

■ Timing chart

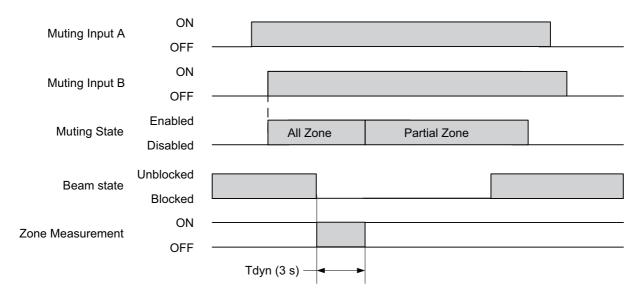

2-12-5. Factory Default Setting

In the factory default setting, the muting mode is set to Standard Muting Mode and the dynamic muting to Disable.

2-12-6. Setting with DIP Switch

If the pre-reset function is enabled by the DIP Switch, the muting function is disabled. Otherwise the muting function is always being enabled.

Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.

2-12-7. Setting with Configuration Tool

MARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Function	Factory Default Setting	Available Parameters
Muting function	Enable	Enable/Disable
Muting mode	Standard muting mode	Standard muting mode/Exit-only muting mode/Position detection muting mode
Statistics data recording	Enable	Enable/Disable

Refer to 2-24-6. Muting Statistics Information for more information.

Standard Muting Mode

Function	Factory Default Setting	Available Parameters
Muting zone	All beams	1 to all beams in 1-beam increments
T1 _{min} : Muting input time limit value (minimum)	0.1 s	0.1 to 3.9 s in 0.1-s increments
T1 _{max} : Muting input time limit value (maximum)	4 s	0.2 to 60 s in 0.1-s increments, or infinite
T2: Muting time limit	60 s	1 to 600 s in 1-s increments, or infinite
T3: Maximum allowable muting signal interruption	0.1 s	0.1 to 20 s in 0.1-s increments

Exit-Only Muting Mode

Function	Factory Default Setting	Available Parameters
Muting zone	All beams	1 to all beams in 1-beam increments
T1min: Muting input time limit value (minimum)	0.1 s	0.1 to 3.9 s in 0.1-s increments
T1 _{max} : Muting input time limit value (maximum)	4 s	0.2 to 60 s in 0.1-s increments, or infinite
T2: Muting time limit	60 s	1 to 600 s in 1-s increments, or infinite
T3: Maximum allowable muting signal interruption	0.1 s	0.1 to 4 s in 0.1-s increments
T4: Muting end wait time	1 s	0.1 to 20 s in 0.1-s increments
T5: Exit-only muting delay time	4 s	4 to 20 s in 0.1-s increments

Position Detection Muting Mode

Function	Factory Default Setting	Available Parameters
Muting zone	All beams	1 to all beams in 1-beam increments
T1 _{max} : Muting input time limit value(maximum)	4 s	0.2 to 60 s in 0.1-s increments, or infinite
T2: Muting time limit	60 s	1 to 600 s in 1-s increments, or infinite
T3: Maximum allowable muting signal interruption	0.1 s	0.1 to 4 s in 0.1-s increments

Dynamic Muting

Function	Factory Default Setting	Available Parameters
Dynamic muting	Disable	Enable/Disable
Dynamic muting measurement time	3 s	0.1 to 20 s in 0.1-s increments
Number of dynamic muting allowable beams	1	0 to 5 in 1-beam increments



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



Setting the muting time limit to infinite may cause a failure of the muting sensors to go undetected, resulting in the F3SG-RA in an unintended muting state. Conduct risk assessment analysis thoroughly before enabling this setting.



Setting the muting input time limit value (maximum) to infinite may cause a failure of the muting sensors to go (n) undetected, resulting in a failure of disabling the muting state. Conduct risk assessment analysis thoroughly before CHECK! enabling this setting.



Dynamic Muting can be used in conjunction with any of Standard, Exit-only and Position detection muting modes.




Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-13. Override

F3SG-RA Series	Х
F3SG-RE Series	

The override function turns the safety outputs ON when the muting start condition is not satisfied. If a workpiece stops while passing through the F3SG-RA, as shown below, causing a muting error, the normal state cannot be recovered unless the workpiece is removed from the muting sensors and the detection field of the F3SG-RA. However, the override function will mute the safety outputs of the F3SG-RA so that the conveyor only can be restarted to move the workpiece out of the muting sensors and detection zone.

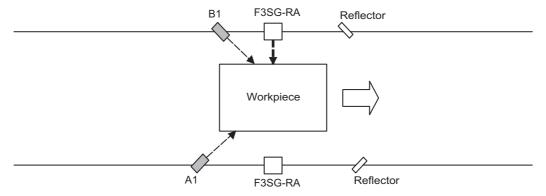

The override function can be enabled for up to 600 s.

Receiver's top-beam-state indicator and bottom-beam-state indicator blink during override.

⚠ WARNING

The muting and override functions disable the safety function of the device. You must ensure safety using other method when these functions are operating.



Install the switch that uses hold-to-run device such as a spring-return key switch. Install the switch in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone. Make sure that nobody is in the hazardous zone before activating the override function.



Override time must be properly configured for its application by a sufficiently trained and qualified person.



Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.



2-13-1. Override at Normal Operation

You can enable the override function under the normal operation.

Override start conditions

If all of the following conditions are satisfied, the override state is enabled. The override state can be enabled even when there is a muting error.

- 1. Either muting input A or B is in the ON state. (One or more muting sensors are turned ON by a workpiece)
 - This does not apply to Exit-Only Muting mode.
- 2. The F3SG-RA is blocked and the safety outputs are in the OFF state.
- 3. An input signal of a special sequence is entered three times to the reset input when the conditions No. 1 and 2 above are satisfied. The signal must be entered within a range from 0.1 s to the override input time limit T1 (1 s). (See the timing chart below.)



The F3SG-RA does not enter Override state when the sensor is in Lockout state.

■ Override end conditions


When any of the following conditions is satisfied, the override state is released.

- 1. A period of 600 s (configurable) passes in the override state.
- 2. All muting sensors are turned OFF.
- 3. The F3SG-RA is unblocked (during exit-only muting mode).
- 4. The following signal to cancel the override state is entered:
 - When the external device monitoring function is enabled, the reset input is turned ON. (PNP: Connected to Vs-3 V~Vs; NPN: Connected to 0 V~3 V)
 - When the external device monitoring function is disabled, the reset input is turned OFF.



Override state can be also released when the F3SG-RA enters the Lockout state.

■ Timing chart

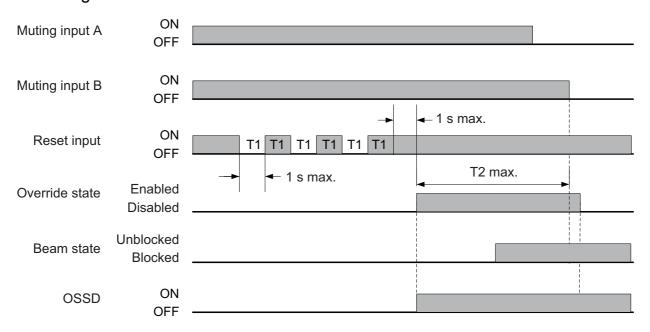


Ε

■ Factory default setting

Variable	Variable name	Value	Description
T2	Override time limit	600 s	The duration time of the Override function. The Override state is cancelled if it continues for longer than this time limit.


■ Wiring diagram

When External Device Monitoring Enabled

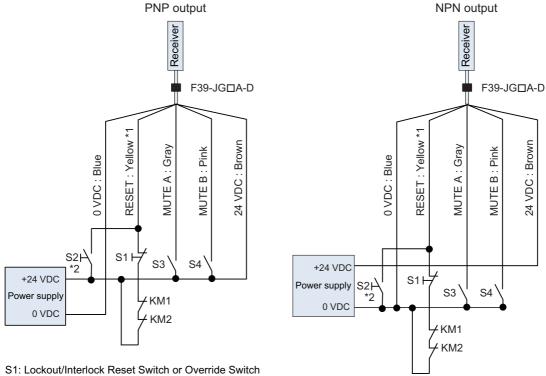

- S2: Override Cancel Switch
- S3, S4: Muting sensor
- KM1, KM2: External device feedback
- *1. Also used as Override input line.
 *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.

When Position Detection Muting and External Device Monitoring Disabled

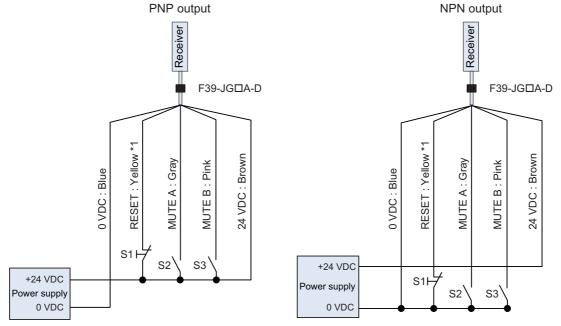

S1: Lockout/Interlock Reset Switch, Override Switch or Override Cancel Switch

S2, S3: Muting sensor

2-13-2. Override upon Startup

You can enable the override state by entering a special sequence when the power is turned on. This function is dedicated to exit-only muting mode.

Under the standard muting mode or the position detection muting mode, a workpiece can be ejected using the override function under the normal operation as any of muting inputs always turns on even if the power is restarted while muting CHECK! failed.

Override start conditions

When all of the following conditions are satisfied, the override state is enabled. The override state can be achieved even when there is a muting error.

- 1. F3SG-RA is interrupted
- 2. An input signal of a special sequence is entered three times to the reset input within 2 to 5 s after power-on. The signal must be entered within a range from 0.1 s to the override input time limit T1 (1 s). (See the timing chart below.)

Override end conditions

When any one of the following conditions is satisfied, the override state is released.


- 1. A period of 600 s (configurable) passes in the override state
- 2. The F3SG-R is unblocked
- 3. The following signal to cancel the override state is entered:
 - When the external device monitoring function is enabled, the reset input is turned ON. (PNP: Connected to Vs-3 V~Vs; NPN: Connected to 0 V~3 V)
 - When the external device monitoring function is disabled, the reset input is turned OFF.



Override state can be also released when the F3SG-RA enters the Lockout state.

^{*1.} Also used as Override input line.

■ Timing chart

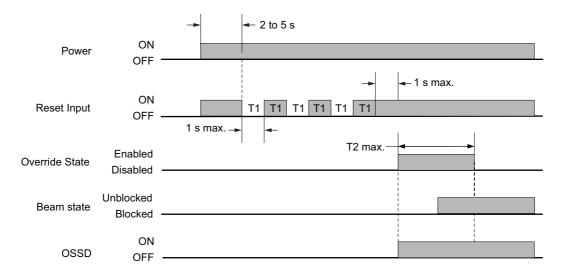

2-13-3. Setting with DIP Switch

The user cannot make any changes to this function by the DIP Switch.

2-13-4. Setting with Configuration Tool

WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Function name	Factory Default Setting	Available Parameters
Override	Enable	Enable/Disable
Override time limit	600 s	1 to 600 s in 1-s increments, or infinite

(0)

Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



CHECK!

Setting the override time limit to infinite may cause a failure of disabling the override state when there is a failure of the override input signal. Conduct risk assessment analysis thoroughly before enabling this setting.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-14. Fixed Blanking

∕!\ WARNING

Install protective structure for all zones of disabled zone so that a worker should not be able to approach hazardous zone of a machine without passing through zones disabled by the fixed blanking function.



Otherwise it may result in serious injury.

If allowable beams are designated for fixed blanking, detection capability gets larger near an object that interrupts beams. Calculate a safety distance based on the setting. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



Responsible Person must ensure that a test rod should be detected in all zones where it should be detected after setting the fixed blanking function. Failure to do so may result in serious injury.



F3SG-RA Series	Х
F3SG-RE Series	

2-14-1. Overview

■ Fixed Blanking Function

This function disables a part of F3SG-RA detection zone. The safety output stays in the ON state even if an object exists in the disabled zone.


One zone consists of continuous beams for the fixed blanking setting, and the number of zones can be configured up to three zones, from fixed blanking zone 1 to 3. Note that you cannot configure fixed blanking for all beams. In addition, fixed blanking cannot be configured for both beams of the ends (synchronization beams) of the primary sensor at the same time.

■ Fixed Blanking Zone Setting

A zone for fixed blanking zone must be configured. It is possible to perform teaching and set the designated beams manually with the interrupting object placed in the appropriate position. In this example shown below, the 5th and 10th beams are set as bottom and top beams respectively.



For details of the teach-in setting, see 3-3-1. Setting Fixed Blanking by Teach-in.

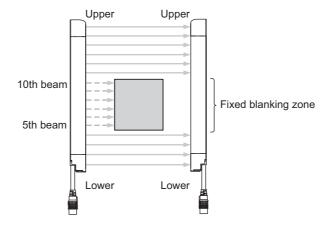

■ Fixed Blanking Monitoring Function

For safety reasons, F3SG-RA transitions to lockout state* if part of a fixed blanking zone is unblocked. (Factory default setting.)

When the F3SG-RA is set to Blanking Zone Cancelled, the fixed blanking function is cancelled if part of a fixed blanking zone is unblocked.

In this case, power cycle enables the fixed blanking function again with the same setting as previous one.

Turn off the power and on again while all fixed blanking zones are interrupted.

Setting to Monitoring disabled disables the blanking monitoring.

* Allowable beams configured on both ends of fixed blanking zone are not monitored.


■ Allowable Beam

Allowable beam represents a beam out of the target of fixed blanking monitoring. This should be configured for a fixed blanking beam that is irregularly blocked and unblocked due to an interrupting object's oscillation.

If a fixed blanking zone is configured by teach-in, the 2 upper and 2 lower beams of the fixed blanking zone are configured as allowable beams.

See below for an example.

In this case, 5th, 6th, and 10th beams are set as allowable beams. These beams is repeatedly blocked and unblocked due to an interrupting object's oscillation. But because these beams are not the target of the monitoring, the F3SG-RA keeps the safety outputs in the ON state.

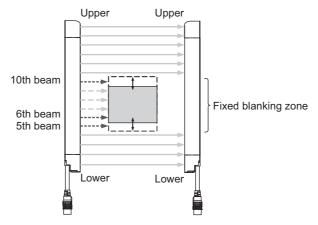

Number of allowable beams available for fixed blanking beams

Number of Fixed Blanking Beams	Maximum Number of Allowable Beams
1*	Setting not possible
2*	1
3	2
4	3
n	n-1

^{*} When setting by Teach-in, the minimum zone is specified by 3 beams.

For detection capability on the border between the blanking zone and normal detection zone when allowable beam is configured, see next table.

Detection capability on the border between the blanking zone and normal detection zone when allowable beam is specified.

[mm]


Allowable Beam on One End	F3SG-□RA□□□□-14	F3SG-□RA□□□□-30
Disable	14 (same as nominal)	30 (same as nominal)
1 beam	24	50
2 beams	34	-

■ F3SG-R LED indicator status

When fixed blanking is being enabled, the blanking indicator turns on.

■ Constraint between Fixed Blanking Zones

More than one fixed blanking zone can be configured adjacently (Figures 1 and 2). But allowable beams cannot be set adjacently (Figure 3). You cannot overlap fixed blanking zones. (Figure 4)

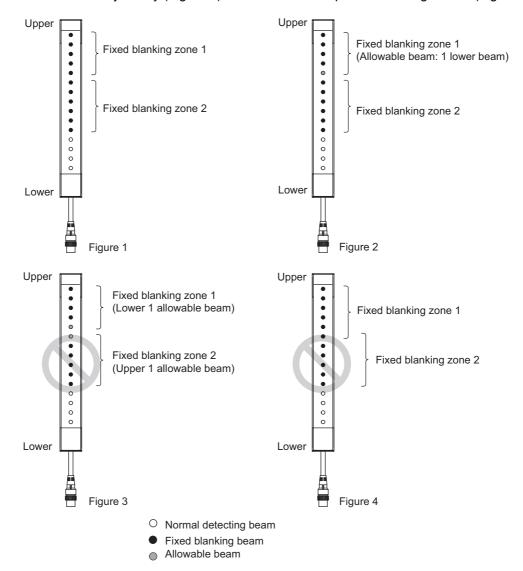

■ Limitation for Combination with Other Functions

You can use this function in combination with muting, floating blanking, and warning zone functions at the same time with the setting tool for F3SG-R.

Settings for respective zone have limitations.



Refer to 2-18. Setting Zone Adjacency Conditions for more information.



Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

2-14-2. Factory Default Setting

The factory default setting is Fixed Blanking Disable.

2-14-3. Setting with DIP Switch

Configuring the blanking setting of the DIP switch as Fixed Blanking Enabled enables the fixed blanking function.

The fixed blanking monitoring function is configured as lockout.



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the (n) Configuration Tool.



Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.

2-14-4. Setting with Configuration Tool

∕!\ WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Setting is required for each sensor segment in case of a cascade connection.

Function	Factory Default Setting	Available Parameters
Fixed Blanking	Disable	Enable/Disable
Bottom beam	1	1 to all beams
Top beam	1	1 to all beams
Fixed Blanking Monitoring	Lockout	Lockout/Cancel blanking zone / Disable monitoring
Number of allowable beams	0	0 to 5 in 1-beam icrements



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



Setting the Fixed Blanking Monitoring function to Disable Monitoring may create an undetectable area where a person can interrupt the F3SG-RA without being detected, and it is not compliant with IEC 61496-2. Conduct risk assessment CHECK! analysis thoroughly before enabling this setting.



八国 Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-15. Floating Blanking

∕!\ WARNING

Detection capability gets larger when the floating blanking function is used. When this function is used, the safety distance calculation must be based on the increased detection capability for this function.



Otherwise the machine may not stop before a person reaches to the hazardous part, resulting in serious injury.

Responsible person must ensure that the system works as you intended after configuring floating blanking. Failure to do so may result in serious injury.



If detection capability may get larger and a human body may pass a detection zone to reach a hazardous source, additional safety protection equipment must be installed such as a safety fence.



The F3SG-RA must be installed, configured, and incorporated into a machine control system by a sufficiently trained and qualified person. Unqualified person may not be able to perform these operations properly, which may cause a person to go undetected, resulting in serious injury



F3SG-RA Series	Х
F3SG-RE Series	

2-15-1. Overview

■ Floating Blanking Function

This function allows a specified number of beams in the detection zone of the F3SG-RA to move freely while keeping the Safety outputs in the ON state.

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

■ Floating Blanking Zone

All beams are configured as a floating blanking zone. If the zone overlapped with that of other function (e.g. fixed blanking, warning zone), the other function is prioritized in the overlapped zone.

■ Floating Beam

Setting of the number of floating beams allows setting of the number of beams that do not turn off the safety output. Setting of the number of floating beams can be configured by specifying the number of beams manually or by moving an interrupting object in the detection zone. For details of teach-in setting, see 3-3-2. Setting Floating Blanking by Teach-in.

■ Floating Blanking Monitoring Function

F3SG-RA monitors an interrupting object in a floating blanking zone. (If the object is removed or gets smaller, human entry may not be detected by F3SG-RA, resulting in serious injury.)

F3SG-RA enters lockout when an interrupting object becomes smaller, or removed. (Factory default setting) It is possible to configure the blanking monitoring function to be disabled when an interrupting object is smaller or removed.

CHECK!

In case configured as Blanking Disable, if an interrupting object gets smaller than the setting value, the floating blanking function is canceled. That is, the entire detection zone of F3SG-RA works as the normal detection zone.

If Temporalily Disable Monitoring by Wiring is configured, the monitoring function can be temporarily disabled during operation by hard wiring of muting input A and muting input B. For details, see below.

If Temporalily Disable Monitoring by Wiring is configured, muting function cannot be used.


Temporalily Disable Monitoring by External Wiring

If Temporalily Disable Monitoring by Wiring is configured, the floating blanking monitoring function can be temporarily disabled during operation by hard wiring of muting input A and muting input B of a receiver.

The blanking monitoring function is disabled for a period of T2 by turning muting input A from OFF to ON and muting input B from ON to OFF within an input time difference T1 (4s) using a limit switch, etc. Inputs of muting input A and muting input B must be redundant inputs of different kinds such as a combination of N.O. contact and N.C. contact types.


(In case of a PNP output photoelectric sensor, use one output as Light-ON and the other as Dark-ON operation)

The user can use this function only when the F3SG-RA is used as a one segment system and the function is enabled by the Configuration Tool. The function cannot be enabled when the F3SG-RA is in the cascade connection.

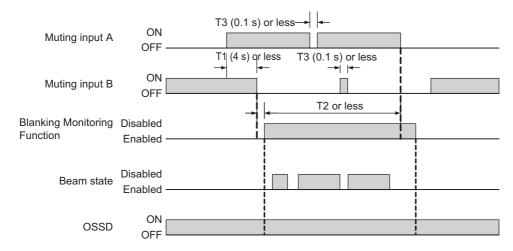

- T1: Muting input limit (fixed to 4 s)
 - The maximum value of an input time difference between muting input A/B. Configured as 4 s.
- T2: Monitoring Temporarily Disabled Time Limit
 - A time limit to disable blanking monitoring. When this time period passed, the blanking monitoring function is enabled, and lockout occurs if the blanked beam is unblocked. The factory default setting is 10 s (configurable).
- T3: Maximum allowable muting signal interruption (fixed to 0.1 s)

 Maximum duration of a signal interruption allowed in Muting inputs A and B. This is set at 0.1 s.

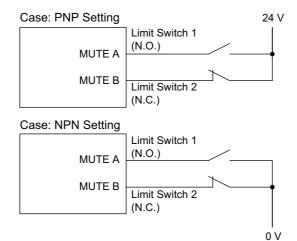



The muting is not enabled when the Temporalily Disable Monitoring by External Wiring is enabled.

■ Number of Allowable Beams

Number of beams in the Floating Blanking zone, that are not monitored by the Floating Blanking Monitoring function.

When the Floating Blanking Monitoring function is enabled and the number of blocked beams becomes less than "the number of Floating beams - the number of allowable beam(s)", the F3SG-RA enters the Lockout state.

Setting Example: the F3SG-RA with 14-mm detection capability


When the number of floating beams is configured as 4 beams, the safety output is turned OFF if 5 or more beams are blocked. (Fig. 1)


If the number of floating beams is configured as 4 beams, the safety outputs are not turned OFF if 4 or less beams are blocked. (Fig. 2)


If the monitoring function is being enabled and the number of allowable beams is configured as 1 beam, lockout occurs when an interrupting object is lost or 2 or less beams are blocked. (Fig. 3)


When an interrupting object of the size that does not turn off the safety outputs interrupts multiple locations, the safety outputs are not turned OFF. (Fig. 4)

5 or more beams are blocked

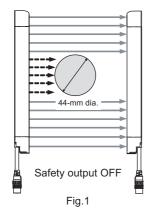

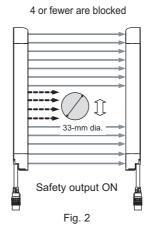

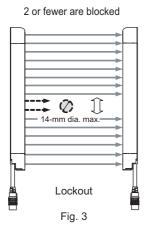

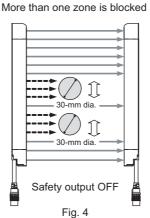

Detection Capability

Detection capability for F3SG-RA differs based on the number of floating beams as shown below. Detection capability and the number of interrupted beams that turns off the safety output

Model	Number of floating beams and detection capability				
	Blanking disabled	Setting 1	Setting 2	Setting 3	Setting n
F3SG-□RA□□□□-14	14 mm	24 mm	34 mm	44 mm	14+(10 x n) mm
F3SG-□RA□□□□-30	30 mm	50 mm	70 mm	90 mm	30+(20 x n) mm
The number of interrupted	1 beam	2 beams	3 beams	4 beams	(n+1) beams
beams that turns off the safety					
output					

■ F3SG-R LED Indicator status

When floating blanking is being enabled, the Blanking indicator turns on.

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

2-15-2. Factory Default Setting

The factory default setting is the Floating Blanking Disabled.

2-15-3. Setting with DIP Switch

Configuring the blanking setting of the DIP switch as Floating Blanking Enabled enables the floating blanking function.

The floating blanking monitoring function is configured as lockout.

Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool. CHECK!

Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.

2-15-4. Setting with Configuration Tool

WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Setting is required for each sensor segment in case of a cascade connection.

Function	Factory Default Setting	Available Parameters
Floating Blanking	Disable	Enable/Disable
Number of floating beams	1	1 to 15 (1-beam increments)
Number of allowable beams	0	0 to 5 (1-beam increments)
Floating Blanking Monitoring	Lockout	Lockout/Cancel blanking zone/Temporarily disable monitoring * /Disable monitoring
Monitoring temporarily disabled time limit	10 s	1 to 200 s (1-s increments), or infinite

^{*} The Temporarily Disable Monitoring function is only available when the F3SG-R is used as a standalone system.



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



Setting the Floating Blanking Monitoring function to Disable Monitoring may create an undetectable area where a person (n) can interrupt the F3SG-RA without being detected, and it is not compliant with IEC 61496-2. Conduct risk assessment CHECK! analysis thoroughly before enabling this setting.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-16. Reduced Resolution

F3SG-RA Series	Χ
F3SG-RE Series	

2-16-1. Overview

The reduced resolution function prevents the safety output to turn off by an object moving in a detection zone. With this function, an object with a size of 1 to 3 beams can be ignored by changing a detection capability size. Unless the number of interrupted continuous beams exceeds the setting (1 to 3 beams), the total number of interrupted beams has no limit.

The difference from the Floating Blanking is that the Reduced Resolution keeps the safety outputs ON even when an object is present discontinuously.

♠ WARNING

Detection capability gets larger when the reduced resolution function is used. When this function is used, the safety distance calculation must be based on the increased detection capability for this function. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



If detection capability may get larger and a human body may pass a detection zone to reach a hazardous source, additional safety protection equipment must be installed such as a safety fence.



The F3SG-RA must be installed, configured, and incorporated into a machine control system by a sufficiently trained and qualified person. Unqualified person may not be able to perform these operations properly, resulting in failure of human body detection and heavy injury.




■ Detection Capability

Detection capability for F3SG-RA differs based on the number of floating beams as shown below. Detection capability and the number of interrupted beams that turns off the safety output

Model	Number of beams and detection capability			
	Blanking disabled	Setting 1	Setting 2	Setting 3
F3SG-□RA□□□□-14	14 mm	24 mm	34 mm	44 mm
F3SG-□RA□□□□-30	30 mm	50 mm	70 mm	90 mm
The number of interrupted beams that turns off the safety output	1 beam	2 beams	3 beams	4 beams

■ F3SG-R LED indicator status

When the Reduced Resolution is being enabled, the Blanking indicator turns on.

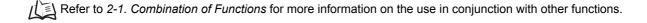

2-16-2. Factory Default Setting

The factory default setting is the Reduced Resolution Disable.

2-16-3. Setting with DIP Switch

The user cannot make any changes to this function by the DIP Switch.

2-16-4. Setting with Configuration Tool

∕!\ WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Function Name	Factory Default Setting	Available Parameters
Reduced Resolution	Disable	Enable/Disable
Number of beams	0	1 to 3 beams in 1-beam increments



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-17. Warning Zone

F3SG-RA Series	Х
F3SG-RE Series	

2-17-1. Overview

Part of the detection zone can be set as a warning zone.

Example:

When a person enters, indicator or buzzer should notify warning without stopping a machine.


∕ WARNING

When a warning zone is configured, you must attach labels that indicate a border between normal detection zone and warning zone. Otherwise the machine may not stop before a person reaches to the hazardous part, resulting in serious injury.




A warning zone CANNOT be used for safety applications. Always install your system so that a detection zone should be passed before reaching a source of danger.



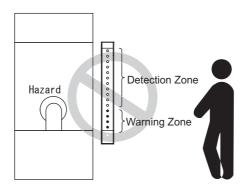

A warning zone must be configured based on a safety distance.



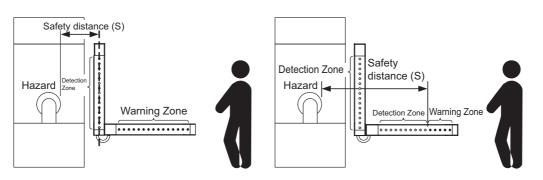



/[国] Refer to 4-1-2. Safety Distance for more information on safety distance calculations for orthogonal and parallel approaches.

You can specify beams you want to configure for warning zone. (Fig. 4& 5)


Configuration cannot be executed for cases shown below.


- All beams are configured as a warning zone (Fig. 7).
- A warning zone is specified without including any of end beams (Fig. 8)


When it is configured for the F3SG-RA in cascade connection to have the detection zone, it is possible for the other F3SG-RA's to have the warning zone for the all beams. (Fig. 6)

For the application as shown in Fig. 6, make sure the primary sensor has the detection zone and the secondary sensor has the warning zone. CHECK!


Operation Example:

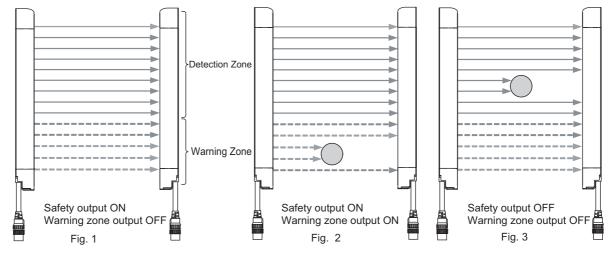

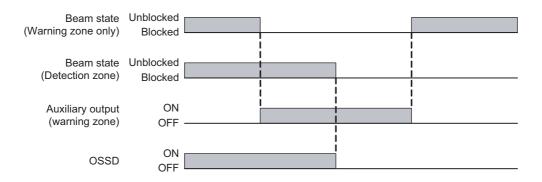

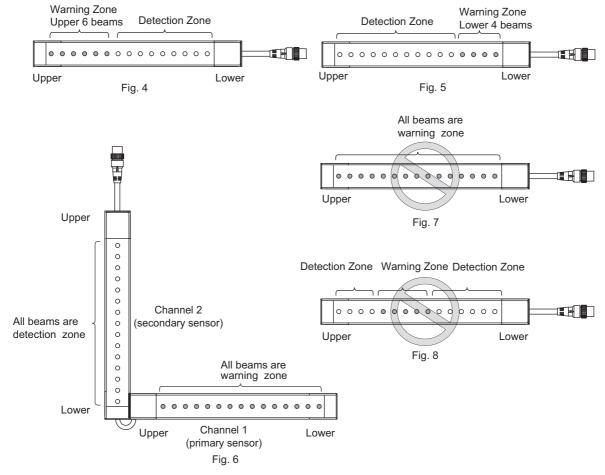

When a warning zone is configured, you must attach labels that indicate a border between normal detection zone and warning zone.

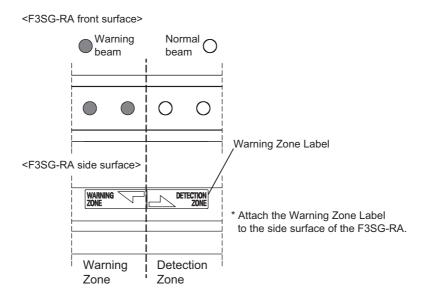

The Blanking indicator of the F3SG-RA is illuminated when the Warning Zone is enabled.

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

2-17-2. Factory Default Setting

The factory default setting is Warning Zone Disable.

2-17-3. Setting with DIP Switch

The user cannot make any changes to this function by the DIP Switch.

2-17-4. Setting with Configuration Tool

∕!\ WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Function	Factory Default Setting	Available Parameters
Warning zone	Disable	Disable/Enable from upper/Enable from lower
Number of beams	0	0 to all beams

If you want to output the light unblocked/blocked states of the warning zone, configure the output operation mode of the auxiliary output or Lamp as warning zone information.



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.

CHECK!



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-18. Setting Zone Adjacency Conditions

If any two functions of muting, fixed blanking or warning zone functions of the F3SG-RA are used at the same time, the setting zones have limitations.

This section describes the limitations for following points:

- 1. Zone adjacent condition: If zones for multiple functions are configured adjacently
- 2. Zone overlap condition: If zones for multiple functions are configured as overlapped



The muting, fixed blanking and warning zone functions are not available for the F3SG-RE.

Zone Adjacency Condition

The table below describes the conditions to configure setting zones for adjacent beams.

Except for some conditions, setting zones for these 3 functions can be located adjacently. The user can make the setting by the Configuration Tool.

Zone Adjacency Condition

Function	Muting	Fixed Blanking	Warning Zone
Muting	-	Yes	Yes
Fixed Blanking	Yes	*	Yes
Warning Zone	Yes	Yes	-

Yes: Possible to configure

^{*} For details about setting adjacent fixed blanking zones.



儿国 Refer to Constraint between Fixed Blanking Zones under 2-14. Fixed Blanking.

2. Zone Overlap Condition

The table below describes the conditions to configure setting zones for overlapping beams.

Except for combination of muting zone and fixed blanking zone (figure 3), setting zones of these 3 functions cannot be overlapped. (Figure 4)

The user can make the setting by the Configuration Tool.




Setting zones of Muting and Floating functions can be overlapped only if each zone covers the full detection zone.

Zone overlap condition

Function	Muting	Fixed Blanking	Warning Zone
Muting	-	Yes	No
Fixed Blanking	Yes	No	No
Warning Zone	No	No	-

Yes: Possible to configure No: Not possible to configure

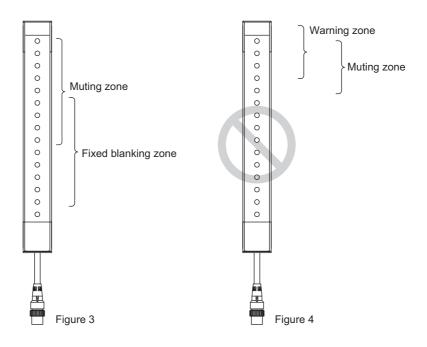

CHECKI Even if a muting zone and a fixed blanking zone are configured as overlapped, fixed blanking monitoring function is effective.

2-19. Operating Range Selection

F3SG-RA Series	Х
F3SG-RE Series	Х

2-19-1. Overview

The Operating Range Selection function can change the operating range by changing emission light

The following two modes in the table below are available for operating range.

	Operating Range		
Mode	Detection Capability	Detection Capability	
	30 mm	14 mm	
Short Mode	0.3 m~7.0 m	0.3 m~3.0 m	
Long Mode	0.3 m~20.0 m	0.3 m~10.0 m	

■ Example

- To set shorter operating range to prevent the F3SG-R from affecting other photoelectric sensors
- To set shorter operating range to prevent mutual interference in a close area

■ F3SG-R LED indicator status

When the Operating Range Selection is configured as LONG Mode, the LONG indicator turns on.

2-19-2. Factory Default Setting

■ F3SG-RA Series

In the factory default setting, the Operating Range Selection is configured as Short Mode. The operating range for the short mode setting is from 0.3 to 7 m for 30-mm detection capability and from 0.3 m to 3 m for 14-mm detection capability.

■ F3SG-RE Series


The factory default setting is only for the F3SG-RA. For the F3SG-RE, the operating range selection is possible by wiring.

2-19-3. Setting with DIP Switch

For the F3SG-RA, the user can select the mode of Operating Range Selection by the DIP Switch. Refer to Chapter 3 Setting with DIP Switch for more information on setting this function by the DIP Switch.

2-19-4. Setting by Wiring

For the F3SG-RE, the user can select the mode of Operating Range Selection by wiring.

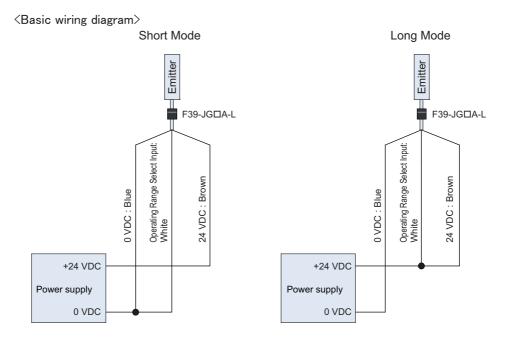

CHECK The F3SG-RE enters the Lockout state when the Operating Range Select Input line (white) is open.

2-19-5. Setting with Configuration Tool

The user cannot make any changes to this function by the Configuration Tool.

2-20. Response Time Adjustment

F3SG-RA Series	Χ
F3SG-RE Series	

2-20-1. Overview

The Response Time Adjustment function allows the user to select the longer response time in order to reduce the chance the safety outputs are turned OFF by an accidental block of the F3SG-R due to an environmental factor. Environmental factors include noise, smoke, dust, and bugs.

⚠ WARNING

To change the response time, calculate the safety distance based on the setting. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



2-20-2. Factory Default Setting

In the factory default setting, the response time is configured to the normal mode.

For the response time of factory default setting, see 1-6-1. List of Models/Response Time/Current Consumption/Weight

2-20-3. Setting with DIP Switch

The user cannot make any changes to this function by the DIP Switch.

2-20-4. Setting with Configuration Tool

. MARNING


Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



The user can make changes to the settings by the Configuration Tool.

Function	Factory Default Setting	Available Parameters
Response Time Adjustment	Normal mode	Normal mode/Slow mode

The ON-to-OFF response time of the Slow mode is doubled compared to the Normal mode.

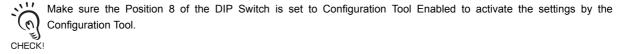

Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-21. Lamp

F3SG-RA Series	Х
F3SG-RE Series	

2-21-1. Overview

A lamp (sold separately) can be connected to a receiver and turned ON based on the operation of F3SG-RA. The lamp can indicate red, orange, and green colors, to which three different states can be assigned. When there are several illumination conditions, the priority of the colors to illuminate or blink is red > orange > green.

Usage Example:

- · Indicate that F3SG-RA is in muting or override
- Indicate that F3SG-RA is under lockout

Indicate that a machine is stopped (safety output is in the OFF state)



Refer to the instruction sheet of the Lamp for more information.



The lamp is not intended to be used for the emitter. Do not connect the lamp to the emitter.

2-21-2. Factory Default Setting

The factory default setting is Red as Disable, Orange as Disable and Green as Muting/Override information. When the F3SG-RA is under a muting or override state, the Lamp blinks once* at a 1-Hz inverval in green.

* Refer to Output pattern chart below.

2-21-3. Setting with DIP Switch

The user cannot make any changes to this function by the DIP Switch.

2-21-4. Setting with Configuration Tool

∕ WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.




The user can make changes to the settings by the Configuration Tool.

Lamp output	Function	Factory Default Setting	Available Parameters
Red	Output operation mode	None	*1
(Priority 1)	Inverted signal output	Disable	Enable/Disable
	Output pattern	Solid-ON	Solid-ON/ON 1 time/ON 2 times/ON 3 times *2
Orange	Output operation mode	None	*1
(Priority 2)	Inverted signal output	Disable	Enable/Disable
	Output pattern	Solid-ON	Solid-ON/ON 1 time/ON 2 times/ON 3 times *2
Green	Output operation mode	Muting/Override information	*1
(Priority 3)	Inverted signal output	Disable	Enable/Disable
	Output pattern	ON 1 time *2	Solid-ON/ON 1 time/ON 2 times/ON 3 times *2

^{*1.} Refer to the table of Information (Output operation mode) assigned to Lamp below.

Refer to 2-12. Muting for more information on settings of the muting.

■ Output pattern chart

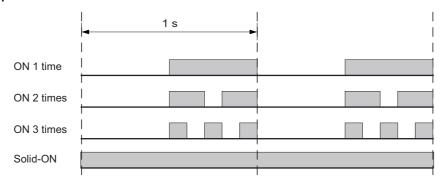

■ Information (Output operation mode) assigned to Lamp

	<u> </u>
Information Name	Description (Lamp is turned ON under the following condition)
Safety output information	When Safety output is in the ON state.
Reset-input information	When Reset/EDM/Override input is in the ON state
Interlock information	Under Interlock state
Pre-reset Information	Under Pre-reset state
Lockout information	Under error/ Lockout state
Excess power-on time information	When power-on time exceeds power-on time threshold
Excess load switching frequency information	When load switching frequency exceeds load switching frequency threshold
Light level diagnosis information	When the F3SG-R is unblocked and light intensity is within a range from 100% to 170% of ON-threshold for 10 s or longer
Blanking/Warning-zone information	When Fixed Blanking, Floating Blanking, Reduced Resolution or Warning Zone function is enabled
Muting information	Under Muting state
Override information	Under Override state
Muting/Override information	Under either Muting or Override state
Sequence error information	Under Muting sequence error state or Interlock sequence error state
Warning Zone Information	When warning zone is interrupted
Blanking bream unblocked information	When Fixed-Blanking or Floating Blanking beams are unblocked

^{*2.} The Lamp illuminates according to the patterns as shown in the output pattern chart below.

Information Name	Description (Lamp is turned ON under the following condition)
Designated beam output information	When a designated beam is blocked or unblocked
Interference/vibration information	When the F3SG-R system stops accidentally due to interference or vibration. (In case of cascade connection, when any of cascaded segments comes under this condition.)
Troubleshooting support signal	When one of the signals of Muting sequence error, Interference/vibration information and Light level diagnosis information is in the ON state.
Individual cascaded sensor output (Channel 1)	When Safety output of Primary sensor in cascade connection is the ON state
Individual Cascaded Sensor Output (Channel 2)	When Safety output of 1st Secondary sensor in cascade connection is the ON state
Individual Cascaded Sensor Output (Channel 3)	When Safety output of the 2nd Secondary sensor in cascade connection is the ON state



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-22. Designated Beam Output

F3SG-RA Series	Χ
F3SG-RE Series	

2-22-1. Overview


This function allows information on unblocked/blocked states of a given beam to be output. Example:


- To turn a Lamp ON when a specified beam of F3SG-RA is blocked
- To output, from the auxiliary output, a signal of information on a specified beam being unblocked

If one or more specified beams are blocked or unblocked, the information on the beam state can be provided as an auxiliary output or indication of Lamp.

Operation Example

Designated beam state: Dark-ON

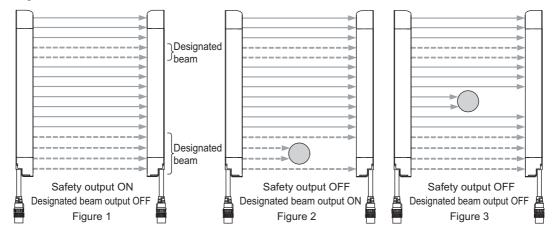

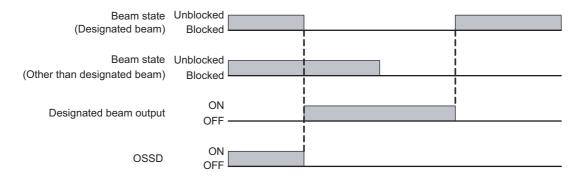

2-22-2. Factory Default Setting

The factory default setting is Designated Beam Output as Disable.

2-22-3. Setting with DIP Switch

The user cannot make any changes to this function by the DIP Switch.

2-22-4. Setting with Configuration Tool

WARNING


Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.




The user can make changes to the settings by the Configuration Tool.

Function	Factory Default Setting	Available Parameters
Designated beam zone	None	Any beam
Designated beam state	Light-ON	Light-ON/Dark-ON

If you want to output the light unblocked/blocked states of a designated beam, configure the output operation mode of auxiliary output or Lamp as designated beam output information.

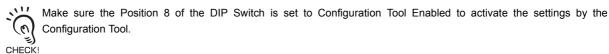

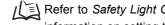

Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-23. Light Level Monitoring

F3SG-RA Series	Х
F3SG-RE Series	

2-23-1. Incident Light Level Information

2-23-1-1. Overview

The user can use the Configuration Tool to read incident light level of the F3SG-RA and view on a PC screen. This function allows beam adjustment while checking receiving light intensity.

2-23-1-2. Setting with Configuration Tool

The user can enable this function to retrieve incident light level information. Making any changes to the function is not possible. (When the F3SG-RA is in the cascade connection, incident light level of each segment can be retrieved.)

2-23-2. Ambient Light Level Information

2-23-2-1. Overview

The user can use the Configuration Tool to read incident light level of ambient light from a photoelectric sensor or another F3SG-RA unit in a close area and view it on a PC screen. This function allows the user to identify a photoelectric sensor radiating ambient light or beams being affected by the light.

2-23-2-2. Setting with Configuration Tool

The user can enable this function to retrieve ambient light level information. Making any changes to the function is not possible. (When the F3SG-RA is in the cascade connection, ambient light level of each segment can be retrieved.)



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



儿園 Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information?on setting this function by the Configuration Tool.

2-24. Maintenance Information

∕!\ WARNING

Some settings of functions configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.




F3SG-RA Series	Х
F3SG-RE Series	

2-24-1. Overview

You can use the Configuration Tool to read the maintenance information of F3SG-RA to view on a PC screen. The maintenance information indicates the following information:

- Error Log
- Warning Log
- Power-On Time
- Load Switching Frequency
- Muting Statistics Information

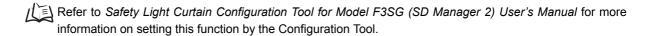

2-24-2. Error Log

The user can view details of errors occurred in the past. The displayed information can be used for troubleshooting.

2-24-3. Warning Log

The user can view details of the following warnings occurred in the past. The displayed information can be used for troubleshooting.

- · Muting sequence error
- Interlock sequence error
- Interference/vibration information

2-24-4. Power-ON Time

The user can view the power-on time of F3SG-RA. The power-on time can be used to better understand when to schedule of F3SG-RA.

It is possible to give an output signal to the auxiliary output or indicate with Lamp (sold separately) when the power-on time threshold is exceeded. The excess power-on time information must be assigned to the output operation mode of the auxiliary output or Lamp.



/[国 2-21. Lamp

The user can make changes to the settings by the Configuration Tool.


Function	Factory Default Setting	Available Parameters
Power-on time threshold	30,000 h	30,000 to 1,000,000 h in 1-h increments


2-24-5. Load Switching Frequency

The user can view the number of operations of the load connected to F3SG-RA. The number of load operations can be used to understand the switching frequency of relays and contactors connected to F3SG-RA.

It is possible to give an output signal to the auxiliary output or indicate with Lamp when the number of operations exceeds the switching frequency threshold.

The excess load switching frequency information must be assigned to the output operation mode of the auxiliary output or Lamp.

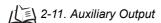

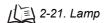

The user can make changes to the settings by the Configuration Tool.

Function	Factory Default Setting	Available Parameters
Load switching frequency threhshold	100,000 times in 1-time increment	100,000 to 4,000,000 times in 1-time increments

2-24-6. Muting Statistics Information

Calculates parameter data required for the muting system statistically based on the actual measurement. Man-hour required for muting system construction can be reduced by using parameters acquired from the statistical calculation.

2-25. Operating Status Monitoring

F3SG-RA Series	Х
F3SG-RE Series	

2-25-1. Overview

I/O information and the state of F3SG-RA can be read out. This function is only for F3SG-RA Configuration Tool.



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

2-25-2. Readout Information

The user can view the following information related to a receiver.

The information is displayed in a block in case of a cascade connection.

Information Name	Description
RESET input	Linked to Reset/External Device Monitoring (EDM)/Override Input
Muting A /Pre-Reset Input	Linked to Muting A/Pre-Reset Input
Muting B Input	Linked to Muting B Input
Safety output 1	Linked to safety output 1
Safety output 2	Linked to safety output 2
Auxiliary output	Linked to auxiliary output
Source voltage	Indicates supplied source voltage
Interlock information	Linked to Interlock state
Muting information	Linked to Muting state
Sequence error information	Linked to Muting sequence error state or Interlock sequence error state
Override information	Linked to override state
Blanking bream unblocked information	Linked to the state where the blanking beam is unblocked
DIP-SW input information	Linked to the input signal of DIP Switch
Push-SW input information	Linked to the input signal of Push Switch

2-26. Setting Recovery

⚠ WARNING

The Setting Recovery function configurable with the Configuration Tool may increase risks. Make sure the Responsible Person conduct a thorough risk assessment analysis before managing and changing the settings. Unintended changes to the settings may cause a person to go undetected, resulting in serious injury.



F3SG-RA Series	Х
F3SG-RE Series	

2-26-1. Overview

You can use the Configuration Tool to recover the F3SG-RA setting to the default factory setting.



Make sure the Position 8 of the DIP Switch is set to Configuration Tool Enabled to activate the settings by the Configuration Tool.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the Configuration Tool.

Chapter 3 Setting with DIP Switch

3-1. List of Features Configurable by DIP Switch	106
3-2. DIP Switch	107
3-2-1. DIP Switch on Receiver	108
3-2-2. DIP Switch on Emitter	109
3-2-3. Push Switch	109
3-3. Setting by Teach-in	110
3-3-1. Setting Fixed Blanking by Teach-in	110
3-3-2. Setting Floating Blanking by Teach-in	113

3-1. List of Features Configurable by DIP Switch

For the F3SG-RA, the following functions are configurable by the DIP Switch.

Feature	page
Scan Code Selection	p.25
PNP/NPN Selection	p.26
External Test	p.29
Interlock	p.32
External Device Monitoring (EDM)	p.37
Fixed Blanking	p.75
Floating Blanking	p.79
Operating Range Selection	p.92



The F3SG-RE does not have DIP Switch.

3-2. DIP Switch

/N DANGER


Make sure to test the operation of the F3SG-R after setting with DIP Switch to verify that the F3SG-R operates as intended. Make sure to stop the machine until the test is complete. Unintended settings may cause a person to go undetected, resulting in serious injury or death.



F3SG-RA Series	Х
F3SG-RE Series	

F3SG-RA series has DIP Switches to configure functions. To set DIP Switches, turn the power of the F3SG-RA off and open the cover as shown below. When the setting the DIP Switch is complete, close the cover and turn the power of the F3SG-RA on.

Cascaded sensors is operated based on the DIP Switches setting of the primary sensor. The DIP Switch setting of a secondary sensor does not affect the operation.

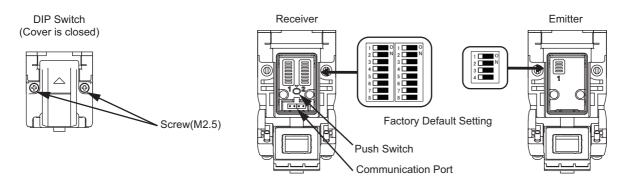

When attaching the cover, tightly fasten the screws (M2.5, recommended torque: 0.35N.m). Failure to do so may cause the cover to come loose, leading to deterioration of the protective functions. CHECK!

For F3SG-RA series, the following functional settings are available by DIP Switches and Push Switch.

Receiver	Position	Function	Emitter	Position	Function
	1	Scan Code		1	Scan Code
	2	External Device Monitoring (EDM)	oring (EDM) 2 Operating Range Sele		Operating Range Selection
	3	Interlock/Pre-Reset		3	
	4			4	External Test
	5	Fixed Blanking/Floating Blanking			
	6				
	7	PNP/NPN Selection			
	8	DIP Switch/Configuration Tool Selection			

Operate the DIP Switch before turning the power of the F3SG-RA on.

If the DIP Switch is operated during operation of the F3SG-RA, the F3SG-RA transitions to lockout.

A change of the DIP Switch setting is activated upon power-on or lockout reset.

Note that do not use any tool which may damage F3SG-RA's body when operating the DIP Switch.



For lockout reset function, see 2-8. Lockout Reset.

3-2-1. DIP Switch on Receiver

The following functional settings are available by DIP Switches on the receiver. A receiver has two DIP Switches, both of which must be configured based on the table below. For functional details, see respective chapter in the Functional Details column.



If the settings of two DIP Switches are different, when the power is turned on, F3SG-RA transitions to lockout.

□: Indicates a switch position.

Position	Function	Setting		Description	Functional	
1 OSILIOI1	Tunction	DIP-SW1	-SW1 DIP-SW2		Details	
1	Scan Code	1 ON	1 ON	Scan Code A (factory default setting)	2-4	
		1 ON	1 ON	Scan Code B	2-4	
2	External Device	2 ON	2 ON	External Device Monitoring (EDM) Disabled (factory default setting)	2-11	
_	Monitoring (EDM)	2 ON	2 ON	External Device Monitoring (EDM) Enabled	2-11	
		3 ON ON	3 ON 4 ON	Auto Reset (factory default setting)	2-9	
		3 ON ON	3 ON 4 ON	Manual Reset (Start/Restart Interlock)	2-9	
3, 4	Interlock/Pre-Reset -	3 ON ON	3 ON 4 ON	Pre-Reset	2-10	
		3 ON ON	3 ON 4 ON	Auto Reset (same as factory default setting)	2-9	
	Fixed Blanking/ Floating Blanking	5 ON	5 ON ON	Blanking Disabled (factory default setting)	-	
_		5 ON	5 ON ON	Fixed Blanking Enabled	2-15	
5, 6		5 ON ON	5 ON 6 ON	Floating Blanking Enabled	2-16	
		5 ON ON	5 ON ON	Blanking Disabled (Same as Blanking Disabled (factory default setting))	-	
7	PNP/NPN Selection	7 ON	7 ON	PNP (factory default setting)	2-5	
FINE/INFIN SELECTION		7 O N	7 O N	NPN	2-5	
8	DIP Switch/ Configuration Tool	8 ON	8 ON	DIP Switch Enabled (factory default setting)	See below.	
	Selection	8 ON	8 ON	Configuration Tool Enabled	See below.	

You can configure the receiver's DIP Switch position 8 whether the setting of the DIP Switch or the Configuration Tool should be enabled. If you want to use the Configuration Tool to change the setting, configure the Position 8 setting as Configuration Tool Enabled. This setting ignores the DIP Switch setting.

Note that Scan Code and PNP/NPN Selection are not affected by the Position 8 but by the DIP Switch setting.

3-2-2. DIP Switch on Emitter

The following functional settings are available by DIP Switches on the emitter. For functional details, see respective chapter in the Functional Details column.

☐: Indicates a switch position.

Position	Function	Setting	Description	Functional Details
1	Scan Code	1 ON	Scan Code A (factory default setting)	2-4
		1 ON	Scan Code B	2-4
		2 ON ON ON	Short Mode (factory default setting)	2-21
2 2	Operating Range Selection	2 ON ON	Setting Inhibited	-
4		2 ON ON ON	Setting Inhibited	-
		2 ON ON	Long Mode	2-21
	External Test	4 ON	24 V Active (factory default setting)	2-7
	External Test	4 O N	0 V Active	2-7



If the power is turned on while the switch is configured as Setting Inhibited, F3SG-RA transitions to lockout.

3-2-3. Push Switch

The F3SG-RA has a Push Switch between the two DIP Switches on the receiver. There is no Push Switch on the emitter. The Push Switch is used to make the settings to the Fixed Blanking and Floating Blanking by the Teach-in.



Refer to 3-3. Setting by Teach-in for more information.

3-3. Setting by Teach-in

3-3-1. Setting Fixed Blanking by Teach-in

Overview

You can teach-in the fixed blanking setting by interrupting the target area of the fixed blanking. The teach-in task is performed using the Push Switch.

∕ WARNING

After completion of teach-in, check that the configuration have been properly done.



■ Teach-In Steps


Perform the teach-in setting of fixed blanking based on the following steps.

- (1) Beam Adjustment
- (2) DIP Switch Setting
- (3) Transition to Teach-in Mode
- (4) Teach-In and Check Processes
- (5) Restart

(1) Beam Adjustment

Adjust the beams of the emitter and receiver for synchronization.

For detailed beam adjustment steps, see 4-4-4. Beam Alignment Procedure.

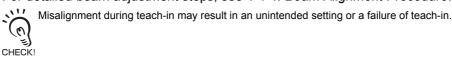

(2) DIP Switch Setting

When the power of the F3SG-RA is turned OFF, set the Blanking setting (Positions 5 and 6) of the DIP Switch as "Fixed Blanking Enabled" and the DIP Switch/Configuration Tool Selection setting (Position 8) as "DIP Switch Enabled". And then turn the power of the F3SG-RA on.

Block the target Fixed Blanking zone by an object. Do not remove the object until the Step (4) is complete.

Refer to 3-2-1. DIP Switch on Receiver for more information.

(3) Transition to Teach-in Mode

Press and hold the Push Switch (for 3 s or longer) to make the F3SG-RA transition to Teach-in Mode. When the F3SG-RA transitioned to Teach-in Mode, "CFG" and "BLANK" indicators blink.

(The mode transition to Teach-in Mode does not occur if the setting of the DIP Switch is configured as "Fixed Blanking Disabled" or "Configuration Tool Enabled")

LED Indicator	Status
SEQ	OFF
BLANK	- Blink
CFG	- Blink

(4) Teach-In and Check Processes


When it is ensured that the F3SG-RA is in the Teach-in Mode, press the Push Switch (for within 1 s) to activate the scanning of the blocked area and automatically configure the setting related to the Fixed Blanking.*1

The F3SG-RA judges if the setting is valid or not.


If the setting is valid, "BLANK" indicator changes to solid ON state.

If the setting is invalid *2, "SEQ" indicator blinks. In this case, try the steps again from (3).

*1 The Fixed Blanking zone is configured to include one additional beam outside the actually blocked beams. Two beams on both ends are configured as allowable beams.

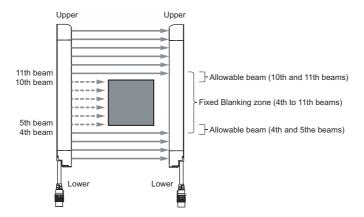

- *2 If the setting value is not an allowable one, the setting is invalid. The following cases are judged as
 - All beams have been configured as a fixed blanking zone (including allowable beams).(Fig. 1)
 - All beams except the beams at both ends have been configured as a fixed blanking zone. (Fig. 2)
 - Both beams of the ends have been configured as a fixed blanking zone at the same time. (Primary sensor only) (Fig. 3)
 - The teach-in must be performed with at least 3 beams being blocked.(Fig. 4)
 - When the teach-in is performed for more than one Fixed Blanking zones, there must be at least 3 beams between the blocking objects.(Fig. 5)
 - Four or more areas have been configured as fixed blanking zones for one channel.

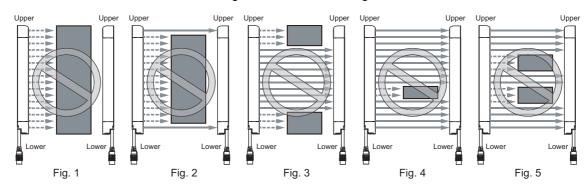

Teach-in settin	g is valid	Teach-in setting	j is invalid
LED Indicator	Status	LED Indicator	Status
SEQ	OFF	SEQ	- Blink
BLANK	- ON	BLANK	OFF


Teach-in setting is valid		Teach-in setting is invalid		
LED Indicator	Status	LED Indicator	Status	
CFG	- Blink	CFG	- Blink	

(5) Restart

Press and hold the reset switch (for 1 s or longer) or power cycle the F3SG-RA to enable and activate the setting. Check if the Fixed Blanking zone is properly configured.

Others

- When the teach-in is performed with the all Fixed Blanking zone being unblocked, the Fixed Blanking is configured as Disabled. Teach-in is available under cascade connection as well. In such a case, use the primary sensor's Push Switch to perform teach-in with the similar steps.
- When the F3SG-RA is in the cascade connection, the teach-in setting is performed for each channel independently. This allows different F3SG-RA's to have different teach-in settings depending on the position or size of the blocking object. For example, when the F3SG-RA at Channel 1 is blocked, that F3SG-RA only has the Fixed Blanking setting.

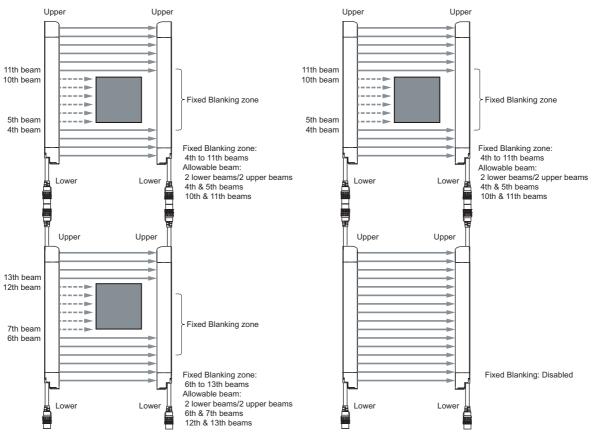

• The teach-in result for Fixed Blanking and Floating Blanking cannot be saved together. When the Teach-in is ferformed for Floating Blanking, the result of the teach-in for Fixed Blanking is cleared.

3-3-2. Setting Floating Blanking by Teach-in

Overview

You can teach-in the floating blanking setting by interrupting with an object to monitor by floating blanking. The teach-in task is performed using the Push Switch.

∕!\ WARNING

After completion of teach-in, check that the configuration have been properly done.



■ Teach-In Steps

Perform the teach-in setting of floating blanking based on the following steps.

- (1) Beam Adjustment
- (2) DIP Switch Setting
- (3) Transition to Teach-in Mode
- (4) Result Check Process
- (5) Restart

(1) Beam Adjustment

Adjust the beams of the emitter and receiver for synchronization.

For detailed beam adjustment steps, see 4-4-4. Beam Alignment Procedure.



Misalignment during teach-in may result in an unintended setting or a failure of teach-in.

(2) DIP Switch Setting

When the power of the F3SG-RA is turned OFF, set the Blanking setting (Position 5 and 6) of the DIP Switch as "Floating Blanking Enabled" and the DIP Switch/Configuration Tool Selection setting (Position 8) as "DIP Switch Enabled". And then turn the power of the F3SG-RA on.

Block the target Floating Blanking zone by an object. Do not remove the object until the Step (4) is complete.



The object must be no smaller than the object resolution.




Refer to 3-2-1. DIP Switch on Receiver for more information.

(3) Transition to Teach-in Mode

Press and hold the Push Switch (for 3 s or longer) to make the F3SG-RA transition to Teach-in Mode. Upon transition the scan is started for the blocked location. Move the blocking object in parallel with the F3SG-RA.

The object of the size of at least 3 beams must be moved. Failure to do so will result in a failure of allowable beam setting.

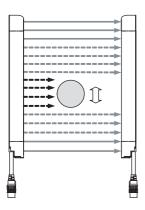

When transitioned to Teach-in Mode, "CFG" and "BLANK" indicators blink.

(The mode transition to Teach-in Mode does not occur if the setting of the DIP Switch is configured as "Floating Blanking Disabled" or "Configuration Tool Enabled")

LED Indicator	Status
SEQ	OFF
BLANK	- Blink
CFG	- Blink

(4) Result Check Process

Press the Push Switch (for within 1 s) automatically configures the floating blanking setting based on the scan result.*1

The determined setting is processed for valid/invalid judgment process in the sensor.

If the setting is valid, "BLANK" indicator stays on.

If the setting is invalid*2, "SEQ" indicator blinks. In this case, try the steps again from (3).

Teach-in settin	g is valid	Teach-in setting is invalid		
LED Indicator	Status	LED Indicator	Status	
SEQ	OFF	SEQ	- Blink	
BLANK	- ON	BLANK	OFF	
CFG	- Blink	CFG	- Blink	

*1 The number of blanked beams is configured with the maximum number of interrupted beams in the teach-in process (steps (3) to (4)).

Allowable beams are is configured with (Maximum interrupted beams - Minimum interrupted beams) in the teach-in process.

The blanking monitoring function is configured as lockout.


- *2 If the setting value is not an allowable one, the setting is invalid. The following cases are judged as invalid.
 - The number of blanked beams is configured as one (1), or nine (9) or more.
 - The number of allowable beams is configured as three (3) or more.
 - The number of blanked beams is the same as that of sensor beams.
 - Number of allowable beams >= Number of blanked beams
 - Teach-in is started when an object does not exist.
 - Beam-blocked state is detected discontinuously in the teach-in process.
 - The blocking object is removed until the steps (3) to (4) are completed.

(5) Restart

Pressing and holding the reset switch (for 1 s or longer) or restarting the power enables and activates the setting. Check if the setting has been properly configured.

Others

- Be sure to perform the teach-in setting of floating blanking while moving the interrupting object.
- If teach-in is performed with all areas receiving light, floating blanking is configured as invalid.
- Teach-in is available under cascade connection as well. In such a case, use the primary sensor's Push Switch to perform teach-in with the similar steps.
- · If teach-in is performed with a cascade connection, teach-in setting is configured for each channel independently. If sizes of blocking objects are different, settings are configured differently for sensors as well. For example, if only the Channel 1 sensor is interrupted, the blanking setting is configured for the Channel 1 only. Other sensors than the Channel 1 work as normal detection zone.

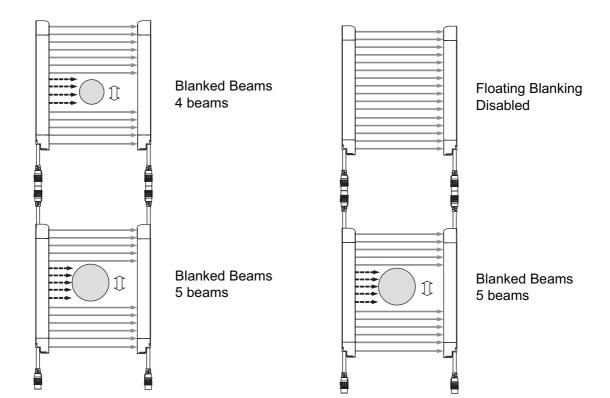

Chapter 4 Wiring/Installation

1-1	I. Installation Considerations	119
	4-1-1. Detection Zone and Approach	119
	4-1-2. Safety Distance	120
	4-1-3. Distance from Reflective Surfaces	123
	4-1-4. Mutual Interference Prevention	124
1-2	2. Cascade Connection	126
	4-2-1. Overview	126
	4-2-2. Connection Procedure	128
1-3	3. Dimensions	129
	4-3-1. Mounted with Standard Fixed Brackets (F39-LGF)	129
	4-3-1-1. Backside Mounting	129
	4-3-1-2. Side Mounting	131
	4-3-1-3. Standard Fixed Bracket	133
	4-3-2. Mounted with Standard Adjustable Brackets (F39-LGA)134
	4-3-2-1. Backside Mounting	134
	4-3-2-2. Side Mounting	136
	4-3-2-3. Standard Adjustable Bracket	138
1-4	1. Mounting	139
	4-4-1. Mounting Method	139
	4-4-2. Number of Brackets Required	139
	4-4-3. Mounting Procedure	140
	4-4-3-1. Mounting with Standard Fixed Brackets (F39-LGF)140
	4-4-3-2. Mounting with Standard Adjustable Brackets (F39-LGA)	141
	4-4-4. Beam Alignment Procedure	144
1-5	5. Wiring	145
	4-5-1. Wiring Precautions	145
	4-5-2. Power Supply Unit	146

4-5-3-2. Double-Ended Cable 4-5-3-3. Cascading Cable 4-5-3-4. Extending Cable Length with Commercially Available Cable 4-5-3-5. Reduced Wiring Connector System 151 4-5-4. Cable Connections(F3SG-RE Series) 152 4-5-4-1. Recommended Cable 153 4-5-4-2. Extending Cable Length with Commercially Available Cable 153 4-5-4-3. Reduced Wiring Connector System	4-5	-3. Cable Connections(F3SG-RA Series)	147
4-5-3-3. Cascading Cable 4-5-3-4. Extending Cable Length with Commercially Available Cable 151 4-5-3-5. Reduced Wiring Connector System 151 4-5-4. Cable Connections(F3SG-RE Series) 152 4-5-4-1. Recommended Cable 152 4-5-4-2. Extending Cable Length with Commercially Available Cable 153 4-5-4-3. Reduced Wiring Connector System 153	-	4-5-3-1. Single-Ended Cable	147
4-5-3-4. Extending Cable Length with Commercially Available Cable 151 4-5-3-5. Reduced Wiring Connector System 151 4-5-4. Cable Connections(F3SG-RE Series) 152 4-5-4-1. Recommended Cable 152 4-5-4-2. Extending Cable Length with Commercially Available Cable 153 4-5-4-3. Reduced Wiring Connector System 153		4-5-3-2. Double-Ended Cable	148
4-5-3-5. Reduced Wiring Connector System 151 4-5-4. Cable Connections(F3SG-RE Series) 152 4-5-4-1. Recommended Cable 152 4-5-4-2. Extending Cable Length with Commercially Available Cable 153 4-5-4-3. Reduced Wiring Connector System 153		4-5-3-3. Cascading Cable	150
4-5-4. Cable Connections(F3SG-RE Series) 4-5-4-1. Recommended Cable 4-5-4-2. Extending Cable Length with Commercially Available Cable 4-5-4-3. Reduced Wiring Connector System 153		4-5-3-4. Extending Cable Length with Commercially Available Cable	151
4-5-4-1. Recommended Cable 152 4-5-4-2. Extending Cable Length with Commercially Available Cable 153 4-5-4-3. Reduced Wiring Connector System 153		4-5-3-5. Reduced Wiring Connector System	151
4-5-4-2. Extending Cable Length with Commercially Available Cable 153 4-5-4-3. Reduced Wiring Connector System 153	4-5	-4. Cable Connections(F3SG-RE Series)	152
4-5-4-3. Reduced Wiring Connector System 153	-	4-5-4-1. Recommended Cable	152
		4-5-4-2. Extending Cable Length with Commercially Available Cable	153
4-5-5. Functional Earth Connection 154		4-5-4-3. Reduced Wiring Connector System	153
	4-5	-5. Functional Earth Connection	154

4-1. Installation Considerations

4-1-1. Detection Zone and Approach

⚠ WARNING

Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous zones. If a person is able to step into the hazardous zone of a machine and remain behind the F3SG-R's detection zone, configure the system with Restart Interlock function. Failure to do so may result in serious injury due to unexpected startup.



Do not use this sensor for machines that cannot be stopped by electrical control. For example, do not use it for a pressing machine that uses a full-rotation clutch. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



To use the F3SG-R in PSDI mode (Reinitiation of cyclic operation by the protective equipment), you must configure an appropriate circuit between the F3SG-R and the machine. For details about PSDI, refer to OSHA1910.217, IEC61496-1, and other relevant standards and regulations.



Install the reset switch in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone.



Do not use the F3SG-R in environments where flammable or explosive gases are present. Doing so may cause an explosion.




The F3SG-R cannot protect a person from an object flying from a hazardous zone. Install protective cover(s) or fence(s).



Correct installation

The hazardous zone of a machine can be reached only by passing through the sensor's detection zone.

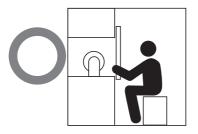

While working, a person is inside the sensor's detection zone.



Incorrect installation

It is possible to reach the hazardous zone of a machine without passing through the sensor's detection zone.



A person is between the sensor's detection zone and the hazardous zone of a machine.



4-1-2. Safety Distance

The safety distance is the distance that must be set between the F3SG-R and a machine's hazardous part to stop the hazardous part before a person or object reaches it. The safety distance varies according to the standards of each country and the individual specifications of each machine. Always refer to the relevant standards.

∕ ! WARNING

Make sure to secure the safety distance (S) between the F3SG-R and the hazardous part. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.




The response time of a machine is the time period from when the machine receives a stop signal to when the machine's hazardous part stops. Measure the response time on the actual system. Also, periodically check that the response time CHECK! of the machine has not changed.

4-1-2-1. Safety Distance Formulas according to ISO 13855/EN ISO 13855

Detection Zone Orthogonal to Direction of Approach

 $S = K \times T + C \dots$ Formula (1)

- •S: Safety distance
- •K: Approach speed to the detection zone
- •T: Total response time of the machine and F3SG-R
- C: Additional distance calculated by the detection capability (or object resolution) of the F3SG-R

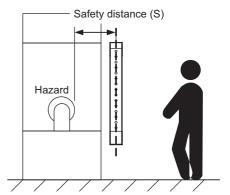

Calculation Example for Systems with a Resolution of \leq 30 mm

Use K = 2,000 mm/s and $C = 8 \times (d - 14 \text{ mm})$ in formula (1) for the calculation.

 $S = 2,000 \text{ mm/s} \times (Tm + Ts) + 8 \times (d - 14 \text{ mm})$

- •S = Safety distance (mm)
- •Tm = Machine's response time (s)
- •Ts = Response time of the F3SG-R from ON to OFF (s)
- •d = Detection capability (or object resolution) of the F3SG-R (mm)

[Calculation example]

When Tm = 0.05 s, Ts = 0.08 s, and d = 14 mm:

 $S=2,000 \text{ mm/s} \times (0.05 \text{ s} + 0.08 \text{ s}) + 8 \times (14 \text{ mm} - 14 \text{ mm})$

= 116 mm . . . Formula (2)

If the result < 100 mm, use S = 100 mm.

If the result exceeds 500 mm, use the following expression where K = 1,600 mm/s.

S=1,600 mm/s x (Tm + Ts) + 8 x (d - 14 mm) . . . Formula (3)

If the result of this formula (3) < 500 mm, use S = 500 mm.

Detection Zone Parallel to Direction of Approach


Use K = 1,600 mm/s and C = $(1200 - 0.4 \times H)$ in formula (1) for calculation. Note that C must not be less than 850 mm.

S = 1,600 mm/s x (Tm + Ts) + 1200 - 0.4 x H

- S = Safety distance (mm)
- Tm = Machine's response time (s)
- Ts = Response time of F3SG-R from ON to OFF
 (s)
- H = Installation height (mm)

Note that H must satisfy:

1000 >= H >= 15 (d - 50 mm)

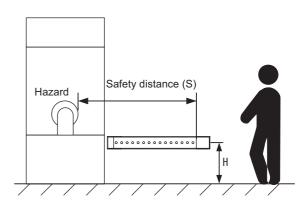

Also, you must include a hazardous condition under which a person may go through under a detection zone if H exceeds 300 mm (200 mm for other purpose than industrial use) into risk assessment.

[Calculation example]

When Tm = 0.05 s, Ts = 0.08 s, and d = 14 mm:

 $S = 1,600 \text{ mm/s} \times (0.05 \text{ s} + 0.08 \text{ s}) + 1200 - 0.4 \times 500 \text{ mm}$

= 1092.8 mm

When a warning zone is configured as in the figure, you must calculate L, a distance from an end of casing to a detection zone, using a formula below:


L = (Total number of F3SG-R beams - number of warning zone beams - 1) x P + 10

• P: Beam Gap (mm)

F3SG-□RA□□□□-14 . . . 10 mm

F3SG-□RA□□□□-30 . . . 20 mm

Refer to 1-6-1. List of Models/Response Time/
Current Consumption/Weight for total number of F3SG-R beams.

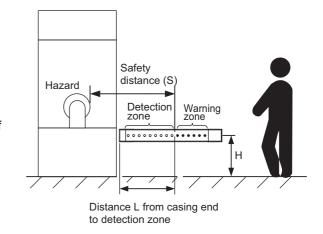

4-1-2-2. Safety Distance Formulas according to ANSI B11.19

If a person approaches the detection zone of the F3SG-R orthogonally, calculate the safety distance as shown below.

S = K x (Ts + Tc + Tr + Tbm) + Dpf

- · S: Safety distance
- K: Approach speed to the detection zone (the value recommended by OSHA standard is 1,600 mm/s)

Approach speed K is not specified in the ANSI B.11.19 standard. To determine the value of K to apply, consider all factors, including the operator's physical ability.

- Ts = Machine's stopping time (s)
- Tr = Response time of the F3SG-R from ON to OFF (s)
- Tc = Machine control circuit's maximum response time required to activate its brake (s)
- Tbm = Additional time (s)

If a machine has a brake monitor, "Tbm= Brake monitor setting time - (Ts + Tc)". If it has no brake monitor, we recommend using 20% or more of (Ts + Tc) as additional time.

• Dpf = Additional distance

According to ANSI's formula, Dpf is calculated as shown below:

 $Dpf = 3.4 \times (d - 7.0)$: Where d is the detection capability (or object resolution) of the F3SG-R (unit: mm)

[Calculation example]

When K = 1,600 mm/s, Ts + Tc = 0.06 s, brake monitor setting time = 0.1 s,

Tr = 0.008 s, and d = 14 mm:

Tbm = 0.1 - 0.06 = 0.04 s

Dpf = 3.4 x (14 - 7.0) = 23.8 mm

 $S = 1,600 \times (0.06 + 0.008 + 0.04) + 23.8 = 199.8 \text{ mm}$


4-1-3. Distance from Reflective Surfaces

Install the sensor system so that it is not affected by reflective surfaces. Failure to do so may hinder detection, resulting in serious injury.




Install the sensor system at distance D or further from highly reflective surfaces such as metallic walls, floors, ceilings, or workpieces, as shown below.

4-1-3-1. F3SG-4R□ (Type 4 ESPE)

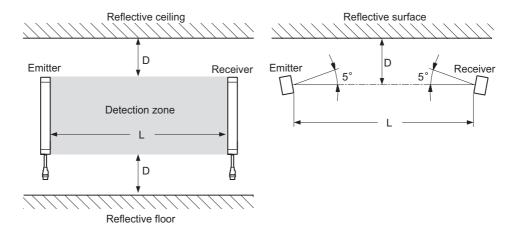

Distance between an emitter and a	Allowable installation distance
receiver (operating range L)	D
0.3 to less than 3 m	0.13 m
3 m or more	L/2 x tan5 ° = L x 0.044 m

4-1-3-2. F3SG-2R□ (Type 2 ESPE)

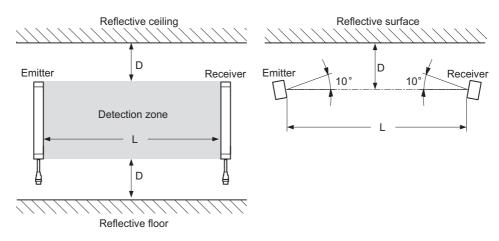

Distance between an emitter and a	Allowable installation distance
receiver (operating range L)	D
0.3 to less than 3 m	0.26 m
3 m or more	L/2 x tan10 ° = L x 0.089 m

4-1-4. Mutual Interference Prevention

WARNING

Do not use the sensor system with mirrors in a retro-reflective configuration. Doing so may hinder detection. It is possible to use mirrors to alter the detection zone to a 90degree angle.




When using more than 1 set of F3SG-R in adjacent areas, the emitter of one F3SG-R may interfere with the receiver of the other, causing the safety functions to stop working properly. Install and configure them so that mutual interference does not occur.




When two or more F3SG-RA or F3SG-RE systems are mounted in close proximity to each other, precautions should be taken to avoid one system interfering with another, such as by beam alignment, back-to-back configuration, physical barrier, Scan Code Selection (for F3SG-RA only) or Operating Range Selection.

■ Example

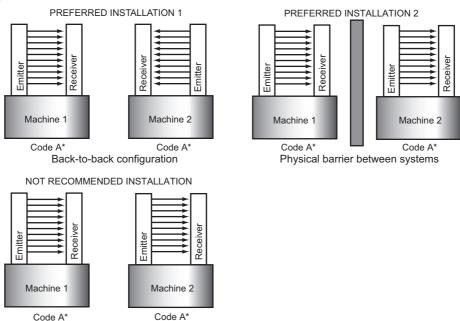

The scan code feature* of the F3SG-RA system allows for placement of systems in close proximity and in line with each other. The distinctive coding of the beams provide for unique operation of a system while in view of another system with a different scan code. Two unique codes are available on the F3SG-RA.

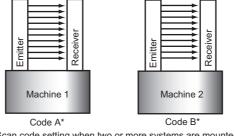

Scan code setting when two or more systems are mounted

The emitter and receiver units must be set to the same scan code for the receiver to enter the Machine Run state. The scan code is selectable by the DIP Switch on the emitter and receiver units.

* The scan code feature is not available for the F3SG-RE series.

Refer to 2-4. Scan Code Selection for more information on the scan code feature.

Refer to 3-2. DIP Switch for more information on setting the scan code by the DIP Switch.

4-2. Cascade Connection

F3SG-RA Series	Х
F3SG-RE Series	




The F3SG-RE cannot be used in cascade connection.

4-2-1. Overview


Up to 3 sets of F3SG-RA can be series-connected. Cascade connection allows them to be used as a safety light curtain, requiring only 1 set to be wired to a controller and preventing mutual interference. If any 1 set of series-connected F3SG-RA is blocked, both of the safety outputs turn OFF.

- Number of connections: Up to 3 sets
- Total number of beams: Up to 255 beams
- · Total sum of cable lengths between cascaded segments

Example: Configuring an U-shaped detection zone

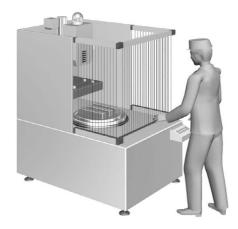


The sensor segments in a cascade connection are called as follows:

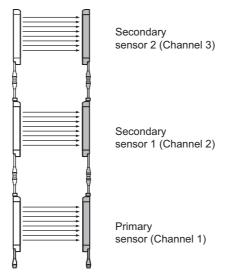

The cascaded segments operate according to the DIP Switch settings of the primary sensor. The DIP Switch settings of the primary sensor do not affect the operation.

CHECK!

Properly connect an emitter to another emitter, and a receiver to another receiver, as shown below.

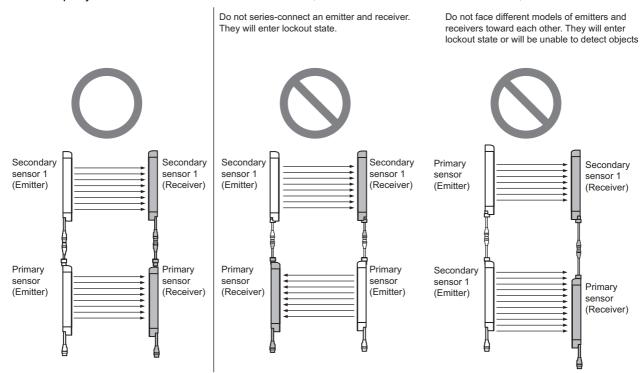


If caps and Cascading Cables are not connected properly, the F3SG-RA enters lockout (when power is turned ON).

CHECK

4-2-2. Connection Procedure

- 1. Remove the caps from the primary sensor. Loosen the screw (M3 cross-shaped) to remove the cap.
- **2.** Connect the the primary sensor and the secondary sensor with the F39-JGR2W Cascading Cable (sold separately).
- **3.** When changing the connection distance between the cascaded segments, connect the F39-JG□B Double-Ended Cable (sold separately) between the Cascading Cable and the power cable of the secondary sensor.

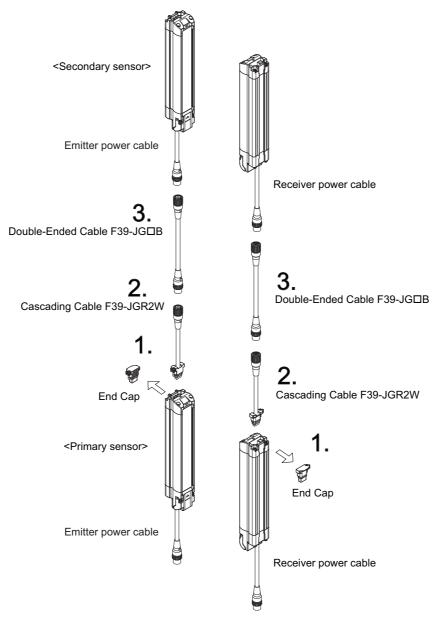




- When attaching a cable or cap, securely fasten the screws (M2.5, recommended torque: 0.35 $\mbox{N-m}\mbox{m}$).
 - Failure to do so may cause the cable/cap to come loose, leading to deterioration of the protective functions.
- CHECK! Attaching/detaching of the cap and the Cascading Cable may cause misalignment of rubber grommet in the connector assembly. Press the grommet to the bottom of the connector and attach the connector to the sensor again.

4-3. Dimensions

4-3-1. Mounted with Standard Fixed Brackets (F39-LGF)

4-3-1-1. Backside Mounting

■ F3SG-RA Series

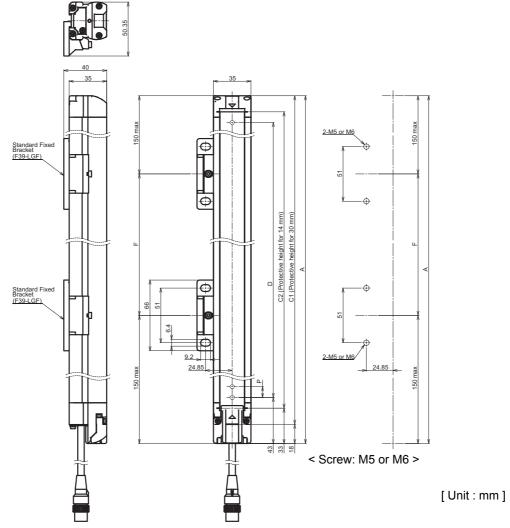

F3SG-□RA□□□□-30 Series

Dimension A	C1+18	
Dimension C1	4-digit number of the type name (Protective height)	
Dimension D	C1-50	
Dimension P	20	

Protective height (C1)	Number of Standard Fixed Brackets	Dimension F
0190 to 1230	2	1000 mm max.
1310 to 2270	3	1000 mm max.
2350 to 2510	4	1000 mm max.

F3SG-□RA□□□□-14 Series

Dimension A	C2+48
Dimension C2	4-digit number of the type name (Protective height)
Dimension D	C2-20
Dimension P	10

()	
0160 to 1200 2 100	000 mm max.
1280 to 2080 3 100	000 mm max.




1 4-4-3-1. Mounting with Standard Fixed Brackets (F39-LGF)



- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- $\overset{\textbf{\$}\textbf{)}}{\text{CHECK!}} \text{- When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.}$

■ F3SG-RE Series

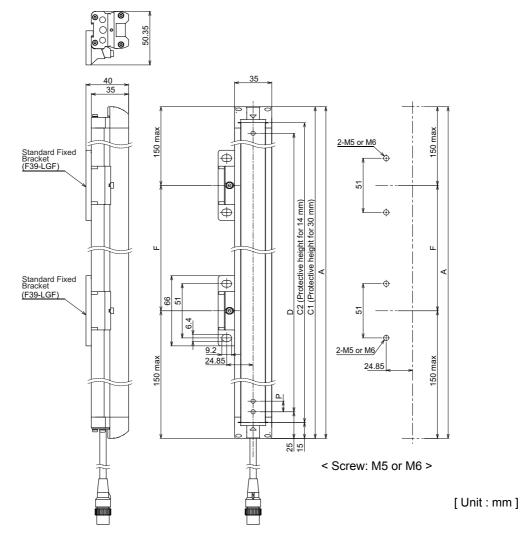

F3SG-□RE□□□□□30 Series

Dimension A	C1
Dimension C1	4-digit number of the type name (Protective height)
Dimension D	C1-50
Dimension P	20

Protective height (C1)	Number of Standard Fixed Brackets	Dimension F
0190 to 1230	2	1000 mm max.
1310 to 2270	3	1000 mm max.
2350 to 2510	4	1000 mm max.

F3SG-□RE□□□□□14 Series

Dimension A	C2+30	
Dimension C2	4-digit number of the type name (Protective height)	
Dimension D	C2-20	
Dimension P	10	

Protective height (C2)	Number of Standard Fixed Brackets	Dimension F
0160 to 1200	2	1000 mm max.
1280 to 2080	3	1000 mm max.



4-4-3-1. Mounting with Standard Fixed Brackets (F39-LGF)





- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.

 CHECK! - When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.

4-3-1-2. Side Mounting

■ F3SG-RA Series

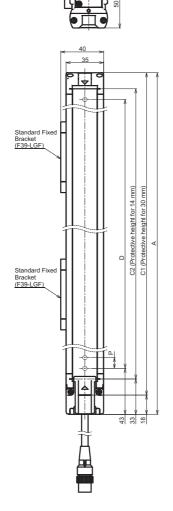

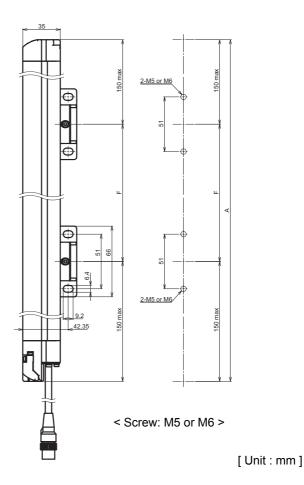

F3SG-□RA□□□□-30 Series

Dimension A	C1+18
Dimension C1	4-digit number of the type name (Protective height)
Dimension D	C1-50
Dimension P	20

Number of Standard Fixed Brackets	Dimension F
2	1000 mm max.
3	1000 mm max.
4	1000 mm max.

F3SG-□RA□□□□-14 Series

Dimension A	C2+48
Dimension C2	4-digit number of the type name (Protective height)
Dimension D	C2-20
Dimension P	10

Protective height (C2)	Number of Standard Fixed Brackets	Dimension F
0160 to 1200	2	1000 mm max.
1280 to 2080	3	1000 mm max.




4-4-3-1. Mounting with Standard Fixed Brackets (F39-LGF)



- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- CHECK! When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.

■ F3SG-RE Series

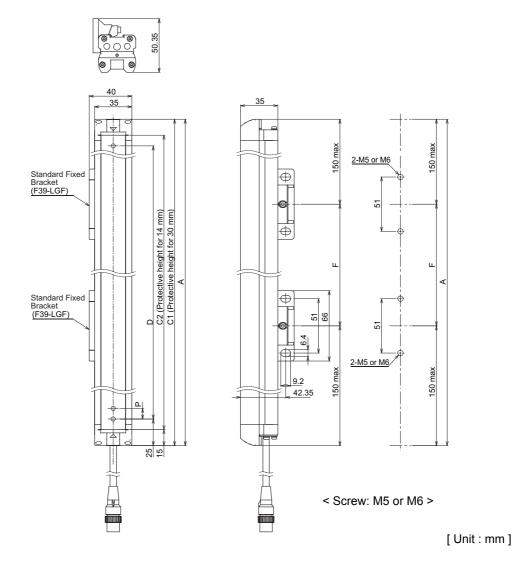

F3SG-□RE□□□□□30 Series

Dimension A	C1
Dimension C1	4-digit number of the type name (Protective height)
Dimension D	C1-50
Dimension P	20

Protective height (C1)	Number of Standard Fixed Brackets	Dimension F
0190 to 1230	2	1000 mm max.
1310 to 2270	3	1000 mm max.
2350 to 2510	4	1000 mm max.

F3SG-□RE□□□□□14 Series

000 2112222211 001100	
Dimension A	C2+30
Dimension C2	4-digit number of the type name (Protective height)
Dimension D	C2-20
Dimension P	10

•	Protective height (C2)	Number of Standard Fixed Brackets	Dimension F
	0160 to 1200	2	1000 mm max.
	1280 to 2080	3	1000 mm max.




4-4-3-1. Mounting with Standard Fixed Brackets (F39-LGF)



- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- CHECK! When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.


4-3-1-3. Standard Fixed Bracket

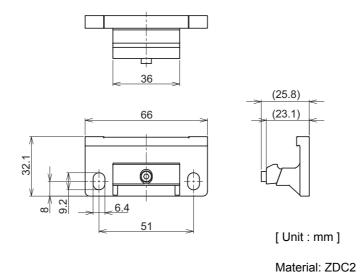

4-3-2. Mounted with Standard Adjustable Brackets (F39-LGA)

4-3-2-1. Backside Mounting

■ F3SG-RA Series

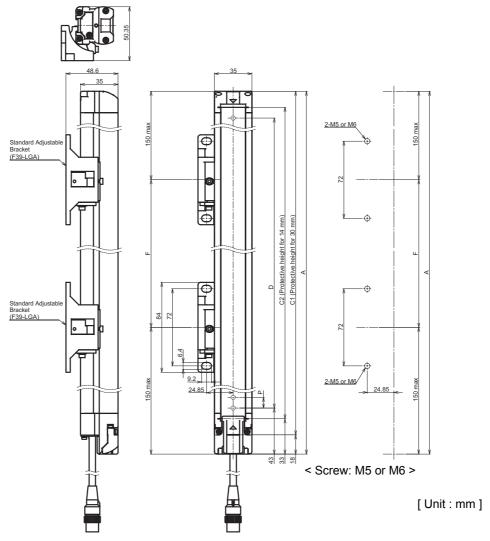

F3SG-□RA□□□□-30 Series

000 =: 0 1==== 00 00::00		
Dimension A	C1+18	
Dimension C1	4-digit number of the type name (Protective height)	
Dimension D	C1-50	
Dimension P	20	

Protective height (C1)	Number of Standard Adjustable Brackets	Dimension F
0190 to 1230	2	1000 mm max.
1310 to 2270	3	1000 mm max.
2350 to 2510	4	1000 mm max.

F3SG-□RA□□□□-14 Series

Dimension A	C2+48
Dimension C2	4-digit number of the type name (Protective height)
Dimension D	C2-20
Dimension P	10

Protective height (C2)	Number of Standard Adjustable Brackets	Dimension F
0160 to 1200	2	1000 mm max.
1280 to 2080	3	1000 mm max.




1 4-4-3-2. Mounting with Standard Adjustable Brackets (F39-LGA)



- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- CHECK! When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
 - The angle adjustment range of the Standard Adjustable Brackets is ±15°.

■ F3SG-RE Series

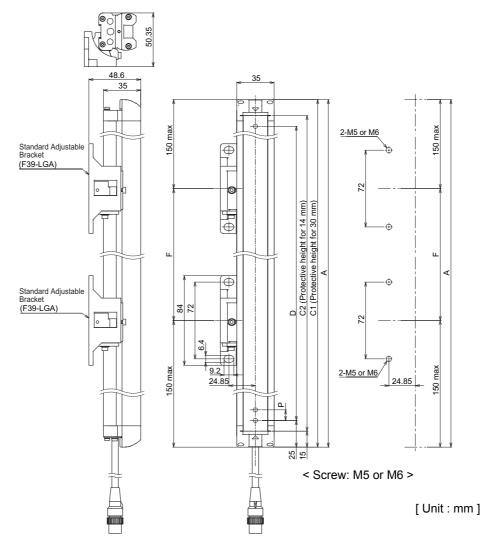

F3SG-□RE□□□□□30 Series

Dimension A	C1
Dimension C1	4-digit number of the type name (Protective height)
Dimension D	C1-50
Dimension P	20

Protective height (C1)	Number of Standard Adjustable Brackets	Dimension F
0190 to 1230	2	1000 mm max.
1310 to 2270	3	1000 mm max.
2350 to 2510	4	1000 mm max.

F3SG-□RE□□□□□14 Series

Dimension A	C2+30
Dimension C2	4-digit number of the type name (Protective height)
Dimension D	C2-20
Dimension P	10

•	Protective height (C2)	Number of Standard Adjustable Brackets	Dimension F
	0160 to 1200	2	1000 mm max.
	1280 to 2080	3	1000 mm max.




4-4-3-2. Mounting with Standard Adjustable Brackets (F39-LGA)




- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- CHECK! When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
 - The angle adjustment range of the Standard Adjustable Brackets is ±15°.

4-3-2-2. Side Mounting

■ F3SG-RA Series

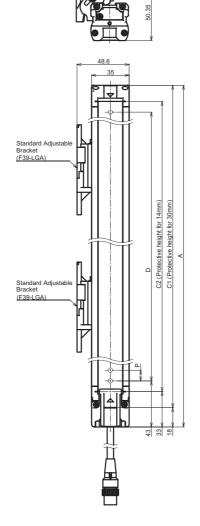

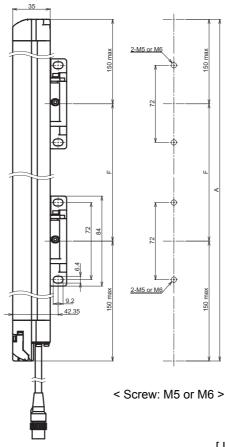

[Unit : mm]

F3SG-□RA□□□□-30 Series

Dimension A	C1+18
Dimension C1	4-digit number of the type name (Protective height)
Dimension D	C1-50
Dimension P	20

Protective height (C1)	Number of Standard Adjustable Brackets	Dimension F
0190 to 1230	2	1000 mm max.
1310 to 2270	3	1000 mm max.
2350 to 2510	4	1000 mm max.

F3SG-□RA□□□□-14 Series

Dimension A	C2+48
Dimension C2	4-digit number of the type name (Protective height)
Dimension D	C2-20
Dimension P	10

٠	Protective height (C2)	Number of Standard Adjustable Brackets	Dimension F
	0160 to 1200	2	1000 mm max.
	1280 to 2080	3	1000 mm max.



4-4-3-2. Mounting with Standard Adjustable Brackets (F39-LGA)



- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- CHECK! When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
 - The angle adjustment range of the Standard Adjustable Brackets is ±15°.


max

20

max

150

■ F3SG-RE Series

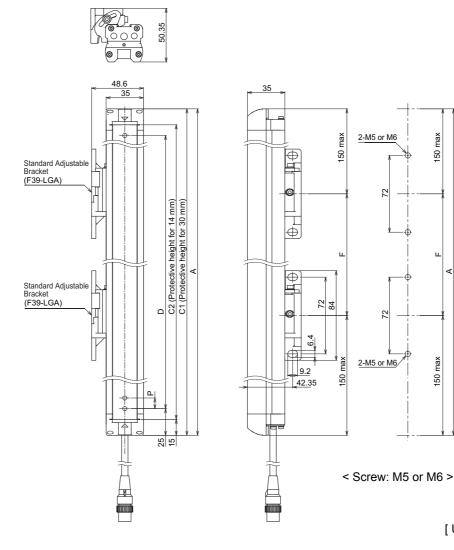

[Unit : mm]

F3SG-□RE□□□□□30 Series

Dimension A	C1	
Dimension C1	4-digit number of the type name (Protective height)	
Dimension D	C1-50	
Dimension P	20	

Protective height (C1)	Number of Standard Adjustable Brackets	Dimension F
0190 to 1230	2	1000 mm max.
1310 to 2270	3	1000 mm max.
2350 to 2510	4	1000 mm max.

F3SG-□RF□□□□□14 Series

Dimension A	C2+30	
Dimension C2	4-digit number of the type name (Protective height)	
Dimension D	C2-20	
Dimension P	10	

Protective height (C2)	Number of Standard Adjustable Brackets	Dimension F
0160 to 1200	2	1000 mm max.
1280 to 2080	3	1000 mm max.




1 1 4-4-3-2. Mounting with Standard Adjustable Brackets (F39-LGA)



- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- CHECK! When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
 - The angle adjustment range of the Standard Adjustable Brackets is ±15°.

4-3-2-3. Standard Adjustable Bracket

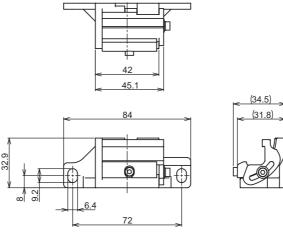

[Unit : mm]

Material: ZDC2, Fluorochemical lubricant oil

4-4. Mounting

4-4-1. Mounting Method

You can mount the F3SG-R with Standard Fixed Brackets and Standard Adjustable Brackets. Any of these mounting methods allows the user to use the same bracket for the backside mounting and side mounting.

4-4-2. Number of Brackets Required

The numbers of brackets required according to the protective heights of the sensor are as follows:

· Mounting with Standard Fixed Brackets

Protective height		Number of brackets
F3SG-□R□□□□□□30	F3SG-□R□□□□□□14	Number of brackets
0190 to 1230	0160 to 1200	2
1310 to 2270	1280 to 2080	3
2350 to 2510	-	4

· Mounting with Standard Adjustable Brackets

Protective height		Number of brackets	
F3SG-□R□□□□□□30	F3SG-□R□□□□□□14	Number of brackets	
0190 to 1230	0160 to 1200	2	
1310 to 2270	1280 to 2080	3	
2350 to 2510	-	4	



Make sure that the F3SG-R is securely mounted and its cables and connectors are properly connected.




The required number of brackets is the same between F3SG-RA and F3SG-RE series.

4-4-3. Mounting Procedure


The mounting procedure is the same between F3SG-RA and F3SG-RE series.

4-4-3-1. Mounting with Standard Fixed Brackets (F39-LGF)


1. Loosen the hexagon socket head cap screws (M3 x 15). (Fig.1)

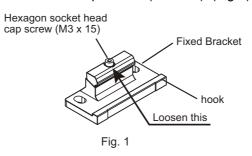

2. Slide the hook of the Fixed Bracket (1) in the groove of the F3SG-R housing. Lightly tighten the hexagon socket head cap screw (M3 x 15). (Fig. 2)

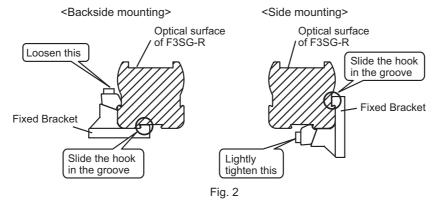


3. Adjust the Standard Fixed Bracket to the mounting position of the wall surface. Securely tighten the hexagon socket head cap screw (M3 x 15) to fix the Standard Fixed Bracket to the housing of the F3SG-R. The recommended torque to tighten the hexagon socket head cap screw (M3 x 15) is 2.0 N•m. (Fig. 3)

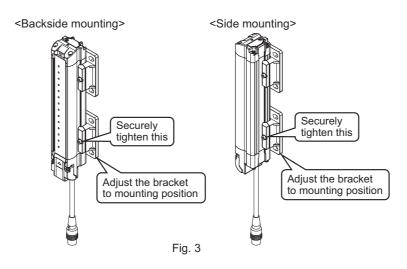

Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

9 CHECK! **4.** Securely tighten the screws to fix the Standard Fixed Bracket to the mounting position of the wall surface. (Fig. 4)

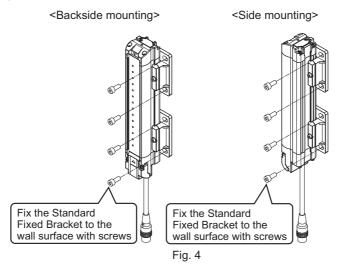



Screws to mount the brackets to the wall are not included.

4-4-3-2. Mounting with Standard Adjustable Brackets (F39-LGA)

- **1.** Loosen the Screw (1) (hexagon socket head cap screw (M3 x 15)) and change the angle of the Adjustable Bracket (1) according to its mounting direction. (Fig. 1)
- 2. Loosen the Screw (2) (hexagon socket head cap screw (M3 x 15)). (Fig. 1)

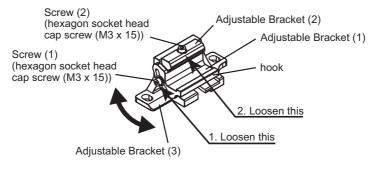


Fig. 1

3. Slide the hooks of the Adjustable Bracket (1) and the Adjustable Bracket (2) in the grooves of the F3SG-R housing. Lightly tighten the Screw (2). (Fig. 2)



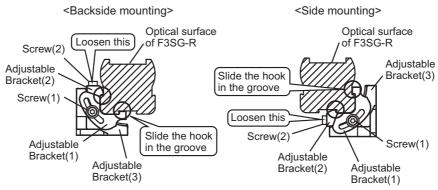


Fig. 2


CHECK

4. Adjust the Standard Adjustable Bracket to the mounting position of the wall surface. Securely tighten the Screw (2) to fix the Standard Adjustable Bracket to the housing of the F3SG-R. The recommended torque to tighten the Screw (2) is 2.0 N•m. (Fig. 3)

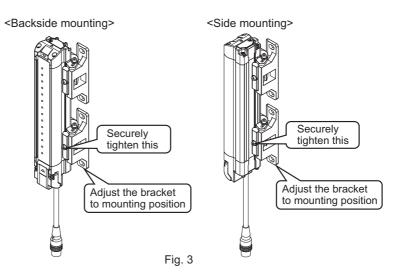

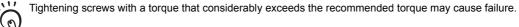

5. Securely tighten screws to fix the Standard Adjustable Bracket to the mounting position of the wall surface. (Fig. 4)

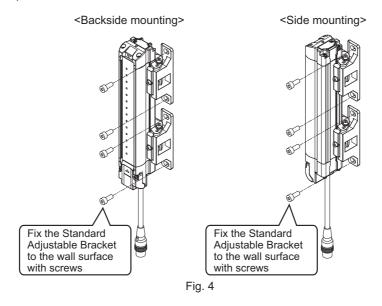


Screws to mount the brackets to the wall are not included.

CHECK!

6. Power the F3SG-R on to perform beam alignment.

Move the emitter from side to side (Fig. 5) to align it to a center position where the Stable-state indicator (STB, green) of the receiver is illuminated while checking the state of the top and bottom beams with the Top-beam-state indicator (TOP, blue) and Bottom-beam-state indicator (BTM, blue) of the receiver. (Fig. 6)


Next, move the receiver from side to side to align it to a center position where the Stable-state indicator (STB, green) of the receiver is illuminated while checking the state of the top and bottom beams with the Top-beam-state indicator (TOP, blue) and Bottom-beam-state indicator (BTM, blue) of the receiver.

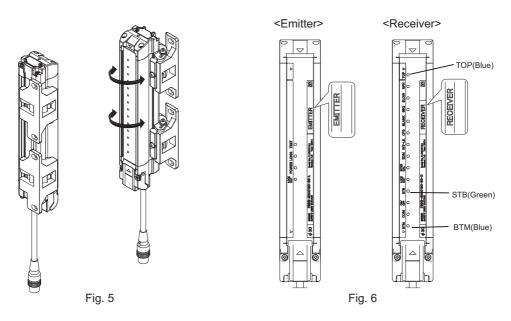



The angle adjustment range of the Standard Adjustable Brackets is ±15°.

7. Securely tighten the Screw (1) to fix the Standard Adjustable Bracket to the housing of the F3SG-R. The recommended torque to tighten the Screw (1) is 2.0 N·m. (Fig. 7)

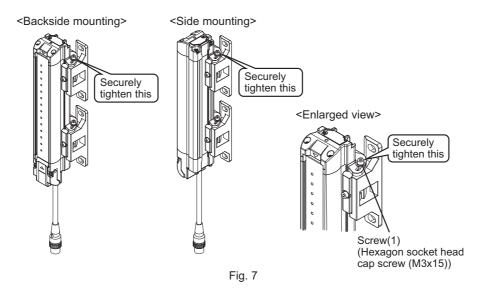



Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

4-4-4. Beam Alignment Procedure

- **1.** Verify the following points:
 - The optical surfaces of the emitter and receiver are clean.
 - There is no interrupting object in the detection zone of the F3SG-R.
- 2. Align the beams of the emitter and receiver:

Move the emitter from side to side to align it to a center position where the Stable-state indicator (STB, green) of the receiver is illuminated while checking the state of the top and bottom beams with the Top-beam-state indicator (TOP, blue) and Bottom-beam-state indicator (BTM, blue) of the receiver.

Next, move the receiver from side to side to align it to a center position where the Stable-state indicator (STB, green) of the receiver is illuminated while checking the state of the top and bottom beams with the Top-beam-state indicator (TOP, blue) and Bottom-beam-state indicator (BTM, blue) of the receiver.





Perform beam alignment to the primary sensor first, when using the F3SG-R in a cascade conection.

- **3.** Verify that all the three indicators of the receiver, Top-beam-state (TOP, blue), Bottom-beam-state (BTM, blue) and Stable-state (STB, green) indicators are illuminated.
- **4.** Make sure to keep the beams aligned and tightly fasten all screws.

 The table below shows the recommended tightening torques for the included screws.

Mounting bracket type	Nominal diameter x length of screw (mm)	Tightening torque (recommended)	
Standard Fixed Bracket	M3 x 15	2.0 N•m	
Standard Adjustable Bracket	IVIS X 15	2.0 114111	



- If any of the Top-beam-state (TOP, blue), Bottom-beam-state (BTM, blue) and Stable-state (STB, green) indicators are not illuminated, check if the emitter and receiver are mounted parallel and at the same height.
- Fig. Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

4-5. Wiring

4-5-1. Wiring Precautions

⚠ WARNING

Double or reinforced insulation from hazardous voltage must be applied to all input and output lines. Failure to do so may result in electric shock.



When using PNP output, connect the load between the output and 0 V line. When using NPN output, connect the load between the output and +24 VDC line.



Connecting between the output and a different power supply line from the above line will result in dangerous condition because the operation mode of safety output is reversed to "Dark-ON".

When using the PNP output, do not ground +24 VDC line. When using the NPN output, do not ground 0 V line. Otherwise, a ground fault may turn the safety output ON, resulting in a failure of stopping the machine.



Configure the system by using the optimal number of safety outputs that satisfy the requirements of the necessary safety category.




Do not connect each line of F3SG-R to a DC power supply higher than 24 VDC+20%. Also, do not connect it to an AC power supply. Failure to do so may result in electric shock.



Make sure to perform wiring while the power supply is OFF.



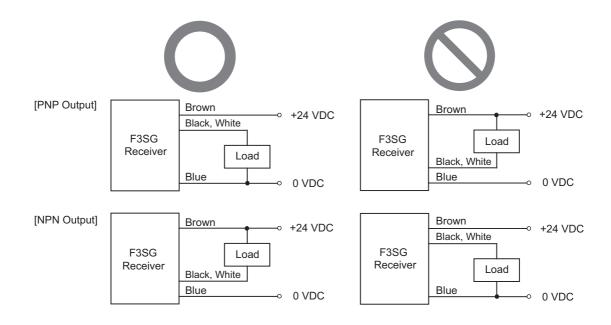

4-5-2. Power Supply Unit

∴ WARNING

For the F3SG-R to comply with IEC 61496-1 and UL 508, the DC power supply unit must satisfy all of the following conditions:



- Must be within the rated power voltage (24 V DC ± 20%)
- Must have tolerance against the total rated current of devices if it is connected to multiple devices
- Must comply with EMC directives (industrial environment)
- Double or reinforced insulation must be applied between the primary and secondary circuits
- Automatic recovery of overcurrent protection characteristics
- · Output holding time must be 20ms or longer
- Must satisfy output characteristic requirements for class 2 circuit or limited voltage current circuit defined by UL508 (Refer to Note below.)
- Must comply with laws and regulations, regarding EMC and electrical equipment safety, of the country or region where the F3SG-R is used (For example, in EU, the power supply must comply with the EMC Directive and the Low Voltage Directive.)

Note:

To prevent a fire, the secondary circuit of the power supply must satisfy either of the following conditions in accordance with UL 508:

•As with secondary winding of isolation transformer, there must be a limited current voltage circuit to which isolated power supply provides power, and the "current is limited to 8 A max. (including short-circuit)" or "circuit protection such as a fuse is used to limit the current, which has a rating of 4.2A max." (24 VDC power supply).

Recommended power supply: OMRON S8VS (30 W or 60 W) or S8VK-G (15W, 30W or 60W) These products are UL-Listed (UL508, class 2 power supply), CE marking compatible (EMC/Low Voltage Directive).

•Class 2 power supply unit complying with UL 1310, or a circuit using 2 transformers complying with UL 1585 as a power supply.

4-5-3. Cable Connections(F3SG-RA Series)

⚠ WARNING

Extension of the cable must be within a specified length. If it isn't, safety function may not work properly, resulting in danger.




Perform wiring according to the following procedure.


- 1. Connect an emitter cable (F39-JG□-L, gray, sold separately) to the emitter-side power cable (gray).
- **2.** Connect a receiver cable (F39-JG□-D, black, sold separately) to the receiver-side power cable (black).

4-5-3-1. Single-Ended Cable

■ Single-Ended Cable for Emitter (F39-JG□A-L, sold separately)

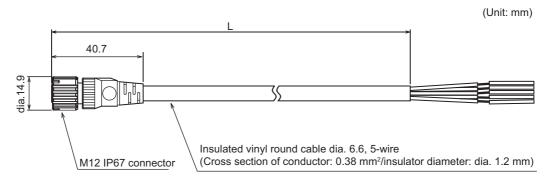


■ Single-Ended Cable for Receiver (F39-JG□A-D, sold separately)

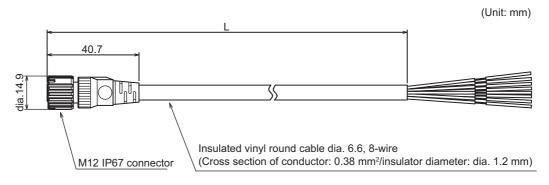


Emitter cable (Gray)	Receiver cable (Black)	L (m)
F39-JG3A-L	F39-JG3A-D	3
F39-JG7A-L	F39-JG7A-D	7
F39-JG10A-L	F39-JG10A-D	10
F39-JG15A-L	F39-JG15A-D	15
F39-JG20A-L	F39-JG20A-D	20

<Internal wiring diagram> (F39-JG□A-L)

Connect to Power Cable or Double-Ended Cable

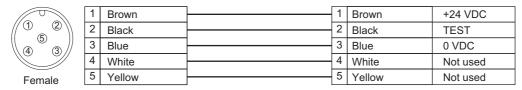


<Internal wiring diagram> (F39-JG□A-D)

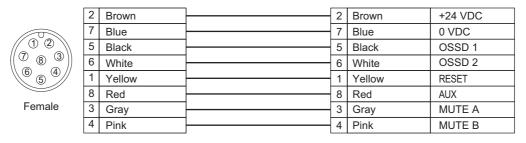


4-5-3-2. Double-Ended Cable

■ Double-Ended Cable for Emitter: Cable for extension (F39-JG□B-L, sold separately)

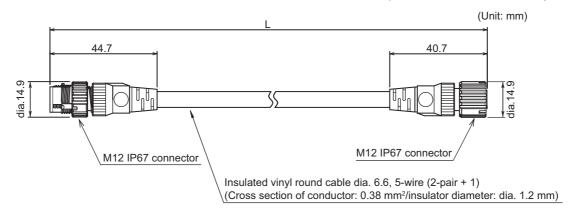


■ Double-Ended Cable for Receiver: Cable for extension (F39-JG□B-D, sold separately)

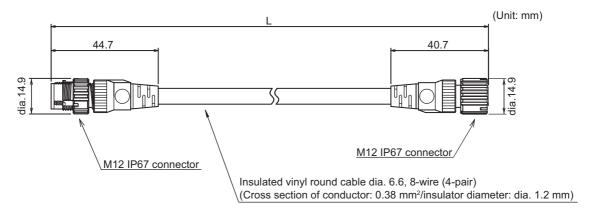


Receiver cable (Black)	L (m)
F39-JGR15B-D	0.5
F39-JG1B-D	1
F39-JG3B-D	3
F39-JG5B-D	5
F39-JG7B-D	7
F39-JG10B-D	10
F39-JG15B-D	15
F39-JG20B-D	20
	F39-JG1B-D F39-JG3B-D F39-JG5B-D F39-JG7B-D F39-JG10B-D F39-JG15B-D

<Internal wiring diagram> (F39-JG□B-L)

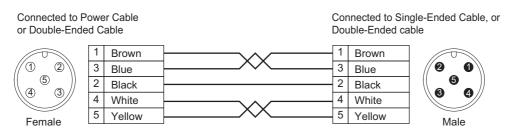

Twisted pair wires are brown and blue, and white and yellow.


<Internal wiring diagram> (F39-JG□B-D)

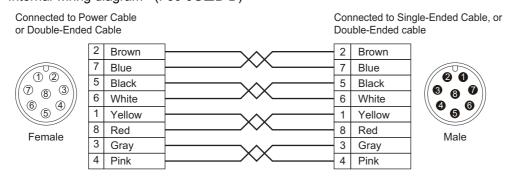

Twisted pair wires are brown and blue, black and white, yellow and red, and gray and pink.


If the length of the F39-JG□A Single-Ended Cable is insufficient, use 1 or more F39-JG□B Double-Ended Cables to extend the length, as required. The total cable extension length of the power cable must be 100 m max.


<Connection example>

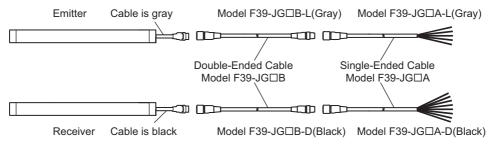


4-5-3-3. Cascading Cable


Cascading Cable for Emitter (F39-JGR2W-L, sold separately)

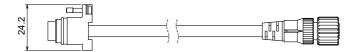

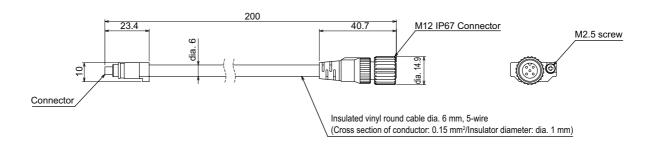


Cascading Cable for Receiver (F39-JGR2W-D, sold separately)

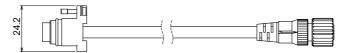

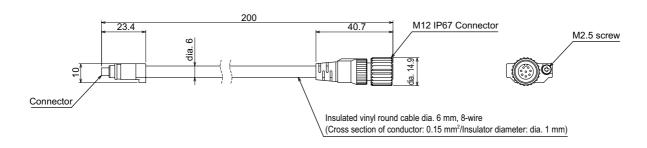

Set model name	Emitter cable (Gray)	Receiver cable (Black)	L (m)
F39-JGR2W	F39-JGR2W-L	F39-JGR2W-D	0.2

Connect the F39-JG Double-Ended Cable between the power cable of the F3SG-RA and the F39-JGR2W Cascading Cable. (Total sum of cable lengths between sensors: 10 m max.)

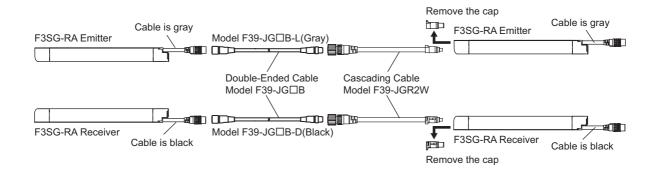

4-5-3-4. Extending Cable Length with Commercially Available Cable

When you need to use a cable that is not specified by OMRON, use a cable that satisfies the following specifications.

- 1. Emitter: 5-wire Receiver: 8-wire
- 2. 0.3 mm² or larger, conductor resistance 0.058 ohms/m max.
- 3. Mute A and Mute B lines, and 24 VDC and 0 VDC lines must be used as twisted-pair lines.





Do not use cables in the same conduit as high voltage or electric power lines.

4-5-3-5. Reduced Wiring Connector System

Reduced wiring can be achieved by using the Y-Joint Plug/Socket Connector (F39-GCNY2, sold separately).

Y-Joint Plug/Socket Connector (F39-GCNY2, sold separately)

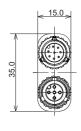


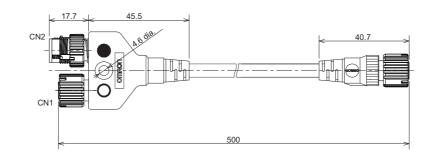



Model	L (m)
F39-GCNY2	0.5

<Internal wiring diagram>

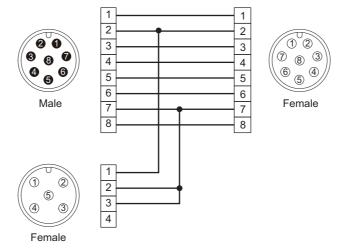

4-5-4. Cable Connections(F3SG-RE Series)


⚠ WARNING

Extension of the cable must be within a specified length. If it isn't, safety function may not work properly, resulting in danger.




There are no dedicated cables for the F3SG-RE series. You can use the cables that satisfy the following requirements:

- 1. Emitter: 4-wire Receiver: 4-wire4
- 2. 0.3 mm² or larger, conductor resistance 0.058 ohms/m max.

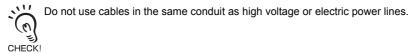


4-5-4-1. Recommended Cable

■ Round Water-resistant Connector: Connector Connected to Cable, Socket on One Cable End (XS5F-D421-□80-F, sold separately)

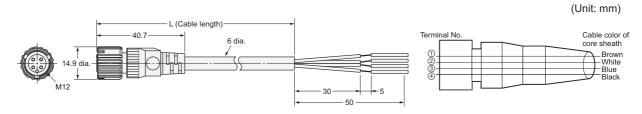

Specification	Model	L (m)
Fire-retardant, Robot cable	XS5F-D421-C80-F	1
	XS5F-D421-D80-F	2
	XS5F-D421-E80-F	3
	XS5F-D421-G80-F	5
	XS5F-D421-J80-F	10


■ Round Water-resistant Connector: Connectors Connected to Cable, Socket and Plug on Cable Ends (XS5W-D421-□81-F, sold separately)

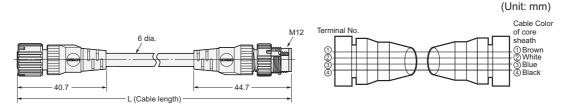

Specification	Model	L (m)
Fire-retardant, Robot cable	XS5W-D421-C81-F	1
	XS5W-D421-D81-F	2
	XS5W-D421-E81-F	3
	XS5W-D421-G81-F	5
	XS5W-D421-J81-F	10

If the length of the Connector Connected to Cable, Socket on One Cable End (XS5F-D421- \square 80-F) is insufficient, use 1 or more Connectors Connected to Cable, Socket and Plug on Cable Ends (XS5W-D421- \square 81-F) to extend the length, as required. The total cable extension length of the power cable must be 100 m max.

<Connection example>

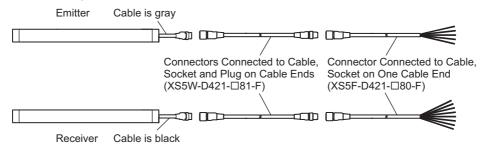

4-5-4-2. Extending Cable Length with Commercially Available Cable

When you need to use a cable that is not specified by OMRON, use a cable that satisfies the following specifications.

1. Emitter: 4-wire Receiver: 4-wire

CHECK!


2. 0.3 mm² or larger, conductor resistance 0.058 ohms/m max.

Do not use cables in the same conduit as high voltage or electric power lines.

4-5-4-3. Reduced Wiring Connector System


Reduced wiring can be achieved by using the Y-Joint Plug/Socket Connector (F39-GCNY1, sold separately).

Y-Joint Plug/Socket Connector (F39-GCNY1, sold separately)

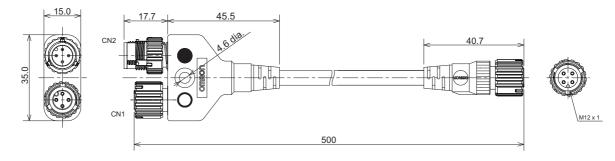

Model	L (m)
F39-GCNY1	0.5


<Internal wiring diagram>

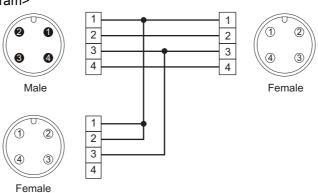

4-5-5. Functional Earth Connection

When you connect the F3SG-R with the functional earth, connect the earth cables to the functional earth terminal, as shown below.

The size of the screws of the terminals is M3. Make sure to use crimp terminals that fits the size.

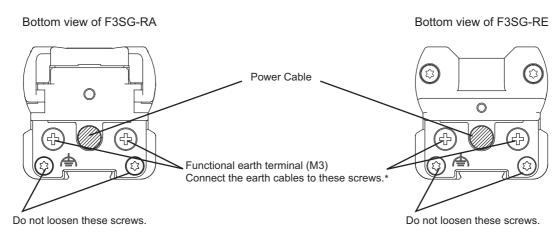

^{*} Select either of the terminals according to your environment.



The F3SG-R operates properly without functional earth connection in a general industrial environment. If the F3SG-R fails due to electrical noise, connecting the F3SG-R to the functional earth may work to prevent the noise. It is CHECK! recommended the functional earth terminal of the F3SG-R be connected to functional earth cables. Connection with protective earth cables may cause the F3SG-R to fail due to a noise level of the environment.

Chapter 5 **Input/Output Circuit and Applications**

5-1. Input/Output Circuit	157
5-1-1. Entire Circuit Diagram	157
5-1-1. F3SG-RA Series	157
5-1-1-2. F3SG-RE Series	159
5-1-2. Input Circuit Diagram by Function	161
5-1-2-1. F3SG-RA Series	161
5-1-2-2. F3SG-RE Series	161
5-2. Wiring Examples(F3SG-RA Series)	162
5-2-1. Standalone F3SG-RA using PNP Outputs	162
5-2-2. Standalone F3SG-RA using NPN Outputs	163
5-2-3. Standard Muting Mode/Exit-Only Muting Mode using Outputs	PNP 164
5-2-4. Standard Muting Mode/Exit-Only Muting Mode using l Outputs	NPN 165
5-2-5. Standard Muting Mode/Exit-Only Muting Mode with Muting Sensors using PNP Outputs	two 166
5-2-6. Standard Muting Mode/Exit-Only Muting Mode with Muting Sensors using NPN Outputs	two 167
5-2-7. Standard Muting Mode/Exit-Only Muting Mode with Muting Sensors using PNP Outputs	four 168
5-2-8. Standard Muting Mode/Exit-Only Muting Mode with Muting Sensors using NPN Outputs	four 169
5-2-9. Pre-Resest Mode using PNP Output	170
5-2-10. Pre-Resest Mode using NPN Output	171
5-2-11. Standalone F3SG-RA with Y-Joint Plug/Socket Conneusing PNP outputs	ector 172
5-2-12. Standalone F3SG-RA with Y-Joint Plug/Socket Conneusing NPN outputs	ector 173
5-2-13. F3SG-RA with Y-Joint Plug/Socket Connector in Stan Muting Mode/Exit-Only Muting Mode using PNP outputs	dard 174

5-3	3. Wiring Examples (F3SG-RE Series)	175
	5-3-1. Short Mode	175
	5-3-2. Long Mode	176
	5-3-3. Standalone F3SG-RE with Y-Joint Plug/Socket using PNP outputs	Connector 177
5-4	4. Connectable Safety Control Units	178

5-1. Input/Output Circuit


5-1-1. Entire Circuit Diagram

The entire circuit diagram of the F3SG-R is shown below.


The numbers in the circles indicate the connector's pin numbers.

5-1-1.1. F3SG-RA Series

■ PNP Output

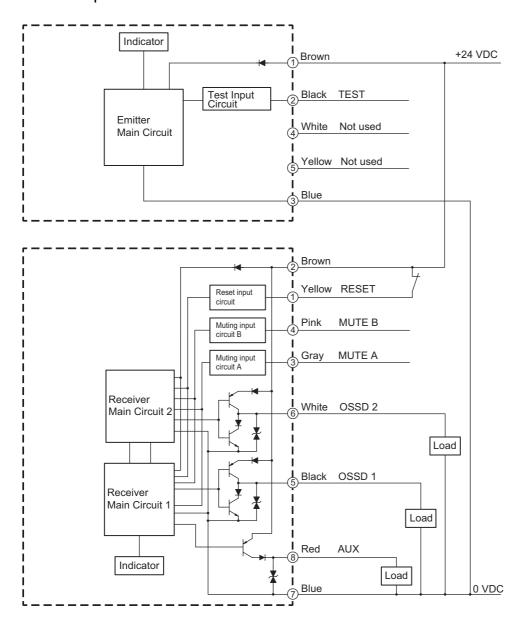


■ NPN Output

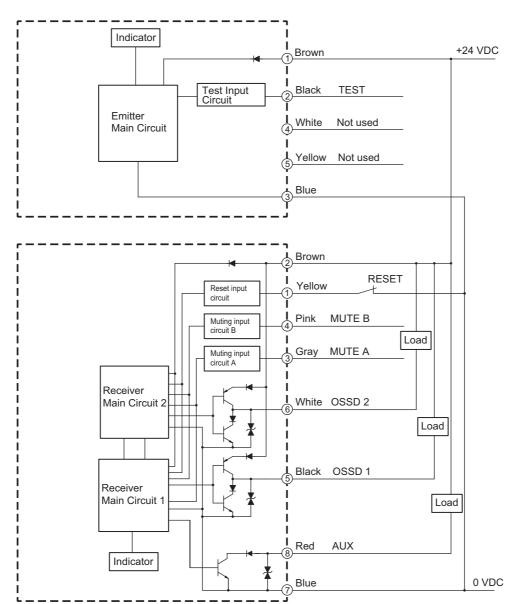


5-1-1-2. F3SG-RE Series

■ PNP Output

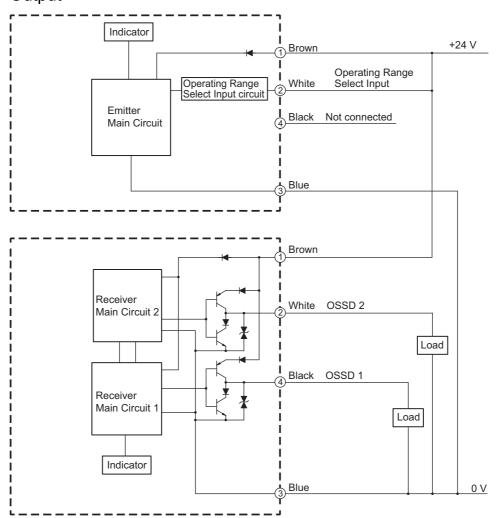

■ NPN Output

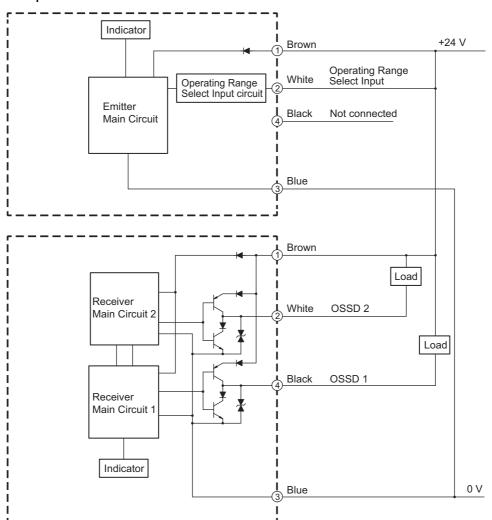



5-1-2. Input Circuit Diagram by Function

The input circuit diagrams of by function are shown below.


5-1-2-1. F3SG-RA Series


■ PNP Output

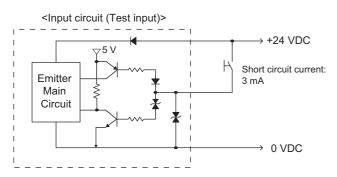

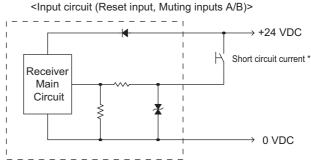

■ NPN Output

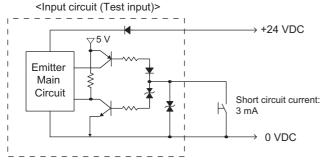

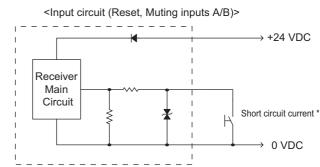

*Short circuit current: 5mA (Reset input), 3mA (Muting inputs A/B)


5-1-2-2. F3SG-RE Series

There are no inputs such as test, reset and muting for F3SG-RE series.


5-2. Wiring Examples(F3SG-RA Series)

Examples of a motor control system using the F3SG-RA are shown below. This chapter shows examples equivalent to ISO 13849-1 (PL e/Category 4).


5-2-1. Standalone F3SG-RA using PNP Outputs

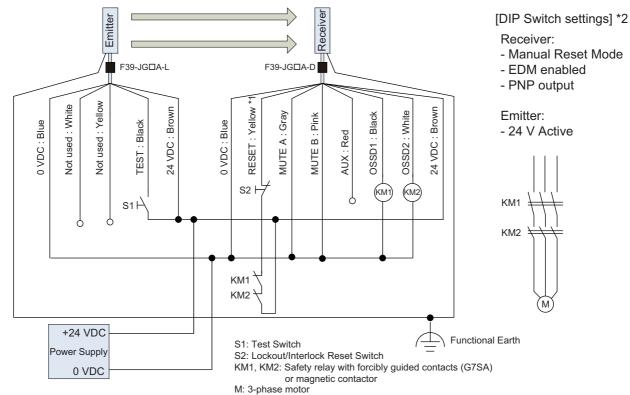


- *1. Also used as EDM input line.
- *2. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

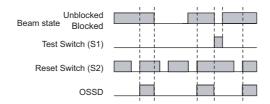


5-2-2. Standalone F3SG-RA using NPN Outputs

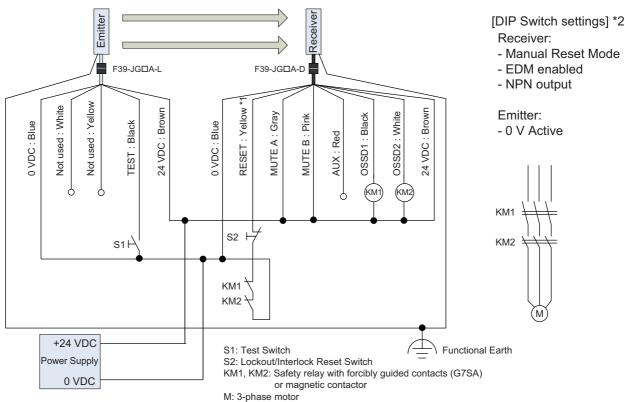


- *1. Also used as EDM input line.
 *2. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

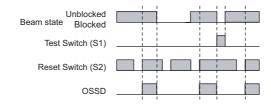


5-2-3. Standard Muting Mode/Exit-Only Muting Mode using PNP Outputs

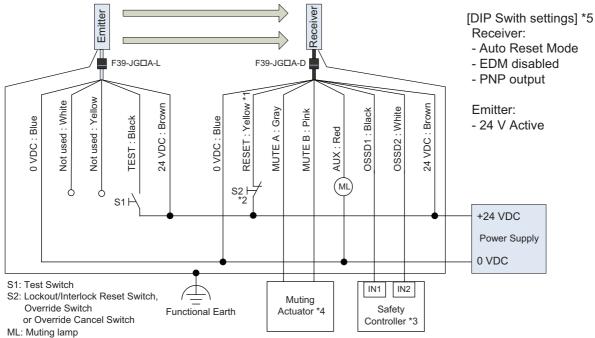

- *1. Also used as Override input line.
- *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.
- *3. Refer to 5-4. Connectable Safety Control Units for more information.
- *4. Refer to Smart Muting Actuator F3W-MA Series User's Manual for more information.
- *5. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

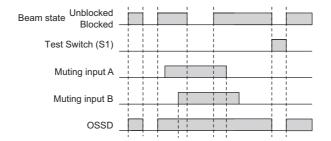


5-2-4. Standard Muting Mode/Exit-Only Muting Mode using NPN Outputs

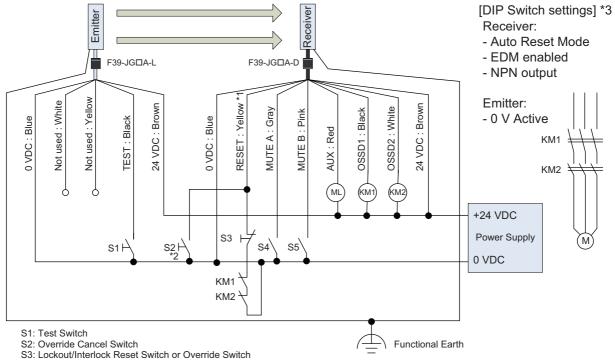


- S4, S5: Muting sensor
- KM1, KM2: Safety relay with forcibly guided contacts (G7SA) or magnetic contactor
- M: 3-phase motor ML: Muting lamp

- *1. Also used as Override input line.
- *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious
- *3. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

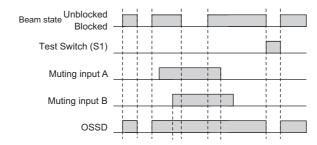

5-2-5. Standard Muting Mode/Exit-Only Muting Mode with two Muting Sensors using PNP Outputs

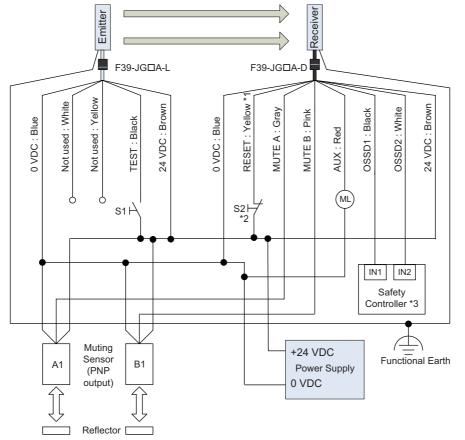


[DIP Switch settings] *4 Receiver:

- Auto Reset Mode
- EDM disabled
- PNP output


Emitter:

- 24 V Active

- S1: Test Switch
- S2: Lockout/Interlock Reset Switch, Override Switch or Override Cancel Switch
- ML: Muting lamp
- A1, B1: Muting sensor
- *1. Also used as Override input line.
- *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.
- *3. Refer to 5-4. Connectable Safety Control Units for more information.
- *4. Refer to *Chapter 3 Setting with DIP Switch* for more information on setting the functions by the DIP Switch.

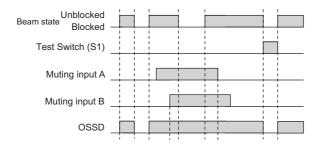


5-2-6. Standard Muting Mode/Exit-Only Muting Mode with two **Muting Sensors using NPN Outputs**

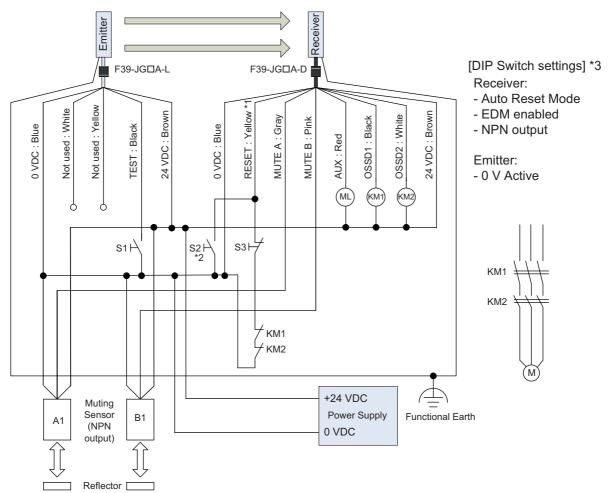


- S1: Test Switch
- S2: Override Cancel Switch
- S3: Lockout/Interlock Reset Switch or Override Switch
- KM1, KM2: Safety relay with forcibly guided contacts (G7SA) or magnetic contactor
- M: 3-phase motor ML: Muting lamp
- A1, B1: Muting sensor


- Also used as Override input line.
- *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.
- *3. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

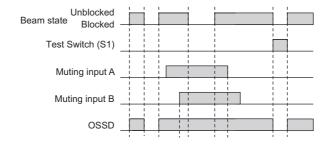


5-2-7. Standard Muting Mode/Exit-Only Muting Mode with four **Muting Sensors using PNP Outputs**

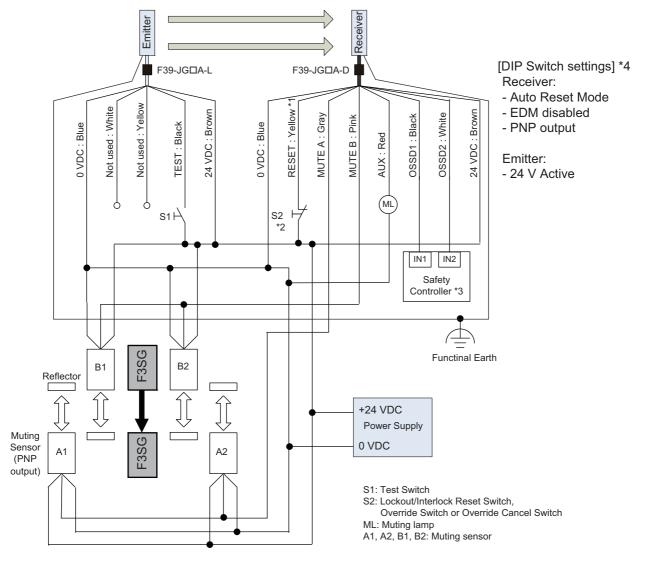


- *1. Also used as Override input line.
- *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.
- *3.Refer to 5-4. Connectable Safety Control Units for more
- *4. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

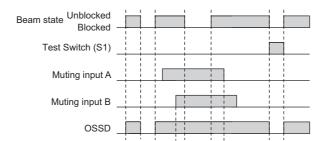


5-2-8. Standard Muting Mode/Exit-Only Muting Mode with four **Muting Sensors using NPN Outputs**

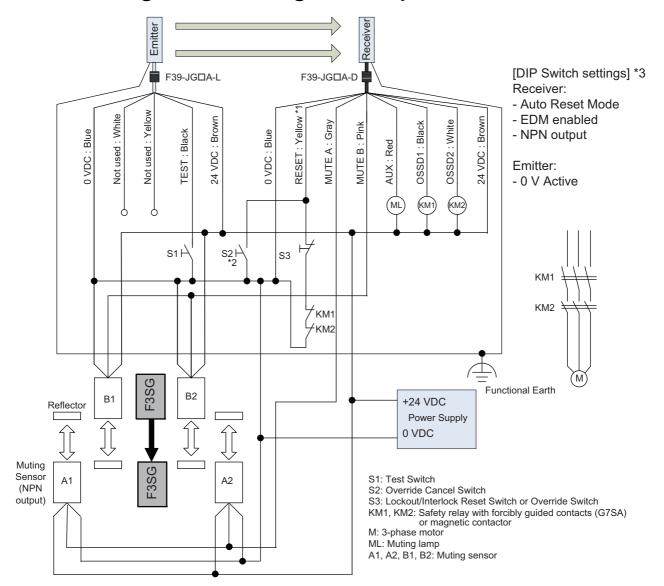


- *1. Also used as Override input line.
- *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state maynot be released by the override cancel switch, resulting in serious injury.
- *3. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

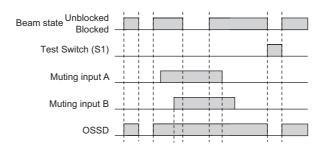

5-2-9. Pre-Resest Mode using PNP Output

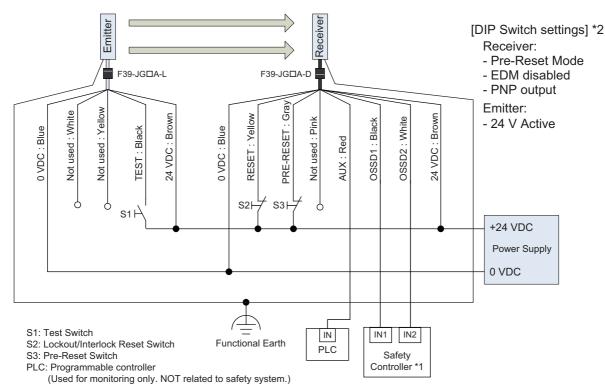


- *1. Refer to 5-4. Connectable Safety Control Units for more information.
- *2. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

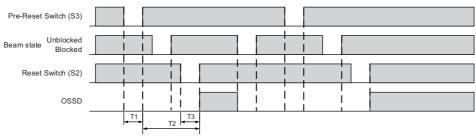

- T1: Push time: must be T1 >= 300ms
 T2: Pre-reset limit time between Pre-reset and Reset: must be T2 <= 60s
- T3: Push time: must be T3 >= 300ms


5-2-10. Pre-Resest Mode using NPN Output

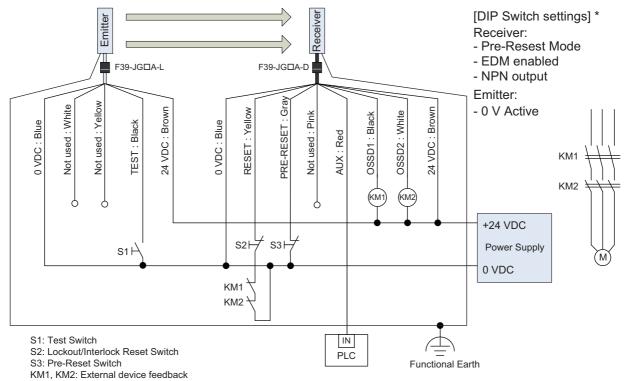

M: 3-phase motor


PLC: Programmable controller (Used for monitoring only. NOT related to safety system.)

^{*} Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

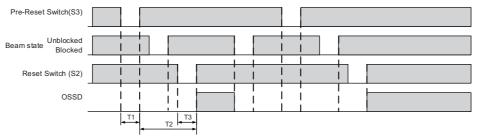

- T1: Push time: must be T1 >= 300ms
- T2: Pre-reset limit time between Pre-reset and Reset: must be T2 <= 60s
- T3: Push time: must be T3 >= 300ms

5-2-11. Standalone F3SG-RA with Y-Joint Plug/Socket **Connector using PNP outputs**

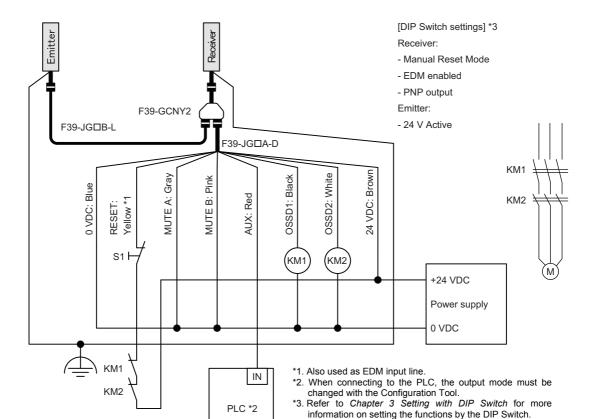


S1: Lockout/Interlock Reset Switch KM1,KM2: External device feedback


M: 3-phase motor

PLC: Programmable controller

(Used for monitoring only. NOT related to safety system.)

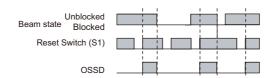

5-2-12. Standalone F3SG-RA with Y-Joint Plug/Socket **Connector using NPN outputs**

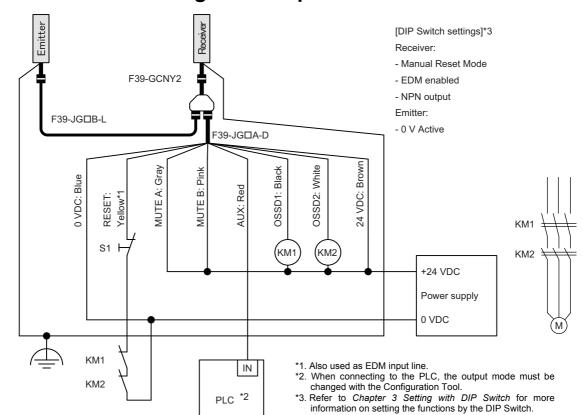


S1: Lockout/Interlock Reset Switch KM1,KM2: External device feedback


M: 3-phase motor

PLC: Programmable controller


(Used for monitoring only. NOT related to safety system.)

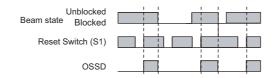

5-2-13. F3SG-RA with Y-Joint Plug/Socket Connector in Standard Muting Mode/Exit-Only Muting Mode using PNP outputs

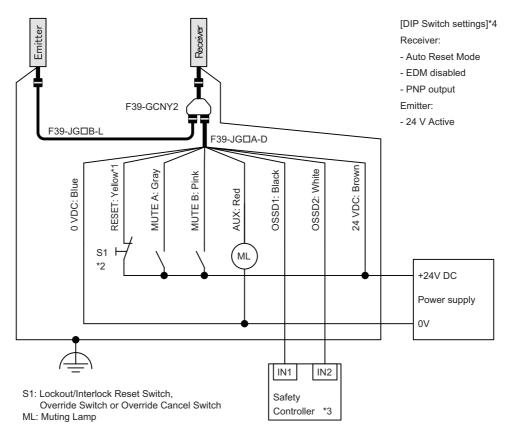


- *1. Also used as EDM input line.
- *2. Make sure to connect an override cancel switch to the Reset line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.
- *3. Refer to 5-4. Connectable Safety Control Units for more information.
- *4. Refer to Chapter 3 Setting with DIP Switch for more information on setting the functions by the DIP Switch.

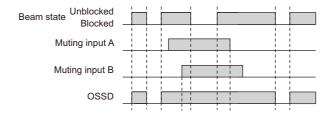


5-3. Wiring Examples (F3SG-RE Series)

Examples of a motor control system using the F3SG-RE are shown below. This chapter shows examples equivalent to ISO 13849-1 (PL e/Category 4).


5-3-1. Short Mode

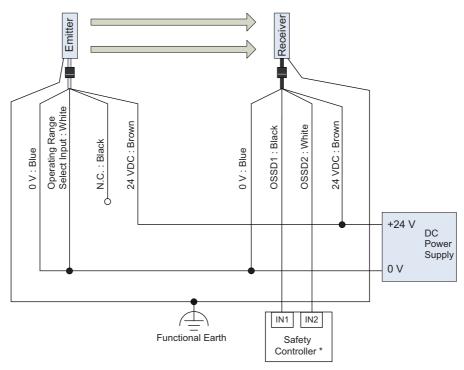

* Refer to 5-4. Connectable Safety Control Units for more information.

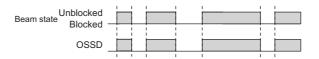


5-3-2. Long Mode

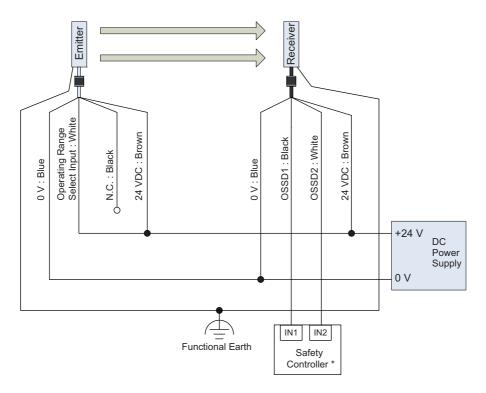


* Refer to 5-4. Connectable Safety Control Units for more information.



5-3-3. Standalone F3SG-RE with Y-Joint Plug/Socket **Connector using PNP outputs**

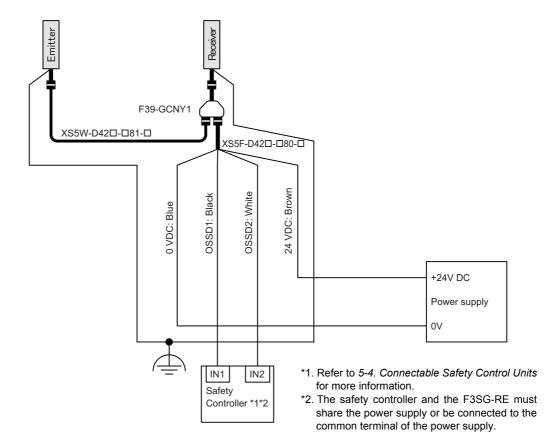

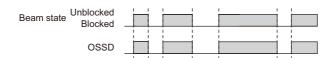

5-4. Connectable Safety Control Units

The F3SG-RA or F3SG-RE with PNP output can be connected to the safety control units listed in the table below.

Connectable Safety Control Units (PNP output)		
G9SA-301	G9SX-AD322-T	G9SP-N10S
G9SA-321	G9SX-ADA222-T	G9SP-N10D
G9SA-501	G9SX-BC202	G9SP-N20S
G9SB-200-B	G9SX-GS226-T15	NE0A-SCPU01
G9SB-200-D		NE1A-SCPU01
G9SB-301-B		NE1A-SCPU02
G9SB-301-D		DST1-ID12SL
		DST1-MD16SL
		DST1-MRD08SL
		NX-SIH400
		NX-SID800
		F3SP-T01

The F3SG-R with NPN output can be connected to the safety control unit listed in the table below.

Connectable Safety Control Units (NPN output)	
G9SA-301-P	

Chapter 6 Checklists

6-1. Pre-Operation Checklists	180
6-2. Maintenance Checklists	183

6-1. Pre-Operation Checklists

MARNING

Make sure Responsible Person tests the operation of the F3SG-R after installation to verify that the F3SG-R operates as intended. Make sure to stop the machine until the test is complete. Unintended function settings may cause a person to go undetected, resulting in serious injury.



After installation, the highest level administrator must use the following checklist to verify the operation, placing a check mark in each of the boxes.

6-1-1. Checklists

6-1-1. Installation Condition Check

☐The machine i	itself does no	t prevent the	oneration	of safety	functions	such as	stonning
	ILOCII UUCO IIU	L DIEVELIL LIIE	ODEIALIOII	UI SAIGIV	TULLULIS	Sucii as	SLUDDIIIU

- □The hazardous part of a machine cannot be reached without passing through the detection zone of the F3SG-R.
- ☐The system is configured so that the F3SG-R can always detect a worker who is working in the hazardous zone.
- ☐The interlock reset switch is installed in a location that provides a clear view of the entire hazardous zone and it cannot be activated from within the hazardous zone.
- ☐The pre-reset switch is installed in a location inside the hazardous zone and where it cannot be operated from outside the hazardous zone.
- □Safety distance has been calculated. Calculated distance: S = ()mm
- □Safety distance has been calculated with larger object resolution when floating blanking or reduced resolution function is used.
 - Calculated distance: S = ()mm
- ☐The actual distance is equal to or greater than the calculated distance. Actual distance = ()mm
- □Reflective surfaces are not installed in prohibited zones.
- □Not installed in a retro-reflective configuration.
- □When muting function is used, a muting sensor must be installed so that muting state should not occur when a human body enters a detection zone of F3SG-R by mistake.
- □When muting function is used, a muting sensor must be installed so that muting state should not occur when a human body enters a hazardous zone of a machine.
- □When muting function is used, muting state can be checked from where a worker operates or adjust the machine.
- □A muting sensor consists of 2 independent devices.
- □It is not used in flammable or explosive atmosphere.

6-1-1-2. Wiring Check Before Power Is Turned ON

- □Power supply unit must be dedicated to F3SG-R and other devices for electrical-detection protective function of F3SG-R such as safety controller and muting sensor, and must not be connected to other devices. It must have tolerance against total rated current of devices if it is connected to multiple devices.
- ☐ The power supply unit is a 24 VDC unit that conforms to the EMC Directive, Low-voltage Directive, and output holding time specifications.
- ☐The power supply polarity is not connected in reverse.
- DEmitter/receiver cables are properly connected to the respective emitters/receivers.
- □Double insulation is used between I/O lines and the hazard potential (commercial power supplies, etc.).
- □When using PNP output, the outputs are not short-circuited to +24 VDC line. When using NPN output, the outputs are not short-circuited to 0 V line.
- □When using PNP output, loads are not connected to +24 VDC line. When using NPN output, loads are not connected to 0 V line.
- □All lines are not connected to commercial power source.
- □F3SG-R's power supply connector and series connection connector must not be attached upside

down.

- ☐Model of emitter and receiver must be the same.
- □When 2 or more F3SG-R systems are used, they are in cascade connection or prevented from mutual interference with each other.
- □On a secondary sensor farthest from its power supply, either of the following is attached:
 - End Cap
 - Lamp (sold separately)
- □Neither connector, cap, or bracket must be loose.
- □Auxiliary output must not be used as safety output.
- □When using PNP output, 0 V line of the power supply is grounded. When using NPN output, +24 VDC line of the power supply is grounded.
- □Wiring must not be bent, cracked, nor damaged.


6-1-1-3. Operation Check While the Machine Is Stopped

☐The test rod is not deformed.

The object resolution may vary depending on the models of the F3SG-R and settings of floating blanking function or reduced resolution function. Use a test rod with an appropriate diameter for inspection. A test rod is not included in the F3SG-R product package.

□The sensor can detect a test rod wherever it is in the detection zone. In other words, when a test rod is inserted into the detection zone, the Stable-state indicator turns OFF and the ON/OFF turns red. When fixed blanking function is used, you must ensure that all blanked zones in the detection zone are covered by a hard barrier guard and there must be no zone in the detection zone where the test rod goes undetected.

To check detection, move the test rod as shown in the diagram below.

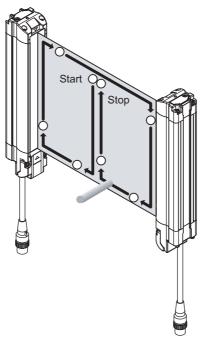

□When the external test function is used:

When 24 V Active is enabled by the DIP Switch, the ON/OFF-state indicator turns red when the TEST line is short-circuited to 9 V to Vs.

When 0 V Active is enabled by the DIP Switch, the ON/OFF indicator turns red when the TEST line is short-circuited to 0 to 3 V.

□When the external device monitoring function is used:

When the RESET line is open the ON/OFF indicator remains red regardless of the beam state of the F3SG-R.

□When the start interlock function is used:

When the F3SG-R is turned ON and the F3SG-RA is unblocked, the ON/OFF indicator remains red. The RESET input turns the ON/OFF indicator to green.

□When the restart interlock function is used:

When the ON/OFF indicator is green and the F3SG-RA is blocked and then returned to unblocked

- state, the ON/OFF indicator remains red. The RESET input turns the ON/OFF indicator to green. □When muting function is used, minimum muting time limit required must be set. □When muting function's operation mode is exit-only muting mode, minimum muting end wait time required must be set. Under muting state, a signal that indicates muting state must be output from the Auxiliary Output.
- □When override function is used, minimum override time limit required must be set.
- Under override state, a signal that indicates override state must be output from the Auxiliary Output.

6-1-1-4. Checking that Hazardous Parts Stop While the Machine Operates

- □The hazardous parts stop immediately when a test rod is inserted into the detection zone at 3 positions: "directly in front of the emitter", "directly in front of the receiver", and "between the emitter and receiver". (Use the appropriate test rod.)
- ☐The hazardous parts remain stopped as long as the test rod is in the detection zone.
- ☐The hazardous parts stop when the power of the F3SG-R is turned OFF.
- ☐The actual response time of the whole machine is equal to or less than the calculated value.

6-2. Maintenance Checklists

. ∴ WARNING

Perform daily and 6-month inspection for the F3SG-R. Otherwise, the system may fail to work properly, resulting in serious injury.



Do not try to disassemble, repair, or modify this product. Doing so may cause the safety functions to stop working properly.



To ensure safety, keep a record of the inspection results.

When the user is a different person from those who installed or designed the system, he/she must be properly trained for maintenance.

6-2-1. Checklists


6-2-1-1. Inspection at Startup and When Changing Operators

- ☐There is no approach route other than through the detection zone of the F3SG-R.
- □Part of the operator's body always remains in the detection zone of the F3SG-R when working around the machine's hazardous part.
- ☐The actual safety distance is equal to or greater than the calculated value.
- ☐There must be no dirt on or damage to the optical surface or spatter protection cover (F39-HGA, sold separately) of the F3SG-R.
- □When 24 V Active is enabled by the DIP Switch, ON/OFF indicator turns red when the TEST line is short-circuited to 9 V to Vs. When 0 V Active is enabled by the DIP Switch, ON/OFF indicator turns red when the TEST line is short-circuited to 0 to 3 V.
- When muting function is used, muting lamp must not be clear due to dirt or degradation.
- ☐The test rod is not deformed.
- □When the start interlock function is used:
 - When the F3SG-RA is turned ON and the F3SG-RA is unblocked, the ON/OFF indicator remains red. The RESET input turns the ON/OFF indicator to green.
- □When the restart interlock function is used:
 - When the ON/OFF indicator is green and the F3SG-RA is blocked and then returned to unblocked state, the ON/OFF indicator remains red. The RESET input turns the ON/OFF indicator to green.
- □When the power of the F3SG-RA is turned ON while nothing is in the detection zone, it must operate as follows:
 - If start interlock is not used: The Power indicator and ON/OFF indicator turn green within 2 seconds after the F3SG-RA is turned ON.
 - If start interlock is used: The Power indicator turns green and the ON/OFF indicator turns red within 2 seconds after the F3SG-RA is turned ON.
- □Nothing should exist in the detection zone and the Stable-state indicator must turn ON at power on.

☐ The test rod is detected when it is moved around in the detection zone as shown in the diagram below. In other words, when a test rod is inserted into the detection zone, the Stable-state indicator turns OFF and the ON/OFF indicator turns red.

When fixed blanking function is used, you must ensure that all blanked zones in the detection zone are covered by a hard barrier guard and there must be no zone in the detection zone where the test rod goes undetected.

The object resolution may vary depending on the models of the F3SG-R and settings of floating blanking function or reduced resolution function. Use a test rod with an appropriate diameter for inspection. A test rod is not included in the F3SG-R product package.

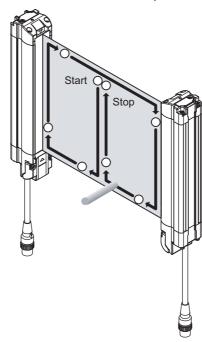

Confirm that hazardous parts should stop while the machine is operating, as shown below.

- □When muting function is used, installation condition of muting sensor must not be changed.
- □When muting function is used, muting status can be checked from where a worker operates or adjust the machine.
- □Neither connector, cap, or bracket must be loose.

6-2-1-2. Checking that Hazardous Parts Stop While the Machine Operates

- ☐The hazardous parts are movable when nothing is in the detection zone.
- ☐ The hazardous parts stop immediately when a test rod is inserted into the detection zone at 3 positions: "directly in front of the emitter", "directly in front of the receiver", and "between the emitter and receiver". (Use the appropriate test rod.)
- The hazardous parts remain stopped as long as the test rod is in the detection zone.
- □The hazardous parts stop when the power of the F3SG-R is turned OFF while nothing is in the detection zone.

6-2-1-3. Items to Inspect Every 6 Months or When Machine Settings Are Changed

In addition to inspection item at operation start, following items must also be verified.

- ☐ The outputs of the F3SG-R and the machine are properly wired.
- ☐The total number of times that the control relays/contactors have switched is significantly lower than their design lives.
- ☐There is no ambient light.
- □Safety distance has been calculated with changed object resolution when the setting of the floating blanking or reduced resolution function is changed.
 - Calculated distance: S = ()mm
- □When muting function setting is changed, a muting sensor must be installed so that muting state should not occur when a human body enters a detection zone of F3SG-RA by mistake.


- □When muting function setting is changed, a muting sensor must be installed so that muting state should not occur when a human body enters a hazardous zone of a machine.
- □When muting function setting is changed, a muting sensor must consist of 2 independent devices.
- □When the configuration of the cascade connection is changed, either of the following is attached on a secondary sensor farthest from its power supply:
 - End Cap
 - Lamp (sold separately)
- □When using PNP output, 0 V line of the power supply is grounded. When using NPN output, +24 VDC line of the power supply is grounded.
- □Wiring must not be bent, cracked, nor damaged.

Chapter 7 Appendix

7-1. Troubleshooting	188	
7-1-1. Lockout State	189	
7-1-2. Warning	193	
7-2. Optional Accessories(Sold Separately)	196	
7-3. Glossary	202	
7-4. Revision History	206	


7-1. Troubleshooting

■ F3SG-RA Series

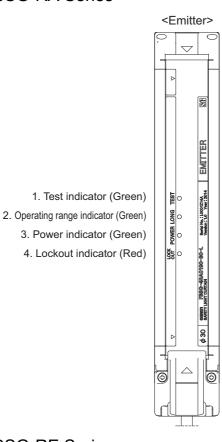


- <Receiver> **∆** ¥ o SLOW SEO O BLANK **원 M** 0 **E** NO O O O 14. Bottom-beam-state indicator (Blue) 0
 - 1. Top-beam-state indicator (Blue)
 - 2. PNP/NPN mode indicator (Green)
 - 3. Response time indicator (Green)
 - 4. Sequence error indicator (Yellow)
 - 5. Blanking indicator (Green)
 - 6. Configuration indicator (Green)
 - 7. Interlock indicator (Yellow)
 - 8. External device monitoring indicator (Green)
 - 9. Internal error indicator (Red)
 - 10. Lockout indicator (Red)
 - 11. Stable-state indicator (Green)
 - 12. ON/OFF indicator (Green/Red)
 - 13. Communication indicator (Green)

■ F3SG-RE Series

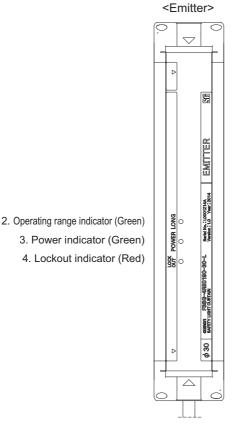

<Receiver>

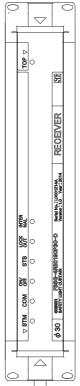

1. Top-beam-state indicator (Blue)

- 9. Internal error indicator (Red)
- 10. Lockout indicator (Red)
- 11. Stable-state indicator (Green)
- 12. ON/OFF indicator (Green/Red)
- 13. Communication indicator (Green)
- 14. Bottom-beam-state indicator (Blue)

7-1-1. Lockout State

7-1-1. Description

If F3SG-R detects any failure, it keeps safety output OFF and transitions to lockout state. Under lockout state, the lockout indicators blink or are ON and other indicators blink based on the failure. Solve the problems based on the table below.

Eliminate the cause of the problem. Then turn the power ON again or reset the lockout state by providing a reset input to restart the F3SG-R.*

* The lockout reset function is not available for the F3SG-RE series. Turn the power ON again to restart the F3SG-RE.


7-1-1-2. Troubleshooting

Identify an error according to the combination of the indicators when the error occurs. See the following troubleshooting tables to take measures.




<Indicator status at lockout: Receiver>
Combination of Indicators and Error Description

[Error Description]

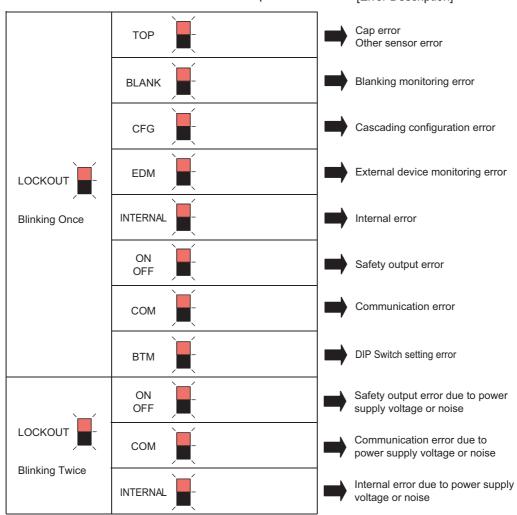

<Indicator status at lockout: Emitter> Combination of Indicators and Error Description

[Error Description]

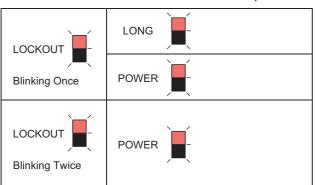

Other sensor error
Cascading configuration error
Internal error
Communication error

DIP Switch setting error

Operating range selection setting error

Internal or Comunication error due to noise

Description	Cause and measures
Cap error	A cap may be detached. Attach the cap properly.
Other sensor error	Other sensor being cascaded caused an error. Check the indicator of the sensor.
Blanking monitoring error	An error is detected by the fixed blanking monitoring function or the floating blanking monitoring function. See Chapter 2 "Fixed Blanking" or "Floating Blanking" to solve the problem. 2-14. Fixed Blanking 2-15. Floating Blanking
Cascading configuration error	The cascading cable may be short-circuited, broken, or disconnected. Check that the cascading cable should be tightly connected. If the cascading cable is broken, replace it. The number of connected sensors or beams may have exceeded the maximum value due to
	cascading. Check the configuration.
External device monitoring error	Relay may be welded. Replace the relay.
	The relay and the Reset line may not be properly wired. Check the wiring with the relay.
	Chapter 4 Wiring/Installation
	The relay response time may be exceeding the allowable delay time. Change the allowable delay time or replace the relay with one that has an appropriate response time.
	2-10. External Device Monitoring (EDM) Chapter 4 Wiring/Installation
Internal error	An error may have occurred in the internal circuit. Replace the F3SG-R.
Safety output error	Safety output lines may be short-circuited to each other or another signal line may be short-circuited to the safety output line. Wire the safety output lines properly. Chapter 4 Wiring/Installation
Communication error	The communication line or other wiring may be broken or short-circuited. Check the Cascading or extension cables.
	If the wiring is extended with cables other than specified, the cables used for extension may not have performance equivalent or greater than the specified cables. Use cables with the same performance or more than the specified cables.
	Chapter 4 Wiring/Installation
DIP Switch setting error	A DIP Switch setting may have been changed during operation. Check if a DIP Switch setting was changed or not.
	Settings of two DIP Switches of a receiver may be unmatched. Check if two DIP Switches of a receiver are matched.
Operating range selection setting error	The setting of the operating range selection may be incorrect. •F3SG-RA: Check if the Operating Range Selection of the DIP Switch is properly set. •F3SG-RE: Check if the Operating Range Select Input line is properly wired.

Description	Cause and measures
Safety output error due to power supply voltage or noise	The power supply voltage may have dropped temporarily when the F3SG-R is in operation. Check for temporary power supply voltage drop (by about 12 VDC) by the influence of the inductive load, etc.
	If the exclusive power supply is not used, check the power consumption of other connected devices for enough capacity.
	Effect of noise may be excessive.
	If other devices using the same power supply generate noise, do not share the same power supply with other devices, and use a separate power supply exclusively for the safety components.
	The inductive noise tends to be induced especially if the power supply line of the machine guarded and the power supply line of the F3SG-R are arranged in parallel.
	Arrange the exclusive power supply near the F3SG-R or lay the power supply line of the F3SG-R away from the power supply line of the machine guarded.
	If the power supply for the F3SG-R is located near the power supply of the machine guarded and it uses the same ground, it is subject to the influence of common mode noise from the ground. Separate the grounding point or use it as the exclusive ground.
	Power supply voltage may be outside the rated range.
	Connect the F3SG-R to a 24 VDC±20% power supply voltage. Voltage fluctuation may have occurred due to insufficient power supply capacity.
	Replace the power supply with one that has a larger capacity.
	Instantaneous break or instantaneous stop may have occurred due to power sharing with other devices. Do not share the power supply with other devices. Connect the F3SG-R to a power supply that is dedicated to electro-sensitive protective devices for electro-sensitive protective equipment such as the F3SG-R, safety controller, etc.
Communication error due to power supply voltage or noise	Communication error may have occurred due to noise. Check the noise level in the environment.
	The power supply voltage may have dropped temporarily when the F3SG-R is in operation. Check for temporary power supply voltage drop (by about 12 VDC) by the influence of the inductive load, etc. If the exclusive power supply is not used, check the power consumption of other connected devices for enough capacity.
Internal error due to power supply voltage or noise	The internal circuitry may be defective due to power supply voltage or noise. Check the noise level in the environment. Make sure that the power supply voltage is 24 VDC±20%. If the indicator still shows this error, replace the F3SG-R.
Internal or communication error due to noise	The internal circuitry may be defective due to noise. Check the noise level in the environment.
	Communication error may have occurred due to noise. Check the noise level in the environment.

7-1-2. Warning

7-1-2-1. Description


If an error is detected that prevents the F3SG-R to continue normal operation, the STB or SEQ indicator blinks to notify warning information according to the error. The F3SG-R continues normal operation. When the cause of the error is solved, the F3SG-R automatically recovers from the warning status.

7-1-2-2. Troubleshooting

Identify an error according to the combination of the indicators when the error occurs. See the following troubleshooting tables to take measures.



<Indicator status at warning: Receiver>

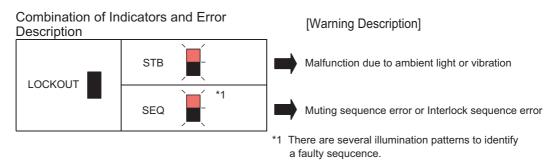

<Indicator status at warning: Emitter> None

Description	Cause and measures
Malfunction due to ambient light or vibration	An instantaneous beam misalignment may have occurred due to vibration or ambient light. Check the installation condition. Take necessary measures against mutual interference according to "4-1-4. Mutual Interference Prevention". Limit 4-1-4. Mutual Interference Prevention
Muting sequence error	Muting input may have been applied in the incorrect order. Check the pattern of illumination of the LED indicator to identify the cause. 7-1-2-3. Muting Sequence Error Indication
Interlock sequence error	An input related to interlock may have been applied in an incorrect sequence. Check the pattern of illumination of the LED indicator to identify the cause. 7-1-2-4. Interlock Sequence Error Indication

7-1-2-3. Muting Sequence Error Indication

Sequence error indicator	Cause and measures
	Power supply may have been turned ON with muting input A or B being ON. Check the condition of the muting sensors and light curtains.
	muting input B may have been turned ON before muting input A was turned ON. Check the condition of the muting sensors.
Blinking: Once	muting input A and B may have been turned ON at the same time. •Check the arrangement of the muting sensors. •Check if the wiring of muting input A and B is short-circuited.
	Either muting input A or B may have been turned ON with the light curtain being blocked or in Interlock State. Check the condition of the light curtains.
	muting input B may have been turned ON within T1min (= 0.1 s *1) after muting input A was turned ON. •Check that if the muting sensors are installed too close each other. •Check that if the speed of the workpiece is too fast. *1 Factory default setting
Blinking: Twice	It may have taken T1max (= 4 s *1) or longer for muting input B to be turned ON after muting input A was turned ON. •Check that if the muting sensors are installed too far each other. •Check that if the speed of the workpiece is too slow. *1 Factory default setting
	The light curtain may have been blocked after muting input A was turned ON but before muting input B was turned ON. Check the condition of the light curtains.
District Four times	The light curtain may have been blocked within 0.08 s after muting input A and B were normally turned ON. •Check that if the muting sensor and light curtain are installed too close each other. •Check that if the speed of the workpiece is too fast.
Blinking: Four times	Muting may have been released after the light curtain entered the muting state but before a workpiece blocked the light curtain. •Check that the workpiece still remains. •Check that the speed of the workpiece is too slow.
Blinking: Five times	The light curtain entered the muting state, but muting may have then been released while a workpiece passes through the light curtain. •Check that the workpiece still remains. •Check that if the speed of the workpiece is too slow. •Check that the muting sensors have been installed upstream and downstream of the light curtain with the size of workpieces taken into account. (Using four muting sensors)
Blinking: Six times	Muting may have been released with muting input A and B remained ON after a workpiece passed through the light curtain. •Check that the workpiece still remains. •Check that the speed of the workpiece is too slow.
Blinking: Seven times	The next muting sequence may have started after muting was released but before the initial muting condition was established. •Check that if a next workpiece has not entered before the current workpiece passes through the light curtain. •Check that if the interval between workpieces are too narrow.

7-1-2-4. Interlock Sequence Error Indication

The following table is applied only when the pre-reset function is being enabled.

Sequence error indicator	Cause and measures
Blinking: Once	The reset or pre-reset switch may have been pressed before the light curtain receives light. Check the reset input and pre-reset input wiring.
	The light curtain may have been interrupted or the pre-reset switch may have been pressed before the pre-reset switch is pressed. Check the light curtain status and pre-reset input wiring.
Blinking: Twice	After the pre-reset switch was pressed, the pre-reset or reset switch may have been pressed before the light curtain is interrupted. Check the installation environment of the light curtain.
Blinking: Three times	After the pre-reset switch was pressed and the light curtain was interrupted, the pre-reset switch may have been pressed before the reset switch is pressed. Check the pre-reset input wiring.
	After the pre-reset switch was pressed, a time period from interruption of the light curtain to the reset switch being pressed may have exceeded the allowable time. Check the installation environment of the light curtain as well as pre-reset and reset switches.
	The number of interruptions of the light curtain may have exceeded the allowable value after the pre-reset switch was pressed and before the reset switch is pressed. Check the installation environment of the light curtain.

7-2. Optional Accessories(Sold Separately)

Single-Ended Connector Cable (for emitter)

Appearance	Model	Cable length	Specifications
	F39-JG3A-L	3 m	M12 connector (5-pin), 5 wires
	F39-JG7A-L	7 m	
	F39-JG10A-L	10 m	
	F39-JG15A-L	15 m	
	F39-JG20A-L	20 m	

Single-Ended Connector Cable (for receiver)

Appearance	Model	Cable length	Specifications
	F39-JG3A-D	3 m	M12 connector (8-pin), 8 wires
	F39-JG7A-D	7 m	
I OH S	F39-JG10A-D	10 m	
	F39-JG15A-D	15 m	
	F39-JG20A-D	20 m	

Double-Ended Cable (for emitter)

Appearance	Model	Cable length	Specifications
	F39-JGR5B-L	0.5 m	M12 connector (5-pin) on both ends
	F39-JG1B-L	1 m	
	F39-JG3B-L	3 m	
	F39-JG5B-L	5 m	
	F39-JG7B-L	7 m	
	F39-JG10B-L	10 m	
	F39-JG15B-L	15 m	
	F39-JG20B-L	20 m	

Double-Ended Cable (for receiver)

Appearance	Model	Cable length	Specifications
	F39-JGR5B-D	0.5 m	M12 connector (8-pin) on both ends
	F39-JG1B-D	1 m	
	F39-JG3B-D	3 m	
	F39-JG5B-D	5 m	
	F39-JG7B-D	7 m	
	F39-JG10B-D	10 m	
	F39-JG15B-D	15 m	
	F39-JG20B-D	20 m	

Cascading Cable (two cables per set, for emitter and receiver)

Appearance	Model	Cable length	Specifications
	F39-JGR2W	0.2 m	Emitter cable: Cap (5-pin), M12 connector (5-pin) Receiver cable: Cap (8-pin), M12 connector (8-pin)

Round Water-resistant Connector: Connector Connected to Cable, Socket on One Cable End

Appearance	Model	Cable length	Specifications
	XS5F-D421-C80-F	1 m	M12 connector (4-pin), 4 wires
	XS5F-D421-D80-F	2 m	
	XS5F-D421-E80-F	3 m	
	XS5F-D421-G80-F	5 m	
	XS5F-D421-J80-F	10 m	

Round Water-resistant Connector: Connectors Connected to Cable, Socket and Plug on Cable Ends

Appearance	Model	Cable length	Specifications
	XS5W-D421-C81-F	1 m	M12 connector (4-pin) on both ends
	XS5W-D421-D81-F	2 m	
	XS5W-D421-E81-F	3 m	
	XS5W-D421-G81-F	5 m	
	XS5W-D421-J81-F	10 m	

Y-Joint Plug/Socket Connector

Appearance	Model	Cable length	Remarks
	F39-GCNY1 F39-GCNY2	0.5 m	M12 connectors. Used for reduced wiring. F39-GCNY1: for F3SG-RE F39-GCNY2: for F3SG-RA

End Cap

Appearance	Model	Remarks
	F39-CNM	Housing color: Black For both F3SG-RA emitter and receiver (Attached to the F3SG-RA. The End Cap can be purchased if lost.)

Standard Fixed Bracket

Appearance	Model	Application	Remarks
	F39-LGF	Bracket to mount the F3SG-R. Side mounting and backside mounting possible. (Included in the F3SG-R product package.)	2 brackets per set.

Standard Adjustable Bracket

Appearance	Model	Application	Remarks
	F39-LGA	Bracket to mount the F3SG-R. Beam alignment after mounting possible. Side mounting and backside mounting possible.	2 brackets per set.

Test Rod

Appearance	Model	Diameter
	F39-TRD14 F39-TRD30	14 mm dia. 30 mm dia.



To check operation before use, purchase and use the test rod.

Control Unit

Appearance	Model	Output	Remarks
	G9SA-301	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1	 An F39-JG□A Single-Ended Cable is required. An F3SG-R with PNP output can be connected. A type of 5 N.O. and 1 N.C. contacts is also available.

Control Unit

Appearance	Model	Output	Remarks
	G9SA-301-P	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1	 An XS5F-D421-□80-F Round Water-resistant Connector is required. An NPN type of F3SG-R can be connected.

Control Unit

Appearance	Model	Output	Remarks
	G9SB-301-B	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1 Auto reset	An F39-JG□A Single-Ended Cable is required. An F3SG-R with PNP output can be connected. Thickness of a type of three N.O.
	G9SB-301-D	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1 Manual reset	 and one N.C. contacts is 22.5 mm. Thickness of a type of two N.O. contacts is 17.5 mm.
	G9SB-200-B	Safety output (relay): NO contact x 2 Auto reset	
	G9SB-200-D	Safety output (relay): NO contact x 2 Manual reset	

Control Unit

Appearance	Model	Output	Remarks
	G9SX-AD322-T15	Safety output (solid-state): source output (PNP) x 3 (instantaneous), source output (PNP) x 2 (OFF-delayed) Auxiliary output (solid-state): source output (PNP) x 2	 An F39-JG□A Single-Ended Cable is required. An F3SG-R with PNP output can be connected. Off-delay within 15 seconds can be set in 16 steps. The off-delay output can be used as instantaneous output by setting it to 0 second. Can be configured for partial control and total control. Can be extended to connect a relay unit.

Control Unit

Appearance	Model	Output	Remarks
	G9SP-N10S	Safety output (solid-state): source output (PNP) x 4 Test output (solid-state): source output (PNP) x 4 Standard output (solid-state): source output (PNP) x4	 An F39-JG□A Single-Ended Cable is required. An F3SG-R with PNP output can be connected.
	G9SP-N10D	Safety output (solid-state): source output (PNP) x 16 Test output (solid-state): source output (PNP) x 6	
	G9SP-N20S	Safety output (solid-state): source output (PNP) x 8 Test output (solid-state): source output (PNP) x 6	

Control Unit

Appearance	Model	Application	Specifications
	NX-SIH400	Safety input (solid-state): sink input (PNP) x 4 Test output (solid-state): source output (PNP) x 2	 An F39-JG□A Single-Ended Cable is required. An F3SG-R with PNP output can be connected.
	NX-SID800	Safety input (solid-state): sink input (PNP) x 8 Test output (solid-state): source output (PNP) x 2	

Lamp

Appearance	Model	Remarks
	F39-LP	Used for the receiver.

Interface Unit for F3SG Safety Light Curtain

Appearance	Model	Remarks
	F39-GIF	A dedicated cable is also supplied.

Smart Muting Actuator

Appearance	Model	Remarks
	F3W-MA0100P F3W-MA0300P	Applicable to PNP-output devices. Refer to Smart Muting Actuator F3W-MA Series User's Manual for details.

Spatter Protection Cover (two pieces per set, common for emitter/receiver)

Appearance	Model	Remarks
	F39-HGA□□□□	For the F3SG-R of the protective height of 2,000 mm or longer, use two Spatter Protection Covers of different lengths. The operating range of the F3SG-R attached with the Spatter Protection Cover is 10% shorter than the rating.

7-3. Glossary

	Term	Description	
Α	Accumulated load switching frequency	Total number of operations of a load to be connected to the F3SG-RA, from when the F3SG-RA is first energized until the present time.	
	Allowable Beams	Dynamic Muting: Area(s) (or beam(s)) to be added in a Dynamic Muting zone, in order to prevent an accidental interruption of the F3SG-RA due to vibration.	
		Fixed/Floating Blanking: Beam(s) in a Blanking zone, that are not monitored by the Blanking Monitoring function.	
	Allowable delay time	The allowable amount of time difference from when the state of the Safety outputs changes until the state of an external relay changes. The F3SG-R enters the Lockout state if this time is exceeded.	
	Auto reset mode	Mode that disables Start Interlock and Restart Interlock. The Safety outputs are turned ON when no object is detected in the detection zone.	
	Auxiliary output	Function to give output signal according to the settings. This must not be used for safety applications.	
В	Blanking zone	Area in the detection zone of the F3SG-RA, where the Fixed Blanking or the Floating Blanking is enabled.	
С	Configuration Tool	Setting tool that allows the user to make settings to the F3SG-RA with a PC.	
D	Designated beam output	Function to signal the state of user-designated beam(s) to the Auxiliary output or Lamp. To use the function, target beam(s) must be designated.	
	Designated beam output information	Information on the beam state of user-designated beam(s) to be signaled to the Auxiliary output or Lamp. To signal the information, the Designated beam output information must be assigned to an output destination.	
	Dynamic muting	Function to configure a new muting zone after muting is enabled based on a result measuring a workpiece height for a certain period of time.	
E	Effective aperture angle (EAA)	Range of angles in which the F3SG-R can operate.	
	Excess power-on time information	Information to be signaled to the Auxiliary output or Lamp when the power-on time exceeds the power-on time threshold value. To signal the information, the Power-On Time information must be assigned to an output destination.	
	Exit-only muting delay time	Time difference from when the signal of Muting input A or B is turned OFF until the Muting state is cancelled.	
	Exit-only muting mode	Muting mode to be used for such an application where objects move from the inside to the outside of the hazardous zone.	
	External device monitoring function (EDM)	Function to monitor the operation of an N.C. contacts of external relays (or contactors) that control the hazardous zone of a machine, for any malfunctions such as welding.	
	External test	Function that stops emission at a specified time to check that the Safety outputs are being properly turned OFF.	
F	Fixed blanking	Function to disable part of the detection zone of the F3SG-RA and keep the Safety outputs in the ON state even if an object blocks the disabled detection zone.	
	Fixed blanking monitoring function	Function to bring the F3SG-RA in the Lockout state when part of the Fixed Blanking zone is blocked.	
I	Floating blanking	Function to disable a specified number of beams in the detection zone of the F3SG-RA, and keep the Safety outputs in the ON state even if an object smaller than the dimension of the specified number of beams blocks the F3SG-RA.	
	Floating blanking monitoring function	Function to bring the F3SG-RA in the Lockout state if the number of blocked beams is smaller than specified.	
	Interlock	Information to be signaled to the Auxiliary output or Lamp when the F3SG-R is in the Interlock is state. To signal the information, the Interlock information must be assigned to an output destination.	
	Interlock Information	Provides output through auxiliary output if interlock input is ON. Note that interlock information must be assigned to the destination.	


	Term	Description	
	Interlock reset	Cancels the Interlock state.	
	Inverted signal output mode	In this mode, the logic of the Auxiliary output signal is reversed.	
L	Light level diagnosis information	Information to be signaled to the Auxiliary output or Lamp when the Safety output is in the ON state and when the incident light level is from 100% to 170% of the ON-threshold value for 10 seconds or more. To signal the information, the Light Level Diagnosis information must be assigned to an output destination.	
	Light level monitoring	Function to read out the light level of incident light or ambient light on the F3SG-RA.	
	Load switching frequency	Function to display the number of operations of a load to be connected to the F3SG-RA. The number is counted from when the number was last reset until the present time.	
	Lockout	Function to keep the Safety outputs in the OFF state when an error is detected by the F3SG-R.	
	Lockout information	Information to be signaled to the Auxiliary output or Lamp when an error or lockout occurs. To signal the information, the Lockout information must be assigned to an output destination.	
	Lower beam(s)	Beams located toward the Power Cable of the F3SG-R.	
М	Maintenance information	Function to read the maintenance information of the F3SG-RA and view it on a PC screen, with the Configuration Tool.	
	Manual reset mode	Function to enable the Start Interlock and Restart Interlock. The Safety outputs are turned ON by applying a reset signal when there is no object in the detection zone.	
	Maximum allowable muting signal interruption	Maximum duration of a signal interruption allowed in Muting inputs A and B.	
	Muting	Function to temporarily disable the safety function of the F3SG-RA and keep the Safety outputs in the ON state even if the F3SG-RA is blocked.	
	Muting end wait time	Time difference from when the F3SG-RA is unblocked until the Muting state is cancelled.	
	Muting input time limit value (maximum)	Maximum time difference between Muting inputs A and B.	
	Muting input time limit value (minimum)	Minimum time difference between Muting inputs A and B.	
	Muting key cap	Connector to be attached to the end cap of an emitter or receiver to use the Muting function.	
	Muting sensor	Input device, such as photoelectric sensor or proximity sensor, to give an input signal for notifying the start and end of the Muting function.	
	Muting sequence error	An error that occurs when muting signal is not received in the correct order. The Safety outputs keep in the ON state unless the F3SG-RA is blocked.	
	Muting time limit	The duration time of the Muting function. The Muting state is cancelled if it continues for longer than this time limit.	
N	Number of floating beams	Number of beams to be configured in the Floating Blanking zone, for which the F3SG-RA does not transition to the Lockout state or Machine Stop state (Safety output OFF) even when blocked.	
0	Object resolution (Detection capability)	Minimum size of an object that can be detected in the protective height of the F3SG-R.	
	Operating range selection	Function to change the operating range by changing the emission light level of the F3SG-R.	
	Operating status monitoring	Function to read out the I/O data and status of functions of the F3SG-RA.	
	Output operation mode	Information to be signaled to an output part (Safety output, Auxiliary output).	
	Override	Function that forcibly turns the Safety outputs ON when the Muting is not working.	
	Override input time limit (maximum)	Input time limit (maximum value) of the special sequence to activate the Override function.	
	Override time limit	The duration time of the Override function. The Override state is cancelled if it continues for longer than this time limit.	

	Term	Description
Р	PELV	Protected Extra Low Voltage. A grounded circuit separated by double insulation or equivalent from hazardous voltage. It does not generate voltage that exceeds ELV under normal conditions and under single-fault conditions. Normally, protection against direct contact is required.
	PNP/NPN Selection	Function to select the safety output type between PNP and NPN.
	Position detection muting mode	Mode that enables the Muting function according to the position of a hazardous source such as a robot arm, using heterogeneous redundant inputs.
	Power-on time	Function to display the period of time when the F3SG-RA is energized, starting from when the power-on time was last reset until the present time.
	Power-on time reset	Function to reset the power-on time of the F3SG-RA to 0. In the case of cascade connection, the power-on time can be reset for each cascaded segment of the F3SG-RA.
	Power-on time threshold value	When the power-on time exceeds this value, an output is signaled to the Auxiliary output or Lamp. To signal the information, the Power-On Time information must be assigned to an output destination.
	Pre-Reset	One of the Interlock reset functions. Interlock state can be released only in the sequence that the operator operates the Pre-reset switch installed in the hazardous zone and leave the hazardous zone, and then operates the Reset switch outside the hazardous zone.
	Pre-Reset state	The F3SG-RA under this state is allowed to be blocked after the input of the Pre- Reset signal is ensured. When the number of times the F3SG-RA is blocked is set to infinite, the F3SG-RA stays in this state until the Reset input signal is received.
	Primary sensor	Name used for the F3SG-RA to be connected nearest the power supply, when in cascade connection.
R	Reduced resolution	Function to change the size of the object resolution so that an object of the size between 1 and 3 beams has no effect.
	Reset	Function to release the Interlock state or Lockout state.
	Response time adjustment	Function to change the response time so that the Safety outputs can hardly be turned OFF due to accidental interruption by an environmental factor.
	Response time from ON to OFF	Period of time from when the F3SG-R is blocked until the Safety outputs are turned from ON to OFF.
	Restart interlock	Function to turn the Safety outputs to the OFF state when the F3SG-RA is blocked and keep this state until a reset signal is received.
S	Safety output (OSSD)	Output to be turned to the ON state when safety is ensured. This can be used for safety applications.
	Safety output information	Information to be signaled to the Auxiliary output or Lamp when the Safety outputs are in the ON state. To signal the information, the Safety output information must be assigned to an output destination.
	SD Manager 2	Setting software that is used as the Configuration Tool for the F3SG-RA. It allows the user to make settings to or monitor the operation of the F3SG-RA when the F3SG-RA is connected to the PC via the Interface Unit.
	Secondary sensor	Name used for other segments of F3SG-RA's than the primary sensor, when in cascade connection.
	SELV	Safety Extra Low Voltage. An ungrounded circuit separated by double insulation or equivalent from hazardous voltage. It does not generate voltage that exceeds ELV under normal conditions and under single-fault conditions. If the nominal voltage exceeds 25 VAC or 60 VDC, protection against direct contact is required.
	Setting recovery	Function to restore the factory settings of the F3SG-RA.
	Setting state	Status of the F3SG-RA when settings are being performed with the Configuration Tool. In this state, the Safety outputs are in the OFF state.
	Standard muting mode	Muting mode to be used for such an application where a muting sensor is positioned on both sides of the F3SG-RA. The factory default setting is this mode.
	Start interlock	Function to turn the Safety outputs to the OFF state at power-on or recovery from power failure and keep this state until a reset signal is received.

	Term	Description
T	Teach-in	Function to configure target beams of the following functions by interrupting the beams Fixed Blanking - Floating Blanking
	Troubleshooting support signal	Information to be signaled to the Auxiliary output or Lamp when any one of a Muting Sequence Error, Interference/Vibration Information and Light Level Diagnosis Information signals is in the ON state. To signal the information, the Troubleshooting Support signal must be assigned to an output destination.
U	Upper beam(s)	Beams located toward the terminal of the F3SG-R.
٧	Vs	Power supply voltage value in your usage environment.
W	Warning zone function	Function to configure part of the detection zone, in which the Safety outputs are not affected by the beam state. The blocked state of the Warning zone can be signaled to the Auxiliary output. This function must not be used for safety applications.
	Warning zone information	Information to be signaled to the Auxiliary output or Lamp when the Warning zone is blocked. To signal the information, the Warning Zone information must be assigned to an output destination.

7-4. Revision History

A manual revision code appears as a suffix to the manual number at the bottom of the front and back covers of this manual.

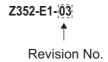

Revision symbol	Revision date	Revisions
01	October, 2014	First edition
02	December, 2014	- Added Lamp Added Setting Tool Minor corrections.
03	January, 2015	- Added F3SG-RE Added Spatter Protection Cover Minor corrections.

OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON SCIENTIFIC TECHNOLOGIES INC.

6550 Dumbarton Circle Fremont CA 94555 U.S.A Tel: (1) 510-608-3400/Fax: (1) 510-744-1442

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower,

200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2014-2015 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Cat. No. Z352-E1-03 0115(1014)