Connector-Terminal Block Conversion Units for General-purpose Devices

XW2R

CSM_XW2R_DS_E_2_5


Many Variations in Connectors and Number of Poles

- Models available with Phillips screw, slotted screw, or e-CON connections.
- The terminal arrangement enables smoother wiring work.
- Mounting to DIN Track is possible.




Model List

With power supply terminals

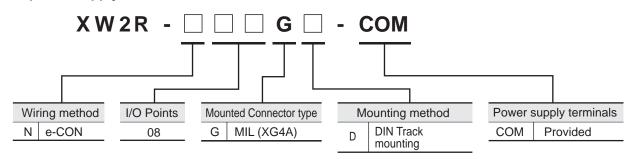

Without power supply terminals

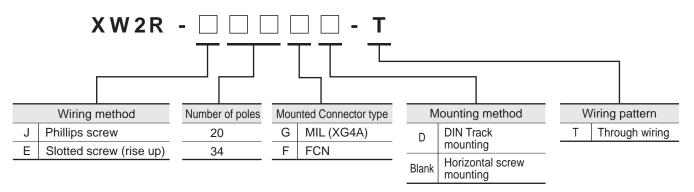

Options (Order Separately)

Connecting Cables for Connector-Terminal Block Conversion Units Refer to the XW2Z datasheet.

With power supply terminals

e-CON Type

Ordering Information

| Appearance | I/O Points | I/O | Model * | Mounted Connector model | Cable Connector model |
|------------|------------|-------|----------------|--|--|
| | 8 Points | Input | XW2R-N08GD-COM | XG4A-1431 (MIL Connector) XN2D-4471 (e-CON Connector) | XG4M-1430-T (MIL Connector) XN2A-1470 (e-CON Connector) |


^{*}Only DIN Track mounting models are described here.

Ratings and Specifications


| Rated curre | ent | Power supply terminal block: 2 A, Connectors/e-CON Connectors: 1 A (However, rated current of e-CON Connector depends on the wires that are used.) | | | | | |
|------------------------|------------------------|---|--|--|--|--|--|
| Rated volta | ge | 24VDC | | | | | |
| Insuration r | esistance | 100M Ω min. (at 500VDC) | | | | | |
| Dielectric s | trength | 500VAC for 1 min (leakage current: 1 mA max.) | | | | | |
| Ambient op temperature | • | 0 to 55°C | | | | | |
| Applicable wires | Applicable wire sizes* | AWG 24 to 14 (ferrules), AWG 28 to 14 (stranded wires), AWG 28 to 16 (solid wires) (Outer diameter of insulation must be 4 mm max) | | | | | |
| | Stripped length | AWG28-16: 8 to 10 mm AWG14: 9 to 10 mm | | | | | |


^{*}This is the applicable range for the power supply terminal block. For the applicable wire sizes for I/O Connectors (e-CON), refer to page 3.


Wiring Diagram

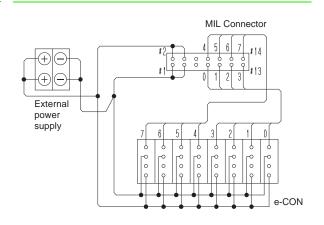

Dimensions (Unit: mm)

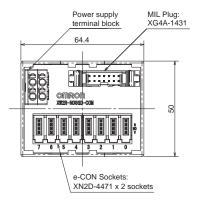

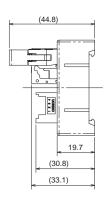

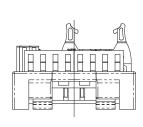

Input Device Connectors: XN2 e-CON Connectors

Ordering Information

For Sensor

| Appearance | Number of poles | Model |
|--|-----------------|-----------|
| The same of the sa | 4 | XN2A-1470 |

Relay Connector

| Appearance | Number of poles | Model |
|------------|-----------------|-----------|
| | 4 | XN2B-1470 |

Ratings and Specifications


| Rated current | 3 A/pin (with AWG20 wires), 2 A/pin (with AWG22 wires), 1 A/pin (with AWG24 wires), 0.5 A/pin (with AWG26 or AWG28 wires) |
|-------------------------------|--|
| Rated voltage | 32 VDC |
| Contact resistance | 30 mΩ max. (at 20 mV, 100 mA max.) |
| Insuration resistance | $10^3 \text{M}\Omega$ min. (at 500VDC) |
| Dielectric strength | 1,000 VAC for 60 sec (leakage current: 1 mA max.) |
| Insertion durability | 50 times |
| Ambient operating temperature | -30 to 75°C * |
| Applicable wires | Stranded wire 0.08mm² (AWG28) to 0.5mm² (AWG20) (Outer diameter of insulation must be 1.5 mm max) |

^{*}The operating temperature range is restricted by the maximum operating temperature of the cable.

Wiring Procedure


Wire Preparation

Use the strip gauge on the front panel and strip 7 to 8 mm of the insulation. If you use stranded wires, twist them several times.

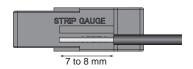


Connection Procedure


 Press a flat-blade screwdriver into the operation hole until the operation lever locks into place.

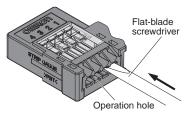


Insert the wire all the way into the wire insertion hole. Confirm that the insulation on the wire also enters the wire insertion hole and that the end of the wire has passed through the connection section.

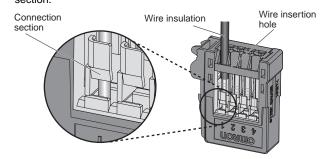

Insert a flat-blade screwdriver into the release hole and gently reset the lever. You should hear the operation lever reset.

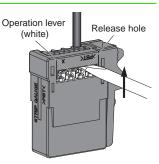


- 4. Finally, check the following items.
- Make sure the operation lever has been reset.
- Check the items given in step 2 again. (Pull lightly on the wire to see if it is held firmly in place.)

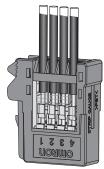

Disconnection Procedure

- Press in the operation level, confirm that the operation lever is locked into place, and then pull out the wire.
- After you remove the wire, always reset the operation lever. However, if you are going to connect another wire to the same terminal, you do not need to reset the operation lever and can immediately connect the other wire.

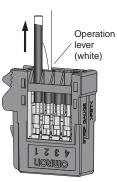

Without power supply terminals

Phillips screw

Ordering Information

| Appearance *1 | Mounted Co | onnector model | Number of poles | Model *2 | Dimension A (mm) |
|--|---------------|------------------------|-----------------|--------------|------------------|
| | | XG4A-2031 | 20 | XW2R-J20GD-T | 81.7 |
| | | XG4A-3431 | 34 | XW2R-J34GD-T | 130.7 |
| The same of the sa | MIL Connector | XG4A-4031 | 40 | XW2R-J40GD-T | 151.7 |
| The state of | | XG4A-5031 | 50 | XW2R-J50GD-T | 186.7 |
| | | XG4A-6031 | 60 | XW2R-J60GD-T | 221.7 |
| | FCN Connector | Fujitsu FCN-364P040-AU | 40 | XW2R-J40FD-T | 151.7 |

- ***1** The mounted Connector shown in the appearance illustration is a MIL Connector.
- *2 Only DIN Track mounting models are described here.

Ratings and Specifications

| Rated o | urrent | 1 A |
|-------------------|-----------------------|---|
| Rated v | oltage | 125 VAC, 24 VDC |
| Insurati | ion resistance | 100MΩ min.(at 500VDC) |
| Dielecti | ric strength | 500VAC for 1 min (leakage current: 1 mA max.) |
| Ambien tempera | nt operating ature | 0 to 55°C |
| Applic able | Applicable wire sizes | AWG 22 to 16 (round or forked crimp terminals) AWG 26 to 16 (stranded or solid wires) |
| wires | Stripped length | 9 mm |
| | Tightening | 0.5 N⋅m |


Details on Crimp Terminals

Wiring Terminal Blocks

• Using Crimp Terminals (With a Terminal Block with M3 Screws)


Terminal Screw Tightening Torque

 Use a tightening torque of 0.5 N·m when connecting wires or crimp terminals to the terminal block.

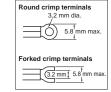

| Applicable crimp ter | minals | Applicable wires |
|------------------------|---------|--|
| Round crimp terminals | 1.25-3 | AWG 22 to 16 (0.30 to 1.25 mm ²) |
| Forked crimp terminals | 1.25Y-3 | AWG 22 to 16 (0.30 to 1.25 mm ²) |

Dimensions

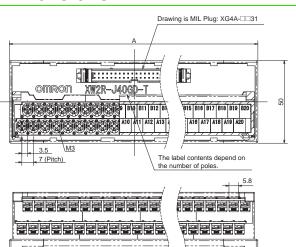





(Unit: mm)

Wiring Diagram

Mounted Connector model: MIL Connector

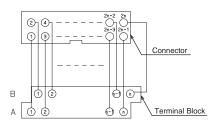

Mounted Connector model: FCN Connector

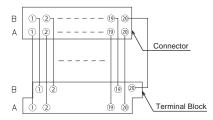

Label Contents

| | В | 1 E | 32 | В | 3 | B 4 | В | 5 B | 6 | В7 | Тв | 8 | В | 9 | B1 | 10 | B1 | 11 | В1 | 2 B | 13 | B1 | 4 | B. | 15 | B1 | 6 E | 317 |
|---|---|-----|----|---|----|-----|---|-----|---|-----|----|---|---|----|----|----|----|-----|----|-----|----|----|----|----|----|----|-----|-----|
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Α | 1 | A 2 | A | 3 | Α4 | 1 | 5 | A 6 | Α | 7 / | 8 | A | 9 | A1 | 10 | A1 | 1 | A1: | 2 | A13 | A. | 14 | Α1 | 15 | A1 | 6 | A17 | Τ |

Note: The label contents for a Terminal Block with 34 poles are shown.

Without power supply terminals

Slotted screw (rise up)

Ordering Information

| Appearance *1 | Mounted C | connector model | Number of poles | Model *2 | Dimension A (mm) |
|---------------|---------------|------------------------|-----------------|--------------|------------------|
| | | XG4A-2031 | 20 | XW2R-E20GD-T | 64.4 |
| | | XG4A-3431 | 34 | XW2R-E34GD-T | 98.5 |
| | MIL Connector | XG4A-4031 | 40 | XW2R-E40GD-T | 113.5 |
| | | XG4A-5031 | 50 | XW2R-E50GD-T | 138.5 |
| | | XG4A-6031 | 60 | XW2R-E60GD-T | 163.5 |
| | FCN Connector | Fujitsu FCN-364P040-AU | 40 | XW2R-E40FD-T | 113.5 |


^{*1} The mounted Connector shown in the appearance illustration is a MIL Connector.


Ratings and Specifications

| Rated | current | 1 A |
|------------------|-----------------------|---|
| Rated | voltage | 125 VAC, 24 VDC |
| Insurat | ion resistance | 100MΩ min. (at 500VDC) |
| Dielect | ric strength | 500VAC for 1 min (leakage current: 1 mA max.) |
| Ambier temper | nt operating ature | 0 to 55°C |
| Appli | Applicable wire sizes | AWG 22 to 16 (ferrules) AWG 26 to 16 (stranded or solid wires) |
| cable wires | Stripped length | 7 mm |
| | Tightening | 0.5 to 0.6 N⋅m |

| | able crimp rminals | Applicable wires | Round rod |
|-------|--------------------------------------|---|------------------------|
| Rod | TC-05 Dia. = 1 | AWG22 to AWG18 (0.30 to 0.75 mm ²) | 8-10 mm |
| Rou | TC-1.25S Dia. = 1.5 | AWG22 to AWG16 (0.30 to 1.25 mm ²) | Blade t = 0.75 8-10 mm |
| Blade | BT1.25-9-1 BT1.25-10-1 W = 2.2 | AWG22 to AWG16 (0.30 to 1.25 mm²) | w S-10 min |

Dimensions

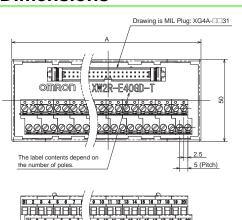


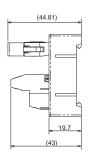


(Unit: mm)

Wiring Diagram

Mounted Connector model: MIL Connector

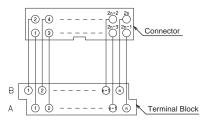

Mounted Connector model: FCN Connector

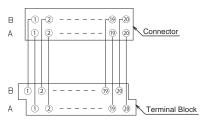

Label Contents

| В 1 | 2 | 2 | 3 | 4 | 4 | 5 | Te | 3 | 7 | 8 | | 9 | 1 | 0 | 1 | 1 | 1 | 2 | 1 | 3 | 1 | 4 | 1 | 5 | 1 | 6 | 1 | 7 | Ī |
|-----|-----|---|---|---|---|---|----|---|-----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | ۱ ۱ | 2 | | 3 | 4 | ı | 5 | 6 | ; T | 7 | 8 | 9 | 9 | 1 | 0 | 1 | 1 | 1 | 2 | 1 | 3 | 1 | 4 | 1 | 5 | 1 | 6 | 1 | |

Note: The label contents for a Terminal Block with 34 poles are shown.

^{*2} Only DIN Track mounting models are described here.

Safety Precautions

Precautions for Correct Use

Wiring Precautions

- Do not perform wiring work, remove connectors, or connect connectors while power is being supplied. Electric shock or damage to the device may result.
- Double-check all wiring before turning ON the power supply.
- After wiring, route the cable so that force is not applied directly to the connections.

Wires for Terminal Blocks

- Do not damage the cores when stripping the insulation from them.
- Always twist stranded wires together before connecting them.
- Do not presolder wires. It may not be possible to connect them or remove them.

XW2R-P□□ type (Square/Round ferrule)

| Type of terminal | Manufacturer | Size | Recommend ferrule | Recommend crimp tool | | | |
|------------------|-------------------|-----------------|---------------------------|----------------------|--|--|--|
| | | AWG24 | AI0.25-8□□ | | | | |
| | | AWG22 | AI0.34-8TQ | | | | |
| | Phoenix Contact | AWG20 | AI0.5-10WH AI0.5-8WH | - CRIMFOX6 | | | |
| | Prideriix Contact | AWG18 | AI0.75-10GY AI0.75-8GY | CRIMPOXO | | | |
| | | AWG16 | AI1.5-10BK | | | | |
| Square ferrule | | AWG14 | AI2.5-8BU | | | | |
| | | AWG24 | H0.25/12 | | | | |
| | | AWG22 | H0.34/12 | | | | |
| | Weidmuller | AWG20 | H0.5/14 | PZ6 roto | | | |
| | weiamuller | AWG18 | H0.75/14 | P26 1010 | | | |
| | | AWG16 | H1.5/14 | | | | |
| | | AWG14 | H2.5/15D | | | | |
| Round ferrule | Nichifu | AWG22- AWG16 | TGV TC-1.25-9T | NH11 NH32 NH65 | | | |

Note: □□ of ferrule model is for color (Ex: YE = Yellow)


When an electric wire is connected directly (J,E,P type)



| Model | Strip length "a" |
|----------|----------------------|
| XW2R-J□□ | 9 mm |
| XW2R-E□□ | 7 mm |
| XW2R-P□□ | AWG28-16: 8 to 10 mm |
| XVVZN-F | AWG14: 9 to 10 mm |

Mounting Units to and Removing Units from DIN Track

Mounting Procedure

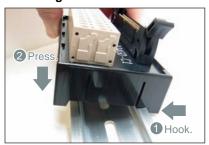

- 1. Hook the Unit on the DIN Track.
- 2. Press the Unit onto the DIN Track to secure it.

Removal Procedure



- 1. Insert a flat-blade screwdriver into the DIN Track lock.
- 2. Move the screwdriver like a lever to free the lock.

Use tool

• Select a use tool from following table.

| Model | Use tool | Specialized tool and dimension |
|----------|------------------------|---|
| XW2R-J□□ | Phillips screwdriver | JIS#2 |
| XW2R-E□□ | Flat-blade screwdriver | Model XW4Z-00B Head of screwdriver Is 0.4 x 2.5mm max. |

Flat-blade screwdriver

| XW4Z-00B | |
|----------|--|



Bending Radius of Connecting Cables

• To prevent damaging the Connecting Cables, use the following minimum bending radii as guidelines.



| End of model number | Minimum bending radius |
|---------------------|------------------------|
| BF-L, EE-L, FF-L | 66 mm |
| A | 67.2 mm |
| EE | 83 mm |
| B, D, K, L, N | 88 mm |

For checking electrical continuity

• XW2R-E type: There is no elecrical continuity in the screw, Please confirm it at hole for confirming continuity or wiring part.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warrantv.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.
Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

2025.11

In the interest of product improvement, specifications are subject to change without notice.